

KENNETH COLE KC1315

Kenneth Cole Wrist Watch KC1315 User Manual

Model: KC1315

1. INTRODUCTION

This manual provides instructions for the proper use and care of your Kenneth Cole KC1315 Wrist Watch. This timepiece features a reliable quartz movement, a durable stainless steel case, and a comfortable rubber strap. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.



Image 1.1: Front view of the Kenneth Cole KC1315 watch. This image displays the watch resting on a black cushion, highlighting its black dial, silver-tone hands, hour markers, and three functional sub-dials, indicating its chronograph capabilities. The stainless steel case and textured rubber strap are also visible.

2. SETUP AND INITIAL OPERATION

2.1 Setting the Time

1. **Pull out the crown:** Gently pull the crown (the knob on the side of the watch case) to the second click position.
2. **Adjust the time:** Turn the crown clockwise or counter-clockwise to set the hour and minute hands to

the desired time.

3. **Push in the crown:** Once the time is set, push the crown back into its normal position.

2.2 Setting the Date

1. **Pull out the crown:** Gently pull the crown to the first click position.
2. **Adjust the date:** Turn the crown clockwise to set the date. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the date change mechanism.
3. **Push in the crown:** Once the date is set, push the crown back into its normal position.



Image 2.1: Side view of the watch, highlighting the crown and pushers. This image provides a clear view of the watch's right side, showing the main crown used for time and date adjustment, and the two pushers above and below it, which are typically used for chronograph functions.

3. OPERATING THE CHRONOGRAPH (STOPWATCH)

Your Kenneth Cole KC1315 watch features a chronograph function for measuring elapsed time. The sub-dials on the watch face are part of this function.

1. **Start:** Press the top pusher (A) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the top pusher (A) again to stop the chronograph. The elapsed time will be indicated by the chronograph hands on the sub-dials.
3. **Reset:** Press the bottom pusher (B) to reset the chronograph hands to their zero positions. This can only be done when the chronograph is stopped.

Note: Continuous use of the chronograph can reduce battery life.

4. MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch case and strap regularly with a soft, dry cloth. For the rubber strap, a damp cloth with mild soap can be used, followed by drying thoroughly.
- **Water Resistance:** This watch is water resistant up to 30 meters (3 ATM). It is suitable for splashes or brief immersion in water, but not for swimming, diving, or showering. Do not operate the crown or pushers when the watch is wet.
- **Temperature:** Avoid exposing your watch to extreme temperatures (hot or cold) or sudden temperature changes, as this can affect the movement and battery life.
- **Chemicals:** Keep the watch away from solvents, detergents, perfumes, and cosmetics, as these can damage the case, strap, or seals.
- **Battery Replacement:** The watch is powered by a quartz battery. When the watch stops or the second hand begins to skip, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

5. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---|--|---|
| Watch stops or runs intermittently. | Low battery. | Replace the battery. Consult a professional watch technician. |
| Time is incorrect. | Crown is not fully pushed in, or time was set incorrectly. | Ensure the crown is fully pushed in. Reset the time as per Section 2.1. |
| Date does not change at midnight. | Time is set to AM/PM incorrectly, or date was set during restricted hours. | Advance the time by 12 hours. Reset the date during non-restricted hours (e.g., 6 AM). |
| Chronograph hands do not reset to zero. | Chronograph was not stopped before resetting, or internal mechanism issue. | Ensure chronograph is stopped before pressing the reset pusher. If issue persists, seek professional service. |

6. SPECIFICATIONS

| | |
|--------------------------|--------------------------|
| Brand: | KENNETH COLE |
| Model: | KC1315 |
| Movement Type: | Quartz (Battery Powered) |
| Display Type: | Analog |
| Case Material: | Stainless Steel |
| Case Diameter: | 41 Millimetres |
| Case Thickness: | 11 Millimetres |
| Band Material: | Rubber |
| Band Colour: | Black |
| Dial Colour: | Black |
| Crystal Material: | Crystal |

Water Resistance**Depth:** 30 Metres (3 ATM)**Closure Type:** Buckle**Features:** Date display, Chronograph

7. WARRANTY INFORMATION

Kenneth Cole watches are manufactured to high-quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your original purchase or visit the official Kenneth Cole website. Keep your proof of purchase for any warranty claims.



Image 7.1: Watch presented in a box. This image shows the Kenneth Cole KC1315 watch nestled within a watch box, which is noted to be a 'Titan' brand box. This illustrates how the watch might be packaged or stored.

8. CUSTOMER SUPPORT

Should you require assistance, have questions about your watch, or need service, please contact Kenneth Cole customer support. Refer to the official brand website or your purchase documentation for contact details.

For more information, visit the official [KENNETH COLE Store](#).