

[Manuals.plus](#) /

› [Home Basics](#) /

› Home Basics 13-Liter Tin Bread Box (Model CS47395) Instruction Manual

Home Basics CS47395

Home Basics 13-Liter Tin Bread Box (Model CS47395) Instruction Manual

1. INTRODUCTION

Welcome to your new Home Basics 13-Liter Tin Bread Box. This bread box is designed to keep your baked goods fresh and organized. Made of durable tin, it offers a generous 13-liter capacity, suitable for various bread types, muffins, croissants, and other confections. Its simple, ivory design complements most kitchen decors.



Image 1: Front view of the Home Basics 13-Liter Tin Bread Box in Ivory.

2. SETUP

1. **Unpacking:** Carefully remove the bread box from its packaging.

2. **Initial Cleaning:** Before first use, wash the bread box and lid by hand with warm, soapy water. Rinse thoroughly and dry completely to prevent water spots or rust.
3. **Placement:** Place the bread box on a clean, dry, and stable surface in your kitchen or pantry. Avoid direct sunlight or areas with high humidity.



Image 2: The bread box with its lid open, showing the interior.

3. OPERATING INSTRUCTIONS

1. **Opening the Lid:** Gently lift the lid using the integrated handle.
2. **Storing Baked Goods:** Place bread, buns, muffins, or other baked items inside the box. The spacious interior can accommodate multiple loaves or a combination of items.
3. **Closing the Lid:** Ensure the lid is placed securely on top of the box. The tight-fitted lid helps to maintain freshness by limiting air exposure.



Image 3: The bread box shown as part of a collection of matching tin canisters.

4. MAINTENANCE

- **Cleaning:** Hand wash only. Do not place in a dishwasher. Use a soft cloth or sponge with mild soap and warm water.
- **Drying:** Dry immediately and thoroughly after washing to prevent water spots and potential rust.
- **Avoid Abrasives:** Do not use abrasive cleaners or scouring pads, as these can scratch the tin surface.
- **Regular Cleaning:** Clean regularly to remove crumbs and maintain hygiene.

5. TROUBLESHOOTING

- **Bread Staling or Molding Quickly:**
 - Ensure the lid is always closed tightly after use.
 - Avoid storing bread in plastic bags inside the bread box, as this can trap moisture and accelerate mold growth. For optimal air circulation, remove bread from its original plastic packaging before placing it in the bread box.
 - Check the humidity levels in your kitchen. High humidity can affect bread freshness.

- Consider the type of bread. Some artisan breads are best stored at room temperature in a bread box, while others (like sliced sandwich bread) might benefit from refrigeration if not consumed quickly.

- **Lid Not Sealing Tightly:**

- Inspect the edges of the lid and the box for any deformities or damage.
- Ensure no crumbs or debris are preventing a proper seal.

6. SPECIFICATIONS

Model Number	CS47395
Material	Tin (Metal)
Color	Ivory
Capacity	13 Liters
Product Dimensions	13.75" L x 7.85" W x 9.25" H
Item Weight	2.3 Pounds
Closure Type	Snap (Lid)
Care Instructions	Hand Wash Only (Not Dishwasher Safe, Not Microwaveable)
Special Feature	Portable



Image 4: Dimensions of the Home Basics 13-Liter Tin Bread Box.

7. WARRANTY AND SUPPORT

For product support or warranty inquiries, please contact Home Basics customer service. Refer to your purchase documentation for contact details.