

Jocca 5069

Jocca Cold Press Juicer Model 5069

Instruction Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Improper use can lead to injury or damage to the appliance.

- Always ensure the juicer is correctly assembled and all parts are securely locked before operation.
- Do not operate the appliance with a damaged cord or plug. If the appliance malfunctions or is damaged, contact authorized service personnel.
- Keep hands and utensils away from the feeding chute during operation to prevent injury. Use the food pusher provided.
- Unplug the juicer from the power outlet before cleaning, assembling, or disassembling parts.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not immerse the motor base in water or any other liquid.
- Ensure the appliance is placed on a stable, flat, and dry surface during use.

2. PRODUCT OVERVIEW

The Jocca Cold Press Juicer Model 5069 is designed for efficient extraction of juice from fruits and vegetables using a slow masticating process. This method helps preserve nutrients, vitamins, and natural flavors by minimizing oxidation and heat generation.



Image 1: The Jocca Cold Press Juicer Model 5069, showcasing its compact design and red finish.

Key Features:

- **Cold Press Technology:** Extracts juice slowly at less than 65 RPM to retain maximum nutritional value and reduce foam.
- **Separate Juice and Pulp Outlets:** Efficiently separates juice from pulp for clear, smooth beverages.
- **Dual 1-Liter Pitchers:** Includes two 1-liter pitchers for collecting juice and pulp separately.
- **Anti-Drip Stopper:** Prevents spills and keeps your countertop clean.
- **Easy Operation:** Features a simple 3-position switch (Stop, On, Reverse) for user convenience.
- **Easy to Clean:** All removable parts are dishwasher safe, and the reverse function aids in unclogging for quick cleaning.

3. SETUP AND ASSEMBLY

Before first use, wash all removable parts thoroughly with warm, soapy water. Rinse and dry completely.

Assembly Steps:

1. Place the motor base on a stable, flat surface.
2. Align the juicing bowl with the motor base and rotate it clockwise until it locks into place.
3. Insert the filter basket into the juicing bowl, ensuring it sits firmly.
4. Place the auger (screw) into the center of the filter basket.
5. Attach the feeding chute assembly onto the juicing bowl, aligning the marks and rotating until it clicks securely. The safety lock design ensures proper assembly.
6. Position the juice pitcher under the juice spout and the pulp pitcher under the pulp outlet.

4. OPERATING INSTRUCTIONS

Follow these steps for optimal juicing results.



Image 2: A user preparing fruit to be inserted into the juicer's feeding chute.

Preparation:

- Wash all fruits and vegetables thoroughly.
- Cut ingredients into pieces small enough to fit into the feeding chute. Remove large seeds, pits, and hard skins (e.g., pineapple, melon).

Juicing Process:

1. Ensure the anti-drip stopper is closed before starting.
2. Plug the appliance into a power outlet.
3. Turn the switch to the 'ON' position. The motor will start.
4. Gradually feed the prepared fruits and vegetables into the feeding chute. Use the food pusher to gently guide ingredients down. Do not force ingredients.
5. The juice will flow into the juice pitcher, and the pulp will be expelled into the pulp pitcher.
6. Once juicing is complete, turn the switch to the 'STOP' position and unplug the appliance.
7. Open the anti-drip stopper to release any remaining juice.



Image 3: The juicer in operation, showing juice flowing into one pitcher and pulp into another.

Reverse Function:

If ingredients become jammed or the juicer stops, switch to the 'REVERSE' position for a few seconds. This will help dislodge the blockage. Then, switch back to 'STOP' and then 'ON' to resume juicing. If the blockage persists, disassemble and clean the parts.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your juicer.

Cleaning Steps:

1. Always unplug the juicer before cleaning.
2. Disassemble all removable parts: feeding chute, auger, filter basket, juicing bowl, juice pitcher, and pulp pitcher.
3. Rinse all removable parts under running water to remove large pulp residues.
4. All removable parts are dishwasher safe. Alternatively, wash them by hand with warm, soapy water and a brush (especially for the filter screen) to ensure all pulp is removed.
5. Wipe the motor base with a damp cloth. Never immerse the motor base in water.
6. Dry all parts thoroughly before reassembling or storing.

Storage:

Store the assembled juicer in a dry, clean place away from direct sunlight and out of reach of children.

6. TROUBLESHOOTING

If you encounter issues with your juicer, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Juicer does not turn on.	Appliance not plugged in, or parts not assembled correctly.	Ensure the power cord is securely plugged in. Verify all parts (juicing bowl, feeding chute) are correctly aligned and locked into place. The safety mechanism prevents operation if not assembled properly.
Motor stops during operation or struggles.	Overloading with ingredients, or ingredients are jammed.	Turn the switch to 'REVERSE' for a few seconds, then back to 'STOP' and 'ON'. If the issue persists, turn off, unplug, disassemble, and clear any blockages. Cut ingredients into smaller pieces.
Excessive pulp in juice.	Filter screen is clogged or damaged.	Clean the filter screen thoroughly with the provided brush. Inspect the filter for any damage. If damaged, contact customer support for replacement options.

Problem	Possible Cause	Solution
Leaking from the juicer.	Parts not assembled correctly, or anti-drip stopper is open.	Ensure all parts are securely locked. Check that the anti-drip stopper is fully closed during operation.

If the problem persists after attempting these solutions, please contact Jocca customer support.

7. SPECIFICATIONS

Technical details for the Jocca Cold Press Juicer Model 5069.



Image 4: The Jocca Cold Press Juicer with approximate dimensions: 24cm width and 76cm height.

- **Model Number:** 5069
- **Power:** 150 Watts

- **Capacity (Juice Pitcher):** 1 Litre
- **Total Volume (Pitchers):** 2 Litres
- **Weight:** 3.5 Kilograms
- **Dimensions (Approximate):** 24 cm (Width) x 76 cm (Height)
- **Color:** Red
- **Blade Material:** Stainless Steel
- **Dishwasher Safe Parts:** Yes (removable parts only)
- **Power Source:** Electric Cable

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase. Jocca aims to provide reliable products and support.

- **Spare Parts:** Information regarding the availability of spare parts is currently not provided.
- **Customer Support:** For any questions, technical assistance, or warranty claims, please contact Jocca customer service through their official website or the retailer where the product was purchased.