

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Mainstays](#) /

› [Mainstays 5-Cup Coffee Maker Instruction Manual](#)

Mainstays 5-Cup

Mainstays 5-Cup Coffee Maker Instruction Manual

Model: 5-Cup

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the coffee maker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The carafe is designed for use with this appliance. It must never be used on a range top.
- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.

COMPONENTS

Familiarize yourself with the parts of your Mainstays 5-Cup Coffee Maker.



This image displays the Mainstays 5-Cup Coffee Maker. It features a black plastic body, a clear glass carafe with a black handle, and a red power switch located on the right side of the base. The water reservoir and filter basket are visible at the top.

1. Lid
2. Water Reservoir
3. Filter Basket (removable)
4. Glass Carafe with Handle
5. Warming Plate
6. Power Switch (with indicator light)
7. Power Cord and Plug

BEFORE FIRST USE

Before using your coffee maker for the first time, it is important to clean all removable parts and run a brewing cycle with water only.

1. Wash the carafe, lid, and removable filter basket in warm, soapy water. Rinse thoroughly and dry.
2. Place the filter basket into the coffee maker.
3. Fill the carafe with cold water up to the 5-cup mark and pour it into the water reservoir.
4. Place the carafe onto the warming plate.
5. Plug the coffee maker into a standard electrical outlet.
6. Press the power switch to turn the unit on. Allow the full cycle to complete.
7. Turn off the coffee maker and discard the water from the carafe.
8. Repeat steps 3-7 once more with fresh water. Your coffee maker is now ready for use.

SETUP

Proper placement and initial setup are crucial for optimal performance.

1. **Placement:** Place the coffee maker on a flat, stable, heat-resistant surface, away from the edge of

the counter. Ensure there is adequate ventilation around the unit.

- Power Connection:** Ensure the power switch is in the 'off' position before plugging the coffee maker into a 120V/60Hz electrical outlet.
- Cord Management:** Position the power cord to avoid tangling or contact with hot surfaces.

OPERATING INSTRUCTIONS

Follow these steps to brew coffee with your Mainstays 5-Cup Coffee Maker.

- Fill Water Reservoir:** Open the lid and fill the glass carafe with the desired amount of cold, fresh water (up to 5 cups). Pour the water into the water reservoir. Do not exceed the maximum fill line.
- Add Coffee Grounds:** Place the removable filter basket into its position. Insert a standard basket-style paper filter (not included) or the reusable filter (if included) into the filter basket. Add the desired amount of ground coffee. A general guideline is one tablespoon of ground coffee per cup, but adjust to personal preference.
- Close Lid:** Close the lid securely.
- Position Carafe:** Place the empty glass carafe with its lid onto the warming plate. Ensure it is centered to prevent overflow.
- Start Brewing:** Plug the coffee maker into an electrical outlet. Press the power switch to the 'on' position. The indicator light will illuminate, signifying that the brewing process has begun.
- Brewing Complete:** The coffee maker will automatically stop brewing once the water reservoir is empty. The warming plate will remain on to keep the coffee hot.
- Serve:** Carefully remove the carafe from the warming plate to pour and serve coffee.
- Turn Off:** After serving, press the power switch to the 'off' position and unplug the coffee maker from the outlet.

Note: The warming plate will keep coffee hot for a period after brewing. For best flavor, consume coffee shortly after brewing. Do not leave coffee on the warming plate for extended periods.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

Daily Cleaning

- Always unplug the coffee maker and allow it to cool completely before cleaning.
- Remove the filter basket and discard any used coffee grounds and paper filter.
- Wash the carafe, carafe lid, and filter basket in warm, soapy water. Rinse thoroughly and dry. These parts are generally top-rack dishwasher safe, but hand washing is recommended for longevity.
- Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Do not immerse the main unit, cord, or plug in water or any other liquid.

Descaling (Mineral Deposit Removal)

Mineral deposits (calcium) can build up in your coffee maker over time, affecting its performance. Descaling your coffee maker every 2-3 months, or more frequently if you have hard water.

- Fill the carafe with one part white vinegar and two parts cold water.
- Pour the vinegar-water solution into the water reservoir.
- Place the empty carafe onto the warming plate.

4. Press the power switch to turn the unit on and allow half of the solution to brew through.
5. Turn off the coffee maker and let it stand for at least 15 minutes to allow the solution to work.
6. Turn the coffee maker back on and allow the remaining solution to brew through.
7. Discard the vinegar-water solution from the carafe.
8. Fill the water reservoir with fresh, cold water and run two full brewing cycles with water only to rinse out any remaining vinegar taste.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause and Solution
Coffee does not brew.	<ul style="list-style-type: none"> • Not plugged in: Ensure the coffee maker is securely plugged into a working electrical outlet. • Power switch off: Make sure the power switch is in the 'on' position. • No water in reservoir: Add water to the reservoir.
Coffee is too weak.	<ul style="list-style-type: none"> • Not enough coffee grounds: Increase the amount of coffee grounds used. • Coarse grind: Use a finer grind of coffee.
Coffee is too strong.	<ul style="list-style-type: none"> • Too many coffee grounds: Reduce the amount of coffee grounds used. • Fine grind: Use a coarser grind of coffee.
Water overflows from filter basket.	<ul style="list-style-type: none"> • Too much coffee grounds: Reduce the amount of coffee grounds. • Filter basket not seated correctly: Ensure the filter basket is properly inserted. • Clogged filter: Use a fresh paper filter or clean the reusable filter thoroughly. • Mineral buildup: Descaling the coffee maker as per the 'Descaling' instructions.
Coffee tastes bad.	<ul style="list-style-type: none"> • Dirty coffee maker: Clean the coffee maker and carafe thoroughly. • Mineral buildup: Descaling the coffee maker. • Stale coffee: Use fresh coffee grounds.

SPECIFICATIONS

Feature	Value
Brand	Mainstays

Feature	Value
Model Number	5-Cup
Capacity	5 Cups
Power	120V / 60Hz / 700W
Color	Black
Coffee Maker Type	Drip Coffee Machine
Operation Mode	Fully Automatic
Included Components	Filter
Item Weight	2.55 pounds
Package Dimensions	11 x 9.8 x 6.4 inches

WARRANTY AND SUPPORT

This product is covered by a limited warranty. For specific warranty details, please refer to the warranty card included with your purchase or contact Mainstays customer support.

If you require assistance or have questions not covered in this manual, please contact Mainstays customer service. Keep your purchase receipt for warranty claims.

Related Documents - 5-Cup

 <p>MAINSTAYS[®] ASSEMBLY AND CARE GUIDE MAINSTAYS FOREST HILLS 5 PIECE PATIO DINING SET TABLE</p> <p>Need Assistance? Contact our toll free Customer Service Hotline at 1-866-321-9950 Monday through Friday 7:30am until 3:30pm PST</p>	<p>Mainstays Forest Hills 5 Piece Patio Dining Set Table Assembly and Care Guide</p> <p>Official assembly and care guide for the Mainstays Forest Hills 5 Piece Patio Dining Set Table. Includes warranty information, safety instructions, parts list, assembly steps, and maintenance tips. Model numbers: MSS129900298050, MSS129900298094.</p>
 <p>MAINSTAYS[®] Microwave Oven</p> <p>EM720C2WT-PM</p> <p>Customer Assistance: 1-866-321-9950</p>	<p>Mainstays EM720C2WT-PM Microwave Oven User Manual and Safety Guide</p> <p>Comprehensive guide for the Mainstays EM720C2WT-PM microwave oven, covering safety precautions, specifications, installation, operation, troubleshooting, and warranty information.</p>



DO NOT RETURN TO RETAILER
IF YOU HAVE ANY QUESTIONS OR CONCERN
PLEASE VISIT OUR WEBSITE AT
www.yotrioink.com

OR CALL FREE AT
1-866-866-4197
MON-FRIDAY 9:00 AM TO 5:00 PM EASTERN STANDARD TIME
9:00 AM TO 6:00 PM EASTERN STANDARD TIME

YOTRIO CUSTOMER CARE

Customer Requirements
• Use of original Yotrio Standard
• Use of the designated
• Use of the correct name of your product and any corresponding

Mainstays Sand Dune Outdoor Chaise Lounge Assembly and Care Instructions

Assembly instructions, care guide, and limited warranty information for the Mainstays Sand Dune Outdoor Chaise Lounge (Stock# MSD128059664024). Includes details on parts, assembly steps, maintenance, and warranty coverage.



Mainstays 0.7 cu.ft. Microwave Oven User Manual

This user manual provides important safety instructions, installation guidelines, operating procedures, and maintenance tips for the Mainstays 0.7 cu.ft. Microwave Oven. It covers features like the control panel, cooking techniques, and troubleshooting.



DO NOT RETURN TO RETAILER
 IF YOU HAVE ANY QUESTIONS OR CONCERN
 PLEASE VISIT OUR WEBSITE AT
www.yotripoint.com

OR TOLL FREE AT:
1-866-365-4127

 CALL/FAX 8:30 AM TO 8:00 PM EASTERN STANDARD TIME
 8:00 PM EASTERN MARCH 20 THRU MAY

YOTRI CUSTOMER CARE
 Your tri-point
 If you have any questions or concerns
 about your Original YotriPoint
 card or the products it contains.

Mainstays Highland Knolls Padded Outdoor Sling Glider Assembly Instructions & Care

Detailed assembly instructions, care and maintenance guide, and warranty information for the Mainstays Highland Knolls Padded Outdoor Sling Glider (Model MSD128059664016).



[MAINSTAYS POWER ADJUSTABLE BED BASE User Manual and Safety Guide](#)

Official user manual and safety instructions for the MAINSTAYS POWER ADJUSTABLE BED BASE. Includes assembly, operation, remote syncing, and warranty information. Model numbers: MS19D4102223, MS19D4102225, MS19D4102227, MS19D4102229.