

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LanParte](#) /

› [LanParte Wireless LANC Remote Control \(LRC-02\) User Manual for Panasonic GH4, GH5](#)

## LanParte LRC-02

# LanParte Wireless LANC Remote Control (LRC-02) User Manual

For Panasonic GH4, GH5, and LANC Protocol Cameras

## 1. INTRODUCTION

---

The LanParte Wireless LANC Remote Control (Model LRC-02) provides comprehensive wireless control for Panasonic GH4, GH5, and other cameras utilizing the LANC protocol. This device allows users to remotely manage video recording, photo capture, and zoom functions, enhancing operational flexibility during shoots.

## 2. PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- Wireless Remote Transmitter
- Wireless Receiver
- 2.5mm to 2.5mm LANC Connection Cable
- Hot Shoe Adapter Screw
- Mini Screwdriver (for battery compartment)



Image: All components of the LanParte Wireless LANC Remote Control system, including the transmitter, receiver, cable, hot shoe adapter, and screwdriver.

### 3. PRODUCT OVERVIEW

---

#### 3.1. Transmitter

The transmitter features several buttons for controlling camera functions:

- **Photo Button:** Press to capture a still image.
- **W/T Buttons:** Control zoom functions (Wide and Telephoto) when using compatible power zoom lenses.
- **Cam Power Button:** Intended to power the camera on/off. Note: Functionality may vary by camera model.
- **START/STOP Button:** Initiates and terminates video recording.

#### 3.2. Receiver

The receiver connects to your camera and communicates wirelessly with the transmitter:

- **2.5mm LANC Port:** Connects to the camera's LANC input using the provided cable.
- **Indicator Light:** Provides status feedback (e.g., power, connection status).
- **Mounting Thread:** Allows attachment to a hot shoe or other mounting points using the adapter screw.



Image: The LanParte wireless remote transmitter and receiver, connected by the 2.5mm LANC cable.

## 4. SETUP

---

### 4.1. Transmitter Battery Installation

1. Locate the battery compartment on the back of the transmitter.
2. Use the provided mini screwdriver to open the battery compartment cover.
3. Insert a CR2032 coin cell battery, ensuring correct polarity (+/-).
4. Securely close the battery compartment cover.

### 4.2. Receiver Connection and Mounting

1. Connect one end of the 2.5mm LANC connection cable to the receiver's 2.5mm port.
2. Connect the other end of the cable to the LANC input port on your Panasonic GH4, GH5, or compatible camera.
3. Attach the hot shoe adapter screw to the receiver's mounting thread.
4. Slide the receiver onto your camera's hot shoe and tighten the adapter screw to secure it.



Image: A user holding the LanParte remote transmitter, with the receiver connected to a Panasonic GH5 camera via cable.

## 5. OPERATING INSTRUCTIONS

---

Ensure both the camera and the remote control system are powered on before operation.

1. **Power On/Off Camera:** Press the **Cam Power** button on the transmitter. Note that this function's compatibility can vary by camera model.
2. **Start/Stop Video Recording:** Press the **START/STOP** button to begin recording. Press it again to stop recording.
3. **Capture Photo:** Press the **Photo** button to take a still photograph.
4. **Zoom Control:** If using a power zoom lens, press the **W** button to zoom out (Wide) and the **T** button to zoom in (Telephoto).

## 6. MAINTENANCE

---

- Keep the remote control and receiver clean and dry. Use a soft, dry cloth for cleaning.
- Avoid exposing the device to extreme temperatures, moisture, or direct sunlight.
- When not in use for extended periods, consider removing the battery from the transmitter to prevent leakage.
- Store the device in a protective case to prevent physical damage.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Remote not responding.	Low or dead transmitter battery. Receiver not powered or connected. Out of range.	Replace transmitter battery. Ensure receiver is properly connected to camera's LANC port. Move closer to the receiver.

Problem	Possible Cause	Solution
Cam Power button does not work.	Camera model does not support remote power control via LANC.	This is a camera-specific limitation. Manually power on/off the camera.
Zoom function not working.	Non-power zoom lens attached. Power zoom function disabled in camera settings.	Ensure a compatible power zoom lens is used. Check camera settings to enable power zoom control.
Recording/Photo not activating.	Incorrect camera mode. Loose cable connection.	Set camera to appropriate video or photo mode. Verify the LANC cable is securely connected to both receiver and camera.

## 8. SPECIFICATIONS

---

- **Model Number:** LRC-02
- **Brand:** LanParte
- **Item Weight:** 8.3 ounces
- **Connectivity Technology:** Wireless (Infrared, based on product description)
- **Compatible Devices:** Cameras (specifically Panasonic GH4, GH5, and LANC protocol cameras)
- **Max Number of Supported Devices:** 1 (one receiver per camera)
- **Special Feature:** Ergonomic design

## 9. WARRANTY AND SUPPORT

---

LanParte products are typically covered by a limited manufacturer's warranty. For specific warranty details, duration, and terms, please refer to the documentation provided with your purchase or visit the official LanParte website.

For technical support, troubleshooting assistance, or service inquiries, please contact LanParte customer support directly through their official channels. Provide your product model number (LRC-02) and purchase information when seeking support.