

[manuals.plus](#) /› [Smartby](#) /› [Smartby RMT-JR01 Replacement Remote Control User Manual for JVC TVs](#)

Smartby RMT-JR01

Smartby RMT-JR01 Replacement Remote Control User Manual for JVC TVs

Model: RMT-JR01

INTRODUCTION

This user manual provides comprehensive instructions for the Smartby RMT-JR01 Replacement Remote Control. It is designed to function as a direct replacement for original JVC TV remotes, offering seamless operation without the need for complex programming. Please read this manual carefully to ensure proper use and to maximize your experience with the remote control.

PRODUCT OVERVIEW

The Smartby RMT-JR01 remote control is designed for ease of use, featuring a standard layout for common television functions. Below are images illustrating the remote's design and key areas.





Figure 1: Front view of the Smarty RMT-JR01 remote control. This image displays the full button layout, including power, input, menu, navigation, volume, channel, and numeric keys.



Figure 2: Angled view of the Smartby RMT-JR01 remote control. This perspective shows the remote's contours and button placement from a side angle, emphasizing its ergonomic shape.



Figure 3: Back view of the Smartby RMT-JR01 remote control. This image clearly shows the battery compartment cover, indicating where batteries should be inserted.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control (refer to Figure 3).
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two new AAA batteries (not included) according to the polarity indicators (+ and -) inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

Note: This remote control does not require any programming. Once batteries are installed, it is ready for immediate use with compatible JVC TV models.

OPERATING INSTRUCTIONS

The Smartby RMT-JR01 remote control provides direct access to all standard functions of your compatible JVC TV.

- **Power Button:** The red button located at the top right, used to turn the TV on or off.
- **Input Button:** Cycles through available video input sources (HDMI, Video, Component, PC, TV, Music).

- **Menu Button:** Accesses the TV's main menu for settings adjustments.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate through menus and confirm selections.
- **Volume Up/Down (VOL +/-):** Adjusts the audio volume level.
- **Channel Up/Down (CH +/-):** Changes the television channel.
- **Mute Button:** Silences or restores the TV audio.
- **Numeric Keypad (0-9):** Directly enters channel numbers.
- **Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback if supported by the TV.
- **Sleep Button:** Activates the TV's sleep timer function.
- **Info Button:** Displays program information.
- **Return Button:** Returns to the previous menu or screen.

COMPATIBILITY

The Smartby RMT-JR01 replacement remote control is compatible with a wide range of JVC TV models. Please verify your TV model against the list below:

- BC50R
- EM28T
- EM32T
- EM32TS
- EM37T
- EM39T
- JLC32BC3000
- JLC32BC3002
- JLC37BC3000
- JLC37BC3002
- JLC42BC3000
- JLC42BC3002
- JLC47BC3000
- JLC47BC3002
- JLE32BC3001
- JLE37BC3001
- JLE42BC3001
- JLE42BC3500
- JLE47BC3001
- JLE47BC3500

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops

working. Always replace both batteries at the same time with new ones.

- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly according to polarity (+/-).
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective range of the TV's infrared sensor.
- **Specific Buttons Not Working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.
 - If cleaning and battery replacement do not resolve the issue, the button may be physically damaged.
- **TV Not Responding to Any Remote:**
 - Ensure the TV is powered on and not in standby mode.
 - Check the TV's own power button to confirm it's functioning.
 - Verify that your TV model is listed in the compatibility section of this manual.

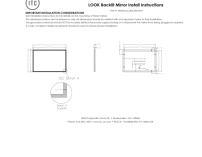
SPECIFICATIONS

Brand	Smartby
Model Number	RMT-JR01
Compatible Devices	JVC Televisions (specific models listed in Compatibility section)
Power Source	2 x AAA Batteries (not included)
Color	Black, Grey
Special Feature	Ergonomic Design
Item Weight	2.89 ounces (approx. 82 grams)
Package Dimensions	8.5 x 2.09 x 1.1 inches (approx. 21.6 x 5.3 x 2.8 cm)

WARRANTY AND SUPPORT

This Smartby RMT-JR01 replacement remote control comes with a 30-day hassle-free return policy. For any issues or support inquiries, please refer to your purchase platform or contact the seller directly.

Related Documents - RMT-JR01

	<p>JR01 Wireless Headphones User Manual and Operating Instructions</p> <p>Comprehensive guide for the JR01 wireless headphones, covering setup, operation, touch controls, troubleshooting, and safety precautions. Features include Bluetooth 5.3, 5-hour battery life, and a portable charging case.</p>
	<p>Sony DVP-S9000ES SACD/DVD Player Service Manual - Technical Specifications & Repair Guide</p> <p>Comprehensive service manual for the Sony DVP-S9000ES SACD/DVD player, detailing technical specifications, block diagrams, schematic diagrams, disassembly procedures, and repair information.</p>
	<p>S&P RMB and RMT Auto-Transformer Speed Controllers User Manual</p> <p>This manual provides instructions for the S&P RMB and RMT series auto-transformer speed controllers, covering installation, wiring, technical specifications, and safety precautions. It details the features of both single-phase (RMB) and three-phase (RMT) models, including their operating principles, maximum permissible currents, and maintenance guidelines.</p>
	<p>LOOK Backlit Mirror Installation Guide & Dimensions ITC</p> <p>Detailed installation guide and dimensional specifications for ITC LOOK Backlit Mirrors. Covers important considerations, mounting details, and various model sizes for safe and proper installation.</p>
	<p>Winners Industry LED Driver Safety and Compliance Information</p> <p>This document provides essential safety instructions, FCC and IC compliance statements, and RF exposure guidelines for Winners Industry LED drivers, including model numbers like 241838-RMT.</p>
	<p>Sony BDP-BX1/S350 Service Manual</p> <p>Detailed service manual for Sony BDP-BX1 and BDP-S350 Blu-ray Disc Players, covering specifications, disassembly, schematics, troubleshooting, and repair procedures.</p>