

Manuals.plus /

- › Urmet /
- › Urmet 1134/55 Additional Utopia Button User Manual

Urmet 1134/55

Urmet 1134/55 Additional Utopia Button User Manual

MODEL: 1134/55 | BRAND: URMET

1. Product Overview

The Urmet 1134/55 is an additional button designed for use with pre-arranged Utopia cytophone systems. This product provides an extra functional button, enhancing the capabilities of your existing intercom setup. It is supplied as a set of adhesive buttons, ensuring easy and secure attachment.

This additional button is specifically engineered to integrate seamlessly with Urmet Utopia intercom systems, offering reliable performance and extended functionality.



Figure 1: Urmet 1134/55 Additional Button. This image shows the Urmet 1134/55 additional button, featuring its compact black housing with two screw terminals and a clear protective cover. The design indicates a simple, robust component for electrical integration.

2. Setup and Installation

The Urmet 1134/55 additional button is designed for straightforward installation as an accessory to your Urmet Utopia cytophone system. Ensure the cytophone system is powered off before beginning installation.

1. **Identify Connection Points:** Locate the designated connection terminals on your Utopia cytophone unit for additional button integration. Refer to your cytophone's main manual for specific wiring diagrams.
2. **Prepare Wiring:** Connect the appropriate wires from the cytophone to the screw terminals on the Urmet 1134/55 button. Ensure polarity is correct if specified by your cytophone's manual.
3. **Secure Connection:** Tighten the screws on the terminals to ensure a secure electrical connection.
4. **Position the Button:** The button comes with adhesive backing. Choose a clean, dry, and flat surface near your cytophone for optimal placement. Remove the protective film from the adhesive and firmly press the button into place.
5. **Test Functionality:** Once installed, restore power to your Utopia cytophone system and test the functionality of the newly installed button.

For complex installations or if you are unsure about wiring, it is recommended to consult a qualified electrician or an Urmet certified technician.

3. Operating Instructions

The Urmet 1134/55 additional button functions as an extension of your Utopia cytophone system. Its specific operation depends on how it has been configured within your intercom setup.

- **Basic Function:** Typically, this button is used to trigger a specific action on the intercom system, such as opening a door, activating an auxiliary device, or initiating a specific call function.
- **Activation:** To activate the function, simply press the button firmly.
- **Feedback:** Depending on your cytophone model and configuration, you may receive audible or visual feedback indicating the successful activation of the button's assigned function.

Refer to your main Utopia cytophone manual for details on how this additional button can be programmed or what functions it is pre-assigned to control.

4. Maintenance

The Urmet 1134/55 additional button requires minimal maintenance to ensure its longevity and proper operation.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the button. For stubborn dirt, a slightly damp cloth with mild soap can be used, but ensure no liquid enters the internal components. Do not use abrasive cleaners or solvents.
- **Connection Check:** Periodically inspect the wiring connections to ensure they remain secure. If the button is not responding, check for loose wires.
- **Adhesion:** If the button's adhesive begins to weaken over time, you may need to re-secure it using appropriate adhesive materials suitable for electronics.

Avoid exposing the button to extreme temperatures, direct sunlight for prolonged periods, or excessive moisture, as these can affect its performance and lifespan.

5. Troubleshooting

If you encounter issues with your Urmet 1134/55 additional button, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Button does not respond.	Loose wiring connection. Incorrect wiring. Cytophone system is off or malfunctioning.	Check and secure all wiring connections. Verify wiring against your cytophone's manual. Ensure the cytophone system is powered on and functioning correctly.
Button is loose or detached.	Adhesive has worn out. Improper initial adhesion.	Re-secure the button using a suitable strong adhesive. Ensure the surface is clean and dry before re-applying.
Intermittent function.	Poor connection. Environmental factors (e.g., moisture).	Inspect wiring for corrosion or damage. Ensure the button is in a dry environment.

If the problem persists after attempting these solutions, contact Urmet customer support or a qualified technician.

6. Specifications

Attribute	Value
Brand	Urmet
Model Number	1134/55
Manufacturer	URMET DOMUS
ASIN	B0762K89TX
Compatibility	Utopia Cytophone Systems
Spare Parts Availability	Information not available
Software Updates Guaranteed Until	Information not available
Product Discontinued by Manufacturer	No

7. Warranty and Support

This product is typically covered by a return policy that allows for refund or replacement within 30 days of purchase. Specific warranty terms may vary depending on the retailer and region.

For product support, technical assistance, or warranty claims, please contact the seller from whom you purchased the Urmet 1134/55 additional button. The seller for this product was ELETTROMEGA.

It is recommended to retain your proof of purchase for any warranty or support inquiries.

