

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tekswamp](#) /

› [Tekswamp Replacement Remote Control for Aiwa RC-T501 User Manual](#)

Tekswamp RC-T501

Tekswamp Replacement Remote Control for Aiwa RC-T501 User Manual

INTRODUCTION

This manual provides instructions for the Tekswamp Replacement Remote Control, designed for use with Aiwa RC-T501 and 85NF5633010 compatible devices. This remote offers most of the original commands for your device without requiring additional programming. Please read this manual carefully to ensure proper operation and longevity of your remote control.



SETUP

Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 2: Battery installation in the remote control

Compatibility

This remote control is designed to be compatible with Aiwa RC-T501 and 85NF5633010 models. No additional programming or setup is required. Simply install the batteries, and the remote is ready for use with your compatible device.

OPERATING INSTRUCTIONS



Figure 3: Remote Control Button Layout

Basic Functions

The remote control provides access to most of the original commands for your device. Key functions include:

- **Power On/Off:** Use the **Power** button (red button) to turn your device on or off.
- **Menu Navigation:** The directional arrow buttons (Up, Down, Left, Right) and the **OK** button in the center allow you to navigate through menus and confirm selections.
- **Input Signal Selection:** The **SRC** (Source) button allows you to cycle through available input sources on your device.
- **Volume Control:** Use the **V+** and **V-** buttons to adjust the volume.
- **Channel/Track Control:** Use the **CH+** and **CH-** buttons (if applicable) to change channels or tracks.

Indicator Light

An ON indicator light illuminates after any active button on the remote has been pressed. This indicates that the remote is functioning correctly and sending an infrared (IR) signal to your device. If the indicator light does not illuminate, check the batteries.

Specific Functions and Limitations

While this remote provides most original commands, some specific functions may not work properly with all devices. These can include, but are not limited to, page flip, keystone correction, video adjustment, and certain numerical inputs. This remote does not include a laser pointer function.

MAINTENANCE

Cleaning

To maintain the remote control's appearance and functionality:

- Wipe the remote with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

Battery Replacement

Replace the batteries when the remote's performance degrades or the indicator light fails to illuminate consistently. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

If you experience issues with your remote control, refer to the following table:

Problem	Solution
Remote control does not respond.	<ul style="list-style-type: none">• Ensure the remote has fresh AAA batteries installed correctly.• Check for any obstructions between the remote and your device's IR receiver.• Verify that your device is powered on and functioning correctly.
Indicator light does not illuminate.	<ul style="list-style-type: none">• Replace the batteries with new ones.• Ensure batteries are inserted with correct polarity.
Some specific functions do not work.	<ul style="list-style-type: none">• This remote is designed to provide most, but not all, original functions. Refer to the "Specific Functions and Limitations" section.• Confirm the function is supported by your specific device model.

SPECIFICATIONS

Feature	Detail
Product Dimensions	1.5 x 0.8 x 5.5 inches
Item Weight	2 ounces
Batteries Required	2 AAA batteries (not included)
Compatibility	Aiwa RC-T501, 85NF5633010

Feature	Detail
Color	Black

WARRANTY INFORMATION

Specific warranty details for this Tekswamp Replacement Remote Control are not provided in this manual. For information regarding warranty coverage, please refer to the product packaging or contact the seller directly.

CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please contact the seller or manufacturer for support. Refer to your purchase documentation for contact information.