

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Moulinex](#) /

> [Moulinex Right Handle for Cuisine Companion iCompanion HF800 HF900 Food Processor - Instruction Manual](#)

### Moulinex MS-0A19393

# Moulinex Right Handle for Cuisine Companion iCompanion HF800 HF900 Food Processor - Instruction Manual

## INTRODUCTION

---

This instruction manual provides essential information for the safe and correct installation, operation, and maintenance of your Moulinex Right Handle (Model MS-0A19393) for Cuisine Companion iCompanion HF800 and HF900 food processors. Please read this manual thoroughly before attempting any installation or use to ensure proper function and longevity of the part.

## IMPORTANT SAFETY INSTRUCTIONS

---

### Always observe the following safety precautions:

- Ensure the food processor is unplugged from the power outlet before installing or removing the handle.
- Handle the part carefully to avoid damage or injury.
- Do not attempt to modify the handle or use it for purposes other than its intended design.
- Keep out of reach of children.
- If the handle appears damaged, do not install it. Contact customer support.

## PACKAGE CONTENTS

---

Verify that all items are present in the package:

- 1 x Moulinex Right Handle (MS-0A19393)

If any items are missing or damaged, please contact your retailer or Moulinex customer service.

## INSTALLATION GUIDE

1. **Preparation:** Ensure your Moulinex Cuisine Companion iCompanion (HF800 or HF900) food processor is turned off and unplugged from the main power supply.
2. **Remove Old Handle (if applicable):** If replacing an existing handle, carefully locate the attachment points. The handle is typically secured by a locking mechanism or screws. Refer to your food processor's main instruction manual for specific removal procedures.
3. **Align New Handle:** Position the new Moulinex Right Handle (MS-0A19393) with the corresponding attachment points on the food processor bowl or main unit. Ensure the locking rod (tige verrou) aligns correctly.
4. **Secure the Handle:** Gently push the handle into place until it clicks or locks securely. If screws were involved in the removal, re-insert and tighten them. Do not overtighten.
5. **Verify Security:** After installation, gently tug on the handle to ensure it is firmly attached and does not wobble.
6. **Reconnect Power:** Once the handle is securely installed, you may plug the food processor back into the power outlet.



*Image showing the Moulinex Right Handle, a replacement part for Cuisine Companion iCompanion HF800 and HF900 food processors. The handle is black and designed for ergonomic grip.*

## OPERATING THE HANDLE

---

The right handle is an integral part of your Moulinex Cuisine Companion iCompanion food processor, designed for safe and ergonomic handling of the bowl. Its primary function is to provide a secure grip and to facilitate the locking and unlocking of the bowl onto the main unit.

- **Attaching the Bowl:** Hold the bowl by the handle and align it with the base of the food processor. Rotate the bowl clockwise until it locks securely into place. The handle's locking mechanism (tige verrou) ensures proper engagement.
- **Removing the Bowl:** To remove the bowl, ensure the appliance is off. Grip the handle firmly and rotate the bowl counter-clockwise until it disengages from the base. Lift the bowl off the unit.
- **Safe Handling:** Always use the handle when lifting, carrying, or positioning the food processor bowl, especially when it contains ingredients.

## MAINTENANCE AND CARE

---

- **Cleaning:** Clean the handle with a damp cloth and mild detergent. Rinse thoroughly and dry immediately. Do not use abrasive cleaners or harsh chemicals.
- **Dishwasher Safety:** The handle is **not** dishwasher safe. Hand wash only.
- **Storage:** Store the food processor with the handle attached in a clean, dry place.
- **Inspection:** Periodically inspect the handle for any signs of wear, cracks, or damage. If damage is observed, discontinue use and replace the handle.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Handle feels loose after installation.	Not properly secured or locking mechanism not engaged.	Ensure the handle is fully pushed into place and the locking rod is engaged. If screws are present, tighten them appropriately. Refer to the "Installation Guide" section.
Bowl does not lock onto the base with the new handle.	Incorrect alignment or issue with the locking rod.	Verify the handle is correctly installed. Ensure the bowl is aligned properly with the base before rotating to lock. Check for any obstructions.
Handle is cracked or broken.	Physical damage or wear.	Discontinue use immediately. The handle is a safety component; a damaged handle must be replaced. Contact Moulinex customer support for a replacement.

If you encounter issues not listed here, or if the suggested solutions do not resolve the problem, please contact Moulinex customer support.

## SPECIFICATIONS

---

Feature	Detail
---------	--------

Feature	Detail
Model Number	MS-0A19393
Brand	Moulinex
Compatibility	Moulinex Cuisine Companion iCompanion HF800, HF900 Food Processors
Material	Plastic
Special Feature	Portable (as a replacement part)
Dishwasher Safe	No (Hand wash recommended)

## WARRANTY INFORMATION

---

This Moulinex replacement part is covered by a limited warranty against manufacturing defects. The specific terms and duration of the warranty may vary by region and retailer. Please retain your proof of purchase. For detailed warranty information, refer to the warranty card included with your original food processor or visit the official Moulinex website.

## CUSTOMER SUPPORT

---

For further assistance, technical support, or to inquire about replacement parts, please contact Moulinex customer service:

- **Website:** [www.moulinex.com](http://www.moulinex.com) (Check for local country-specific sites)
- **Phone:** Refer to the contact information provided in your original food processor manual or on the Moulinex website for your region.

When contacting support, please have your product model number (MS-0A19393) and the model of your food processor (HF800 or HF900) ready.