

## Kichler 34886

# Kichler Edmund 5-Light Pendant Light Instruction Manual

Model: 34886

## 1. INTRODUCTION

---

Thank you for choosing the Kichler Edmund 5-Light Pendant Light. This manual provides essential instructions for the safe installation, operation, and maintenance of your new lighting fixture. Please read all instructions carefully before beginning installation and retain this manual for future reference.

### Important Safety Information:

- Always disconnect power at the main circuit breaker before installing, servicing, or cleaning this fixture.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- Wear safety glasses and appropriate protective gear during installation.
- Ensure the fixture is securely mounted to a structurally sound ceiling junction box.

## 2. PACKAGE CONTENTS

---

Verify that all components listed below are present and undamaged before proceeding with installation. If any parts are missing or damaged, do not attempt to install the fixture. Contact Kichler customer service for assistance.

- Fixture Assembly (Drum Shade, Light Cluster)
- Mounting Strap/Bracket
- Canopy
- Chain
- Wire Nuts
- Ground Screw
- Instruction Manual

**Note:** Five (5) E12 Candelabra Base T8 bulbs are required and sold separately.

## 3. TOOLS REQUIRED (NOT INCLUDED)

---

- Phillips Head Screwdriver
- Flathead Screwdriver
- Wire Strippers

- Electrical Tape
- Pliers
- Ladder
- Safety Glasses

## 4. SETUP AND INSTALLATION

---

Follow these steps carefully to install your Kichler Edmund Pendant Light. Professional installation by a qualified electrician is recommended.

1. **Turn Off Power:** Before starting, ensure the power supply to the junction box is turned off at the circuit breaker or fuse box.
2. **Unpack and Inspect:** Carefully remove all contents from the carton. Inspect the fixture and all components for any damage.
3. **Attach Mounting Strap:** Secure the mounting strap to the outlet box using the screws provided with the outlet box. The mounting strap should be oriented so that the threaded holes are facing away from the outlet box.
4. **Determine Chain Length:** Decide on the desired hanging height for your pendant light. Open one link of the chain and attach it to the loop on the fixture. Open another link and attach it to the canopy loop. Remove any excess chain links.
5. **Thread Wires:** Carefully thread the fixture wires through the chain, then through the canopy loop, and finally through the center hole of the canopy.
6. **Make Electrical Connections:**

Electrician installing a ceiling light fixture

*Image: A person connecting electrical wires during light fixture installation.*

- Connect the bare copper (ground) wire from the fixture to the bare copper (ground) wire from the outlet box using a wire nut. Secure the ground wire to the mounting strap with the green ground screw.
  - Connect the ribbed (neutral) wire from the fixture to the white (neutral) wire from the outlet box using a wire nut.
  - Connect the smooth (hot) wire from the fixture to the black (hot) wire from the outlet box using a wire nut.
  - Ensure all wire nuts are securely tightened and wrapped with electrical tape for added safety.
7. **Secure Canopy:** Carefully push the canopy up against the ceiling, covering the outlet box. Secure it in place using the collar ring or screws provided, ensuring a snug fit.



*Image: The top portion of the pendant light showing the chain connecting to the ceiling canopy.*

- 8. Install Bulbs:** Screw five (5) E12 Candelabra Base T8 bulbs (max 60 watts each, sold separately) into the sockets. Do not overtighten.



*Image: A detailed view of the pendant light's interior, showing the five bulb sockets within the mesh drum.*

9. **Restore Power:** Once installation is complete, restore power at the circuit breaker and test the fixture.

## 5. OPERATING INSTRUCTIONS

---

The Kichler Edmund Pendant Light is designed for simple operation.

- **Power On/Off:** Control the light using a standard wall switch connected to the fixture's circuit.
- **Dimmable Feature:** This fixture is dimmable. To utilize the dimming function, ensure you have installed dimmable E12 Candelabra Base T8 bulbs and a compatible dimmer switch (both sold separately). The control method for dimming is typically via the wall-mounted dimmer switch.
- **Bulb Type:** Use five (5) E12 Candelabra Base T8 bulbs, with a maximum wattage of 60 watts per bulb. The fixture is compatible with incandescent, LED, or halogen bulbs, provided they have the correct base and wattage.



*Image: The Kichler Edmund pendant light illuminating a kitchen space.*

## 6. MAINTENANCE

---

Regular maintenance will help preserve the appearance and functionality of your Kichler Edmund Pendant Light.

- **Cleaning:** To clean the fixture, ensure power is off and the fixture is cool. Wipe with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **Bulb Replacement:** Before replacing bulbs, turn off the power to the fixture at the circuit breaker and allow bulbs to cool completely. Carefully unscrew the old bulbs and screw in new E12 Candelabra Base T8 bulbs (max 60 watts).

## 7. TROUBLESHOOTING

If you experience issues with your pendant light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power to fixture; Loose wiring connection; Faulty bulb; Circuit breaker tripped.	Check power supply; Ensure all wire connections are secure; Replace bulb; Reset circuit breaker.
Light flickers	Loose bulb; Incompatible dimmer switch or bulb; Loose wiring connection.	Tighten bulb; Ensure dimmer and bulbs are compatible; Check and secure wiring connections.
Fixture is loose	Mounting hardware not securely tightened.	Turn off power, then carefully re-tighten mounting screws and canopy.

If the problem persists after attempting these solutions, please contact Kichler customer service or a qualified electrician.

## 8. SPECIFICATIONS

<b>Brand</b>	Kichler
<b>Model Name</b>	Edmund
<b>Model Number</b>	34886
<b>Dimensions (L x W x H)</b>	22" x 23" x 9"
<b>Material</b>	Alloy Steel, Metal Shade
<b>Finish</b>	Satin Black, Brushed Nickel
<b>Bulb Base</b>	E12 Candelabra Base
<b>Number of Lights</b>	5
<b>Max Wattage per Bulb</b>	60 Watts
<b>Voltage</b>	120 Volts
<b>Installation Type</b>	Pendant Light (Semi Flush Mount)
<b>Indoor/Outdoor Usage</b>	Indoor
<b>Special Feature</b>	Dimmable
<b>Certification</b>	ETL Listed
<b>Item Weight</b>	7.48 pounds

## 9. WARRANTY AND SUPPORT

---

**Warranty:** This Kichler product is covered by a 1-year limited warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, accident, misuse, abuse, or unauthorized modifications.

**Customer Support:** For technical assistance, replacement parts, or warranty claims, please contact Kichler customer service. Refer to the Kichler website or product packaging for the most current contact information.

*Kichler Lighting*

*Website:* [www.kichler.com](http://www.kichler.com)

*Phone:* (Refer to website for current contact numbers)