

[manuals.plus](#) /› [Magnavox](#) /› [Magnavox MM435M-BK Compact CD Shelf System User Manual](#)**Magnavox MM435M-BK**

# Magnavox MM435M-BK Compact CD Shelf System User Manual

Model: MM435M-BK

## INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your Magnavox MM435M-BK 3-Piece Compact CD Shelf System. This system features a CD player, digital FM stereo radio, Bluetooth wireless technology, and an AUX input port. Please read this manual thoroughly before using the product to ensure proper function and longevity.



Image: The Magnavox MM435M-BK Compact CD Shelf System, featuring the main unit and two detachable speakers, set up on a wooden surface.

## WHAT'S IN THE BOX

Upon unpacking, ensure all items listed below are present:

- Main Unit (CD Player, Radio, Bluetooth Receiver)
- Two (2) Satellite Speakers
- Remote Control (includes 1x CR2025 battery)
- AC Adapter
- User Manual (this document)

## PRODUCT FEATURES

The Magnavox MM435M-BK system offers versatile audio playback options and user-friendly features:

- **Multiple Audio Sources:** Play music from CD-R/CD-RW compatible CD player, FM radio, 3.5mm auxiliary port, or via Bluetooth wireless technology.
- **LCD Display:** A large LCD screen provides clear visibility of current settings and track information.

- **Balanced Sound:** Designed to deliver clear audio for music, audiobooks, and podcasts.
- **Compact Design:** Suitable for various environments such as offices, bedrooms, living areas, or kitchens.
- **Included Remote Control:** For convenient operation from a distance.



Image: The main unit of the Magnavox MM435M-BK system, with icons illustrating its CD-R/CD-W compatibility, FM Radio, 3.5mm aux port, and Bluetooth wireless technology.

## SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Positioning:** Place the main unit and speakers on a stable, flat surface. Ensure adequate ventilation around the unit.
3. **Connect Speakers:** Connect the speaker wires from the satellite speakers to the corresponding speaker output jacks on the main unit. Ensure correct polarity (+ to + and - to -).
4. **Connect Power:** Plug the AC adapter into the DC IN jack on the main unit, then plug the other end into a standard AC power outlet.
5. **FM Antenna:** Extend the FM wire antenna for optimal radio reception.

## OPERATING INSTRUCTIONS

## Power On/Off

Press the **POWER/FUNCTION** button on the main unit or the **POWER** button on the remote control to turn the system on or off.

## CD Player Operation

1. Press the **POWER/FUNCTION** button repeatedly until "CD" mode is selected on the LCD display.
2. Open the CD compartment cover by gently lifting it.
3. Place a CD (label side up) onto the spindle.
4. Close the CD compartment cover. The system will begin reading the disc.
5. Use the **PLAY/PAUSE**, **STOP**, **SKIP/SEARCH** buttons on the unit or remote to control playback.

## FM Radio Operation

1. Press the **POWER/FUNCTION** button repeatedly until "FM" mode is selected.
2. To manually tune, press the **TUNE +/-** buttons.
3. To auto-scan for stations, press and hold the **TUNE +/-** buttons. The radio will stop at the next strong station.
4. To save a preset station:
  - a. Tune to the desired station.
  - b. Press the **MEMORY** button. The preset number will flash.
  - c. Use the **MEM +/-** buttons to select the desired preset number.
  - d. Press **MEMORY** again to confirm.
5. To recall a preset station, use the **MEM +/-** buttons.

## Bluetooth Pairing

1. Press the **POWER/FUNCTION** button repeatedly until "BT" (Bluetooth) mode is selected. The unit will enter pairing mode, indicated by a flashing "BT" on the display.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for "MM435M" in your device's Bluetooth settings and select it to pair.
4. Once paired, the "BT" indicator will stop flashing and remain solid. You can now stream audio from your device to the shelf system.

# Laptop, tablet, smartphone streaming



**MAGNAVOX**

Image: The Magnavox MM435M-BK system demonstrating Bluetooth connectivity, showing a smartphone, tablet, and laptop wirelessly streaming audio.

## AUX Input

1. Connect an external audio device (e.g., MP3 player, older smartphone) to the 3.5mm AUX IN port on the front of the main unit using a 3.5mm audio cable (not included).
2. Press the **POWER/FUNCTION** button repeatedly until "AUX" mode is selected.
3. Play audio from your connected device. The sound will be output through the shelf system speakers.

# Large LCD Screen



Image: A detailed view of the Magnavox MM435M-BK's large LCD screen displaying "AM 12:00" and the control panel with various buttons and knobs.

## MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- CD Lens Care:** If the CD player experiences reading errors, use a commercially available CD lens cleaner disc to clean the laser lens.
- Storage:** When not in use for extended periods, unplug the unit from the power outlet and store it in a cool, dry place.
- Speaker Placement:** Ensure speakers are placed on stable surfaces to prevent accidental falls.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC adapter not properly connected.	Ensure the AC adapter is securely plugged into the unit and a working power outlet.

Problem	Possible Cause	Solution
No sound from speakers	Volume too low; speakers not connected; incorrect function mode.	Increase volume. Check speaker connections. Ensure correct function mode (CD, FM, BT, AUX).
CD does not play or skips	CD is dirty, scratched, or inserted incorrectly; CD lens is dirty.	Clean or replace CD. Ensure CD is inserted label side up. Use a CD lens cleaner.
Poor FM radio reception	FM antenna not extended or positioned correctly.	Fully extend and adjust the position of the FM wire antenna.
Bluetooth pairing fails	Bluetooth not enabled on device; device too far; incorrect pairing procedure.	Ensure Bluetooth is enabled on your device and it's within 30 feet of the system. Re-enter pairing mode on the system and try again.
Remote control not working	Battery depleted; obstruction between remote and unit; remote not pointed correctly.	Replace the CR2025 battery. Remove any obstructions. Point the remote directly at the main unit's sensor.

## SPECIFICATIONS

- Model Number:** MM435M-BK
- Product Dimensions:** 7.64 x 16 x 5.24 inches
- Item Weight:** 4.77 pounds
- Connectivity:** Bluetooth Wireless Technology, 3.5mm AUX Input
- Audio Sources:** CD Player (CD-R/CD-RW compatible), Digital FM Stereo Radio
- Output Power:** Total 4W RMS (2 x 2W)
- Display:** LCD Display
- Power Source:** AC Operation (AC adapter included)
- Remote Control Battery:** 1x CR2025 (included)



MAGNAVOX

Image: The Magnavox MM435M-BK system with its dimensions (10.35" height, 6.8" depth, 18.43" width) and the included remote control.

Note: The image indicates the remote uses 2x AAA batteries, while the product specifications state 1x CR2025 battery. Please refer to the packaging or the remote itself for the correct battery type.

## OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video showcasing the Magnavox MM435M 3-Piece Compact CD Shelf System, highlighting its features and design.

## WARRANTY AND SUPPORT

Magnavox products are designed for quality and performance. For warranty information or technical support, please refer to the warranty card included with your product or visit the official Magnavox website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, you may contact Magnavox customer service. Contact details are typically found on the product packaging or the brand's official support pages.

