

Hunter 59169

Hunter Sentinel 52-inch Indoor Ceiling Fan User Manual

MODEL: 59169

1. Introduction

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Hunter Sentinel 52-inch Indoor Ceiling Fan. Please read all instructions carefully before beginning installation and retain this manual for future reference.

The Sentinel ceiling fan is designed for indoor comfort, featuring energy-efficient LED lighting, a convenient handheld remote control, and a quiet WhisperWind motor. Its casual style with a fresh white finish integrates seamlessly into various modern living spaces, including bedrooms, living rooms, kitchens, and home offices.



Figure 1: Hunter Sentinel 52-inch Indoor Ceiling Fan with LED light.

2. Safety Information

WARNING: To reduce the risk of fire, electric shock, or personal injury, always turn off power at the main circuit breaker or fuse box before installation or servicing.

- All wiring must be in accordance with national and local electrical codes.
- Installation must be performed by a qualified electrician.
- Mount the fan directly to the building structure or to an outlet box marked "Acceptable for Fan Support of 35 lbs (15.9 kg) or less."
- Ensure fan blades are at least 7 feet (2.13 meters) from the floor.
- Do not operate the fan with damaged blades.
- Avoid placing objects in the path of the rotating blades.

3. Package Contents

Verify that all components listed below are included in your package:

- Motor assembly
- 3 Fan blades
- 2 LED bulbs
- Remote control
- Mounting hardware (screws, washers, wire nuts)
- Downrod (standard length)

4. Specifications

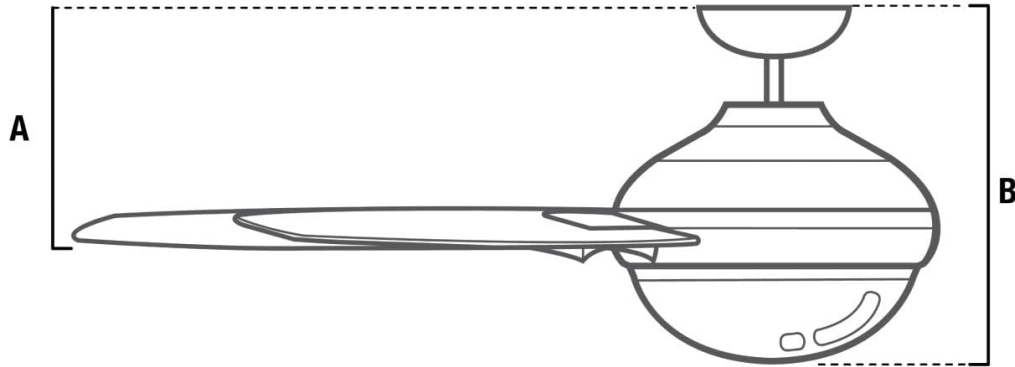
Feature	Detail
Brand	Hunter
Model Name	Sentinel
Model Number	59169
Color	White
Electric Fan Design	Ceiling Fan
Power Source	Corded Electric
Product Dimensions	52"D x 52"W x 8.56"H
Room Type	Bedroom, Living Room, Kitchen, Home Office
Special Features	LED Light, Quiet Operation, Remote Controlled
Wattage	26 watts
Number of Blades	3
Voltage	120 Volts
Item Weight	20.7 Pounds
Indoor/Outdoor Usage	Indoor
Motor Type	AC Motor WhisperWind™
Control Method	Remote
Type of Bulb	LED
Luminous Flux	800 Lumen

*Hunter***52**
INCHES

LARGE ROOM

59169

Fan Design May Vary

**Low Profile:**

2in downrod included

A: 7.56
B: 12.07**Standard:**

2in downrod included

A: 8.56
B: 13.07**Angled:**

36in downrod not included

A: 41.56
B: 46.07

Fan Dimensions

Figure 2: Fan Dimensions for various mounting types.

5. Setup and Installation

Before installation, ensure the power is disconnected at the circuit breaker. Follow the detailed instructions provided in the separate installation guide for mounting the fan, wiring, and attaching the blades. This fan is designed for downrod installation.

Key Installation Steps:

1. Secure the mounting bracket to the ceiling outlet box.
2. Assemble the downrod and hang the fan motor assembly.
3. Complete all electrical connections as per local codes.
4. Attach the fan blades to the motor housing.
5. Install the LED light kit and light cover.

For a visual overview of the Hunter Sentinel fan, including its design and features, please watch the video below:

Video 1: Hunter Sentinel Indoor Ceiling Fan Overview. This video provides a brief look at the fan's design and operation.

6. Operating Instructions

Your Hunter Sentinel ceiling fan comes with a handheld remote control for convenient operation of both the fan and the light.



Figure 3: Handheld Remote Control.

- **Fan Speed Control:** Use the numbered buttons (1, 2, 3) to select your desired fan speed. '1' is the lowest speed, and '3' is the highest. The '0' button turns the fan off.
- **Light Control:** Press the light bulb button to turn the LED light on or off. To dim the light, press and hold the light bulb button until the desired brightness is achieved. Release the button to set the brightness.
- **Reversible Motor:** The fan features a reversible WhisperWind motor for year-round comfort. In warm weather, operate the fan in a counter-clockwise direction to create a cooling breeze. In cool weather, operate the fan in a clockwise direction at a low speed to circulate warm air near the ceiling. The direction switch is typically located on the motor housing.

7. Maintenance

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Clean the fan blades and motor housing periodically with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.
- **Blade Tightness:** Check the blade attachment screws periodically to ensure they are secure. Loose blades can cause wobbling and noise.
- **Light Bulb Replacement:** The fan uses energy-efficient LED bulbs. If replacement is needed, ensure the power is off before changing bulbs.

8. Troubleshooting

If you experience issues with your fan, consult the following common solutions:

- **Fan Does Not Start:** Check that the circuit breaker is on and the wall switch (if applicable) is in the ON position. Ensure all wire connections are secure.
- **Light Does Not Work:** Verify the light bulb is securely screwed in and not burnt out. Check the wiring connections to the light kit.
- **Fan Wobbles:** Ensure all blade screws are tightened. Check that the mounting bracket is securely fastened to the ceiling. Verify the downrod is properly seated.
- **Noisy Operation:** Confirm all screws are tight. Check for any loose parts or obstructions. Ensure the fan is properly balanced.
- **Remote Not Responding:** Check the remote control battery. Ensure the remote receiver is properly installed and paired with the remote.

9. Warranty and Support

The Hunter Sentinel 52-inch Indoor Ceiling Fan comes with a **Lifetime warranty on the motor**. For specific warranty details, claims, or technical support, please refer to the official Hunter Fan Company website or contact their customer service directly.

For further assistance, please visit the [Hunter Store on Amazon](#).