

[Manuals.plus](#) /

› [Samsung Electronics](#) /

› Samsung Gear IconX (2018 Edition) SM-R140NZKAXAR Bluetooth Cord-free Fitness Earbuds User Manual

Samsung Electronics SM-R140NZKAXAR

Samsung Gear IconX (2018 Edition) SM-R140NZKAXAR User Manual

Bluetooth Cord-free Fitness Earbuds

INTRODUCTION

This manual provides comprehensive instructions for the Samsung Gear IconX (2018 Edition) SM-R140NZKAXAR Bluetooth Cord-free Fitness Earbuds. It covers product setup, operational procedures, maintenance guidelines, and troubleshooting tips to ensure optimal performance and user experience. Please read this manual thoroughly before using your device.

WHAT'S IN THE BOX

Verify that all the following items are included in your product package:

- Earbuds (Left and Right)
- Charging Case
- Wingtips (Sizes L, M, S)
- Earbud Tips (Sizes L, M, S)
- USB Connectors (Type B, Type C)
- USB Cable
- User Manual

SETUP

1. Charging the Earbuds and Charging Case

Before initial use, fully charge the earbuds and the charging case. Place the earbuds into the charging case. Connect the USB cable to the charging case's USB-C port and the other end to a power adapter or computer. The indicator lights on the case will show the charging status.



Image: Samsung Gear IconX earbuds placed inside their open charging case, ready for charging.



Image: Side view of the Samsung Gear IconX charging case, showing the USB-C charging port.

2. Fitting the Earbuds

Select the ear tips and wing tips that provide the most comfortable and secure fit for your ears. A proper fit is crucial for sound quality and fitness tracking accuracy. Gently insert the earbuds into your ears and rotate them until they feel snug.



Image: Top view of the Samsung Gear IconX earbuds, displaying the 'L' and 'R' markings for left and right, along with the attached ear tips.

3. Pairing with a Device

To pair the earbuds with your smartphone or other Bluetooth device:

1. Ensure the earbuds are charged and placed in the charging case.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device, enable Bluetooth and search for available devices.
4. Select 'Gear IconX (2018)' from the list of detected devices to complete the pairing process.

OPERATING THE EARBUDS

1. Touch Controls

The outer surface of each earbud is a touch-sensitive control panel:

- **Single Tap:** Play/Pause music, Answer/End call.
- **Double Tap:** Play next song, Answer second call/Switch between calls.
- **Triple Tap:** Play previous song.
- **Swipe Up/Down:** Adjust volume.
- **Touch and Hold:** Activate voice command (Bixby/Google Voice), Decline call.

2. Music Playback

The Gear IconX supports music playback via Bluetooth streaming from a connected device or directly from its 4GB internal storage. To transfer music to the earbuds, use the Samsung Gear application on your smartphone or connect the charging case to a computer.

3. Fitness Tracking

The earbuds can track your speed, distance, and calories burned during workouts. Real-time voice guidance provides updates on your performance. Sync data with the Samsung Health app for detailed analysis.



Image: A man running outdoors, wearing the Samsung Gear IconX earbuds, demonstrating their use during fitness activities.



Image: A woman skateboarding outdoors, wearing the Samsung Gear IconX earbuds, highlighting their suitability for active lifestyles.

4. Calls

Manage calls directly from the earbuds using the touch controls. The integrated microphone allows for clear communication.

5. Voice Commands

Activate Bixby or Google Voice by touching and holding the earbud to issue commands or ask questions.

6. Ambient Sound Mode

Enable Ambient Sound mode through the Samsung Gear app to hear your surroundings while listening to music, enhancing

situational awareness.

MAINTENANCE

1. Cleaning

Regularly clean the earbuds, ear tips, and charging contacts with a soft, dry cloth. Avoid using liquids or abrasive materials. Ensure no moisture enters the charging port or speaker mesh.

2. Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged. Store the case in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Gear IconX earbuds, refer to the following common solutions:

- **Earbuds not connecting:** Ensure Bluetooth is enabled on your device and the earbuds are charged. Try restarting both the earbuds (by placing them in the case and closing it, then reopening) and your device.
- **No sound or poor sound quality:** Check the earbud fit and ensure the volume is adjusted correctly on both the earbuds and your connected device. Clean any debris from the speaker mesh.
- **Charging issues:** Verify that the USB cable and power adapter are functioning correctly. Ensure the charging contacts on both the earbuds and the case are clean and free of obstruction.
- **Fitness tracking inaccuracies:** Ensure the earbuds are securely fitted and that your personal profile information (height, weight) in the Samsung Health app is accurate.

For further assistance, consult the Samsung support website or contact customer service.

SPECIFICATIONS

Model Name	SM-R140NZKAXAR
Connectivity	Bluetooth v4.2, Wireless
Battery Life	Up to 5 hours (Bluetooth streaming), Up to 7 hours (MP3 listening)
Internal Storage	4GB
Water Resistance	IPX2 Water Resistant
Control Method	Remote, Touch, Voice
Earbud Dimensions (W x H x D)	21.8 x 18.9 x 22.8 mm
Item Weight	11.8 ounces (total package)
Special Features	Active Noise Cancellation, Touch Control, Bixby Voice

WARRANTY AND SUPPORT

This Samsung Gear IconX (2018 Edition) product is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included in your product packaging or visit the official Samsung support website. For technical support, product registration, or service inquiries, please contact Samsung customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07644ZS1D>

More documents and user manuals: <https://manuals.plus/>