

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal Harmony Pro Frying Pan User Manual

Tefal B3640442

Tefal Harmony Pro Frying Pan User Manual

Model: B3640442

INTRODUCTION

The Tefal Harmony Pro Frypan is designed to make your cooking experience easier and more enjoyable. Featuring a high-performance Titanium Force coating for superior glide and durability, this compact frying pan is ideal for preparing delicious meals every day. This manual provides essential information for the safe and effective use and maintenance of your new frying pan.

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before first use and retain for future reference. Failure to follow these instructions may result in damage to the product or personal injury.

- Do not leave the pan unattended while cooking, especially when heating oil or fat.
- Always use oven mitts or pot holders when handling a hot pan.
- Ensure the handle is securely attached before each use. If the handle becomes loose, do not use the pan.
- Do not heat an empty pan for prolonged periods, as this can damage the non-stick coating.
- Keep out of reach of children.
- This pan is not oven safe. Do not place it in an oven.
- Avoid using metal utensils that can scratch the non-stick coating. Use wooden, silicone, or plastic utensils.

SETUP

Before First Use

1. Remove all packaging materials, labels, and tags from the pan.
2. Wash the pan thoroughly with warm soapy water using a soft sponge.
3. Rinse well and dry completely.
4. Condition the non-stick surface by wiping a small amount of cooking oil over the entire interior surface with a paper towel. Heat the pan over low heat for 30 seconds, then remove from heat and wipe off any excess oil. This step helps to maintain the non-stick properties.

OPERATING INSTRUCTIONS

Cooking with Your Pan

The Tefal Harmony Pro Frying Pan is compatible with gas cooktops. It features the exclusive Thermo-Spot Technology, which indicates the optimal temperature for cooking.

- **Heat Source:** This pan is designed for use on gas cooktops. Ensure the flame size does not extend beyond the base of the pan to prevent handle damage.
- **Thermo-Spot Technology:** The Thermo-Spot indicator in the center of the pan turns solid red when the pan has reached the ideal temperature for cooking, ensuring perfect searing and even cooking results.
- **Cooking Oil:** While the pan has a non-stick coating, a small amount of cooking oil or butter is recommended for best results and flavor.
- **Utensils:** Always use heat-resistant nylon, silicone, or wooden utensils to protect the non-stick surface.



Image: Tefal Harmony Pro Frying Pan. This image shows the black frying pan with its handle, and a label indicating 'Tefal Harmony Pro' and 'Titanium Force' coating. The pan's interior features the Thermo-Spot indicator, which changes color to signal optimal cooking temperature.

MAINTENANCE AND CLEANING

Proper care will extend the life of your Tefal Harmony Pro Frying Pan.

- **Cool Down:** Always allow the pan to cool completely before washing to prevent warping.
- **Hand Washing:** Hand washing is recommended to preserve the non-stick coating. Wash with warm soapy water and a soft sponge or cloth.
- **Stubborn Food:** For stubborn food residues, soak the pan in warm soapy water for a few minutes before cleaning.
- **Avoid Abrasives:** Do not use abrasive cleaners, steel wool, or scouring pads, as these can damage the non-stick surface.
- **Dishwasher Safety:** This pan is not dishwasher safe.

- **Storage:** Store the pan carefully to avoid scratching the non-stick surface. If stacking, place a soft cloth or pan protector between pans.

TROUBLESHOOTING

- **Food Sticking:** Ensure the pan is properly conditioned (see Setup section). Use a small amount of oil or fat. Avoid overheating the pan.
- **Handle Loosening:** If the handle becomes loose, discontinue use immediately. Contact customer support for assistance.
- **Thermo-Spot Not Changing Color:** Ensure the pan is placed on a heat source and allowed sufficient time to heat up. The indicator requires direct heat to function.

SPECIFICATIONS

Brand	Tefal
Model Number	B3640442
Diameter	24 Centimeters
Material	Aluminum
Coating	Titanium Force Non-stick Coating
Special Feature	Coated, Thermo-Spot Technology
Compatible Devices	Gas Cooktops
Oven Safe	No
Dishwasher Safe	No
Item Weight	500 g
Shape	Round

WARRANTY AND SUPPORT

Tefal products are manufactured to high quality standards. For information regarding warranty coverage or customer support, please refer to the warranty card included with your purchase or visit the official Tefal website. Keep your proof of purchase for any warranty claims.

For further assistance, you may visit the [Tefal Brand Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0764BHHKV>

More documents and user manuals: **<https://manuals.plus/>**