

FANMIS 1266

FANMIS Digital Multifunction Sports Watch Model 1266 User Manual

Model: 1266

1. PRODUCT OVERVIEW

This manual provides instructions for the FANMIS Digital Multifunction Sports Watch, Model 1266. This watch features a digital display, multiple functions including alarm, stopwatch, and calendar, and is designed for sports and daily use with 50-meter water resistance and an EL backlight for visibility in low light conditions.

The watch operates on a Quartz movement and is powered by one LR44 battery (included). Its durable silicone strap and polycarbonate case ensure longevity and comfort.



Image 1.1: Front view of the FANMIS Digital Watch Model 1266, displaying the time, day, and date. The watch features a black case with blue accents around the bezel and buttons. The digital display shows "WE 10-20" and "23:59".

2. BUTTON FUNCTIONS

The FANMIS Digital Watch Model 1266 has four primary buttons:

- **LIGHT (Top Left):** Activates the EL backlight for viewing in dark conditions.
- **MODE (Bottom Left):** Cycles through different modes: Time Display, Stopwatch, Alarm, and Time Setting.
- **START (Top Right):** Used to start/stop the stopwatch, adjust values during setting, or turn on/off alarm/chime.
- **RESET (Bottom Right):** Used to reset the stopwatch, select items during setting, or confirm settings.



Image 2.1: Close-up view of the FANMIS Digital Watch Model 1266, highlighting the labels for the "LIGHT", "MODE", "START", and "RESET" buttons around the watch face. The display shows "WE 10-20" and "20:59".

3. INITIAL SETUP: SETTING TIME AND DATE

1. From the normal time display mode, press the **MODE** button three times until the seconds begin to flash. This indicates you are in time setting mode.
2. Press the **RESET** button to cycle through the settings: seconds, hours, minutes, month, date, day of the week. The currently adjustable value will flash.
3. Use the **START** button to increase the flashing value. Hold **START** to rapidly advance the numbers.

4. Once all desired settings (seconds, hours, minutes, month, date, day) are adjusted, press the **MODE** button once to exit the setting mode and return to the normal time display.

The watch supports both 12-hour and 24-hour time formats. When setting the hour, pressing **START** will cycle between AM/PM (for 12-hour format) and the 24-hour format.

4. OPERATING INSTRUCTIONS

4.1. Using the EL Backlight

To illuminate the watch face in low light conditions, press the **LIGHT** button (top left). The backlight will activate for a few seconds.



Image 4.1: Comparison of the FANMIS Digital Watch Model 1266 in normal display mode (left) and EL light display mode (right). The EL light illuminates the digital display for improved visibility in the dark.

4.2. Stopwatch Function

1. From the normal time display, press the **MODE** button once to enter Stopwatch mode. The display will show "00:00:00".
2. Press the **START** button to begin timing.

3. Press the **START** button again to pause timing.
4. While paused, press the **RESET** button to clear the stopwatch to "00:00:00".
5. Press the **MODE** button to return to the normal time display.

4.3. Alarm Setting

1. From the normal time display, press the **MODE** button twice to enter Alarm mode. The display will show the alarm time.
2. Press the **RESET** button to select the hour or minute to set. The selected value will flash.
3. Use the **START** button to adjust the flashing hour or minute.
4. Press the **MODE** button to exit alarm setting mode.

4.4. Turning Alarm and Chime On/Off

- In Alarm mode (press **MODE** twice), press the **START** button to toggle the alarm on or off. An alarm icon will appear/disappear on the display.
- In normal time display mode, press and hold the **RESET** button, then press the **MODE** button to toggle the hourly chime on or off. A chime icon will appear/disappear.

5. MAINTENANCE AND CARE

- **Water Resistance:** This watch is rated for 50 meters (5 ATM) water resistance. It is suitable for daily use, hand washing, rain, and short periods of swimming. Do not press any buttons while the watch is submerged in water. Avoid hot water or steam, as this can compromise the seals.
- **Cleaning:** Clean the watch with a soft, damp cloth. Avoid harsh chemicals or abrasive materials.
- **Battery Replacement:** The watch uses one LR44 battery. When the display dims or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure water resistance is maintained.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) for extended periods.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch display is dim or blank.	Low battery.	Replace the LR44 battery.
Time is incorrect.	Time needs to be set.	Refer to Section 3: Initial Setup: Setting Time and Date.
Alarm does not sound.	Alarm is turned off or set incorrectly.	Ensure the alarm is activated (alarm icon visible) and the alarm time is set correctly (refer to Section 4.3 and 4.4).
Water inside the watch face (fogging).	Exposure to hot water/steam or buttons pressed underwater.	Stop using the watch immediately. Seek professional repair to prevent further damage. Avoid hot water and pressing buttons underwater.

7. SPECIFICATIONS

- **Model Number:** 1266
- **Brand:** FANMIS
- **Display Type:** Digital
- **Movement:** Quartz
- **Case Material:** Polycarbonate
- **Band Material:** Silicone / Rubber
- **Clasp Type:** Buckle
- **Water Resistance Depth:** 50 Meters (5 ATM)
- **Case Diameter:** 43 Millimeters
- **Case Thickness:** 15 Millimeters
- **Band Width:** 18 Millimeters
- **Power Source:** Battery Powered (1 x LR44, included)
- **Functions:** Time (12H/24H), Date, Day of Week, Alarm, Stopwatch, EL Backlight
- **Item Weight:** Approximately 2.4 ounces (0.15 Pounds)



Image 7.1: Diagram illustrating the maximum and minimum perimeter of the watch band. The maximum perimeter is 230mm, and the minimum perimeter is 160mm, indicating the adjustable range for wrist sizes.

8. OFFICIAL PRODUCT VIDEO

Watch this official product video for a visual guide on the FANMIS Digital Watch Model 1266.

Your browser does not support the video tag.

Video 8.1: An official video demonstrating the FANMIS Digital Watch Model 1266. This video showcases the watch from various angles, highlighting its design and features. The watch is black with a digital display, and the video provides a dynamic view of the product.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's policy or contact FANMIS customer service directly through their official channels. Keep your purchase receipt as proof of purchase.

For more products and information, visit the [FANMIS Store on Amazon](#).