

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Golden Technologies](#) /

› [Golden Technologies Buzzaround LT 3-Wheel Mobility Scooter \(Model GB107\) Instruction Manual](#)

Golden Technologies GB107

Golden Technologies Buzzaround LT 3-Wheel Mobility Scooter (Model GB107) Instruction Manual

Your guide to safe and efficient operation of your new mobility scooter.

INTRODUCTION

The Golden Technologies Buzzaround LT is a compact, lightweight, and portable 3-wheel travel mobility scooter designed for comfort and convenience. This manual provides essential information for the safe assembly, operation, and maintenance of your scooter. Please read it thoroughly before using your device.

Product Description

The all-new Buzzaround LT scooter is the smallest, lightest, and most portable Buzzaround scooter designed to provide comfortable and stylish mobility. This sporty model features a plush, stadium-style seat, a weight capacity of 300 lbs., and increased foot room. It includes a charger port in the delta tiller, a durable hard plastic basket, and painted color shrouds. Enjoy its tight indoor maneuverability and smooth outdoor use with 2.5 inches of ground clearance.

IMPORTANT SAFETY INFORMATION

WARNING: This product can expose you to chemicals including lead and lead components, which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to <http://www.p65warnings.ca.gov/>.

Always operate your mobility scooter with caution. Ensure you understand all controls and safety features before use. Consult a healthcare professional if you have any concerns about using a mobility device.

UNBOXING AND SETUP

Your Buzzaround LT scooter is designed for easy assembly. Follow these steps to get your scooter ready for use.

Components

- Main scooter base (front and rear sections)
- Seat assembly
- Tiller with controls
- Battery pack
- Front basket

- Charger
- Keys

Assembly Instructions

The scooter arrives partially assembled. The main body can be separated into two pieces for transport. Reassembly is straightforward.

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Connect Front and Rear Sections:** Align the front and rear sections of the scooter and secure them according to the locking mechanism.
3. **Install the Seat:** Place the seat post into the receiver on the scooter base. Ensure it clicks securely into place.
4. **Attach the Tiller:** Raise the tiller to the upright position and secure the locking mechanism.
5. **Install the Battery:** Locate the battery compartment, insert the battery pack, and ensure it is properly connected.
6. **Attach Baskets:** Secure the front basket to the tiller.



Figure 1: Disassembled components of the Buzzaround LT scooter, showing the main base, seat, and basket ready for assembly.

Your browser does not support the video tag.

Video 1: User Guide Video demonstrating the assembly and basic features of a mobility scooter. This video provides a general overview of the setup process.

Your browser does not support the video tag.

Video 2: Installation Instructions for a mobility scooter, showing step-by-step assembly of various components. This video is helpful for visual guidance during setup.

Your browser does not support the video tag.

Video 3: Customer Unboxing & Easy Setup Experience, providing a real-world demonstration of unpacking and preparing the scooter for first use.

OPERATING INSTRUCTIONS

Familiarize yourself with the controls and operating procedures before driving your scooter.

Controls Overview

The delta tiller provides easy-to-reach controls for speed, direction, and other functions.

- **Key Switch:** Turns the scooter on/off.
- **Speed Adjustment Dial:** Controls the maximum speed of the scooter.
- **Forward/Reverse Levers:** Push to move forward or backward.
- **Battery Gauge:** Displays the current battery charge level.
- **Horn Button:** Activates the scooter's horn.
- **Headlight Switch:** Turns the front light on/off.



Figure 2: Detailed view of the delta tiller controls, including the key, speed adjustment, and battery indicator.

Driving the Scooter

To drive the scooter, ensure the key is in the 'ON' position and the battery is charged. Use the speed adjustment dial to set your desired maximum speed. Gently press the forward or reverse levers to begin moving. Release the levers to engage the automatic electromagnetic brake.

Charging the Battery

To charge the battery, connect the charger to the charging port located on the tiller or directly to the battery pack if removed. Plug the charger into a standard wall outlet. The indicator light on the charger will show the charging status (typically red for charging, green for fully charged). A full charge can provide up to 7 miles of operating range.



Figure 3: Front view of the scooter, highlighting the charging port location on the tiller for convenient access.

FEATURES AND SPECIFICATIONS

Key Features

- 300 lb. weight capacity
- Up to 4 MPH Max Speed
- Up to 7 miles operating range
- Plush, stadium style seat
- Charger port in delta tiller
- Hard plastic rugged basket
- Painted color shrouds
- 2.5 inches of ground clearance

Detailed Specifications

Specification	Detail
Model Name	LT

Material	Plastic
Style	Modern
Color	Black
Brand	Golden Technologies
Manufacturer	GB107
Date First Available	October 3, 2017

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your Buzzaround LT scooter.

- **Battery Care:** Always charge the battery fully after each use. Avoid completely draining the battery. Store the scooter with a full charge if not used for extended periods.
- **Cleaning:** Wipe down the scooter regularly with a damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Tires:** Check tire pressure periodically and inflate to the recommended PSI as indicated on the tires.
- **Inspections:** Routinely check all nuts, bolts, and connections for tightness. Ensure all moving parts operate smoothly.
- **Storage:** Store the scooter in a dry, cool place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING GUIDE

This section addresses common issues you might encounter with your scooter.

- **Scooter Not Turning On:**
 - Check if the key is fully inserted and turned to the 'ON' position.
 - Ensure the battery is properly installed and charged.
 - Verify all electrical connections are secure.
- **Loss of Power/Reduced Range:**
 - The battery may need a full charge.
 - Battery performance can decrease over time; consider battery replacement if issues persist.
 - Check tire pressure; under-inflated tires can reduce range.
- **Unusual Noises:**
 - Inspect for loose components or obstructions around the wheels or motor.
 - If the noise persists, contact customer support.
- **Brakes Not Engaging Properly:**
 - Ensure the directional levers are fully released.
 - If the issue continues, do not use the scooter and contact customer support immediately.

WARRANTY AND SUPPORT

Golden Technologies stands behind the quality of its products. Your Buzzaround LT scooter comes with a limited

warranty covering manufacturing defects. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Golden Technologies website.

For technical assistance, troubleshooting, or to order replacement parts, please contact Golden Technologies customer support. Have your model number (GB107) and serial number ready when you call.

Customer Support: Please refer to the contact information provided in your scooter's documentation or on the manufacturer's website.