

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Meiko](#) /

› **Meiko 9207342 Touch Pad Instruction Manual for Point 2 Series Dishwashers**

Meiko 9207342

Meiko 9207342 Touch Pad Instruction Manual

Model: 9207342 | For Point 2 Series Dishwashers

1. PRODUCT OVERVIEW

The Meiko 9207342 Touch Pad is a genuine Original Equipment Manufacturer (OEM) replacement part designed for Meiko Point 2 Series commercial dishwashers. This touch pad serves as the primary interface for controlling various functions of the dishwasher, ensuring reliable operation and accurate temperature management for wash and rinse cycles.



Image 1: Meiko 9207342 Touch Pad. This image displays the Meiko 9207342 Touch Pad, featuring the Meiko logo, 'Point 2 Series' text, and control buttons for Wash Tank Temp, Final Rinse Temp, Start, and Stop, along with indicator lights I, II,

2. WHAT'S IN THE Box

Your package should contain the following item:

- One (1) Meiko 9207342 Touch Pad

3. SETUP AND INSTALLATION

This touch pad is a replacement component for commercial warewashing equipment. Installation should only be performed by a qualified service technician or authorized personnel familiar with Meiko equipment and electrical systems. Improper installation can lead to equipment damage, personal injury, or void the product warranty.

General Installation Guidelines (for qualified personnel):

1. **Safety First:** Ensure the dishwasher is completely disconnected from all power sources before beginning any installation or service work.
2. **Access:** Carefully access the control panel area where the existing touch pad is located.
3. **Disconnection:** Disconnect the wiring harness from the old touch pad, noting the orientation and connection points if necessary.
4. **Removal:** Remove the old touch pad from its mounting.
5. **Installation:** Position the new Meiko 9207342 Touch Pad in place and secure it according to the dishwasher's service manual.
6. **Connection:** Reconnect the wiring harness to the new touch pad, ensuring all connections are secure and correctly oriented.
7. **Testing:** After reassembling the control panel, restore power to the dishwasher and perform a functional test to ensure the new touch pad responds correctly to all inputs.

Refer to the specific service manual for your Meiko Point 2 Series dishwasher model for detailed, step-by-step installation instructions.

4. OPERATING INSTRUCTIONS

The Meiko 9207342 Touch Pad provides intuitive control over your Point 2 Series dishwasher. The following describes the typical functions:

- **Wash Tank Temp:** Displays or allows adjustment of the wash tank temperature. Refer to your dishwasher's main operating manual for temperature setting procedures.
- **Final Rinse Temp:** Displays or allows adjustment of the final rinse temperature. Proper rinse temperature is crucial for sanitization.
- **Indicators I, II, III:** These indicators typically represent different wash cycles, program stages, or operational statuses. Consult your dishwasher's main operating manual to understand the specific meaning of each indicator for your model.
- **Start Button:** Initiates the selected wash program or cycle.
- **Stop Button:** Halts the current wash program or cycle. Pressing 'STOP' then 'START' may reset the machine or initiate a new cycle, depending on the dishwasher model.

For detailed instructions on selecting wash programs, adjusting temperatures, and understanding specific error codes or indicators, please refer to the comprehensive operating manual provided with your Meiko Point 2 Series dishwasher.

5. MAINTENANCE AND CARE

To ensure the longevity and proper function of your Meiko 9207342 Touch Pad, follow these general maintenance guidelines:

- **Cleaning:** Regularly wipe the surface of the touch pad with a soft, damp cloth. Use mild, non-abrasive cleaning solutions. Avoid harsh chemicals, solvents, or abrasive pads, as these can damage the surface and functionality.
- **Avoid Excessive Force:** Do not press the buttons with excessive force or sharp objects, which could damage the internal sensors or the overlay.
- **Liquid Exposure:** While designed for a commercial kitchen environment, minimize direct exposure to large amounts of liquid. Immediately wipe away any spills.
- **Inspection:** Periodically inspect the touch pad for any signs of wear, cracks, or damage. If damage is observed, contact a qualified service technician for assessment and potential replacement.

6. TROUBLESHOOTING

If you experience issues with your Meiko 9207342 Touch Pad, consider the following basic troubleshooting steps. For complex issues, always contact a qualified service technician.

- **Unresponsive Buttons:**
 - Ensure the dishwasher is powered on and not in an error state.
 - Gently clean the touch pad surface to remove any residue that might interfere with touch detection.
 - If the issue persists, there may be an internal fault with the touch pad or its connection.
- **Incorrect Display/Indicators:**
 - Verify the dishwasher's main power supply is stable.
 - Consult your dishwasher's operating manual for specific error codes or indicator meanings.
- **Intermittent Functionality:**
 - This could indicate a loose connection or a failing component. Professional inspection is recommended.

Important: Do not attempt to repair the touch pad yourself if you are not a qualified technician. Contact Meiko customer support or an authorized service provider for assistance.

7. SPECIFICATIONS

Feature	Detail
Item Model Number	9207342
Brand	Meiko
Special Feature	Touch pad
Controls Type	Touch
Included Components	Replacement Part
Item Weight	1.6 ounces
Package Dimensions	23.08 x 2.04 x 1 inches

Date First Available

October 3, 2017

8. WARRANTY AND SUPPORT

As a genuine OEM replacement part, the Meiko 9207342 Touch Pad is manufactured to the highest standards of quality and compatibility with Meiko equipment. For specific warranty information pertaining to replacement parts, please refer to the warranty documentation provided with your original Meiko dishwasher or contact Meiko directly.

For technical support, service, or to inquire about warranty claims, please contact Meiko customer service or an authorized Meiko service provider in your region. Ensure you have your dishwasher's model and serial number, along with the part number (9207342), ready when contacting support.