

DS 2618

Digital LCD Alarm Clock with Temperature Sensor DS 2618 User Manual

INTRODUCTION

Thank you for purchasing the Digital LCD Alarm Clock with Temperature Sensor DS 2618. This manual provides detailed instructions for setting up, operating, and maintaining your new alarm clock. Please read this manual carefully before use and retain it for future reference.

PRODUCT OVERVIEW

The DS 2618 is a versatile digital alarm clock featuring a clear LCD display, an integrated temperature sensor, and essential alarm functions. Its compact design makes it suitable for various environments.



Figure 1: Front view of the alarm clock with its display showing time, date, and temperature in a non-illuminated state.



Figure 2: Front view of the alarm clock with its display illuminated, showing time, city code, and temperature.



Figure 3: Rear view of the alarm clock, highlighting the control buttons and the battery compartment.

Control Buttons:

- **MODE:** Cycles through display modes (Time, Alarm, Date) and confirms settings.
- **SET:** Enters setting mode for time, date, and alarm.
- **UP (▲):** Increases values during setting.
- **DOWN (▼):** Decreases values during setting.
- **TIMER:** Activates or deactivates the timer function (if available).
- **LIGHT/SNOOZE (Top Button):** Illuminates the display temporarily and activates the snooze function

when the alarm sounds.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the unit (refer to Figure 3).
2. Slide or lift the cover to open the compartment.
3. Insert the required batteries (typically AAA, not included) according to the polarity indicators (+ and -) inside the compartment.
4. Replace the battery compartment cover securely.

The clock should power on automatically once batteries are inserted. If the display remains blank, check battery orientation or replace with fresh batteries.

OPERATING INSTRUCTIONS

1. Setting Time and Date

1. Press the **MODE** button repeatedly until the time display is active.
2. Press and hold the **SET** button for approximately 3 seconds until the hour digit starts flashing.
3. Use the **UP** or **DOWN** buttons to adjust the hour.
4. Press **SET** to confirm the hour and move to the minute setting.
5. Use the **UP** or **DOWN** buttons to adjust the minutes.
6. Continue pressing **SET** to cycle through and set the year, month, and day using the **UP** or **DOWN** buttons.
7. Press **MODE** or wait for 10 seconds without input to exit the setting mode.

2. Setting the Alarm

1. Press the **MODE** button until the alarm time is displayed (often indicated by an alarm icon).
2. Press and hold the **SET** button for approximately 3 seconds until the alarm hour digit starts flashing.
3. Use the **UP** or **DOWN** buttons to adjust the alarm hour.
4. Press **SET** to confirm the alarm hour and move to the alarm minute setting.
5. Use the **UP** or **DOWN** buttons to adjust the alarm minutes.
6. Press **MODE** or wait for 10 seconds without input to exit the alarm setting mode.

3. Activating/Deactivating the Alarm

While in alarm display mode, press the **UP** button to toggle the alarm ON or OFF. An alarm icon will appear on the display when the alarm is active.

4. Snooze Function and Backlight

When the alarm sounds, press the **LIGHT/SNOOZE** button located on the top of the clock to temporarily silence the alarm. The alarm will sound again after a few minutes (typically 5-10 minutes). Pressing any other button will turn off the alarm until the next set time.

Press the **LIGHT/SNOOZE** button at any time to illuminate the display for a few seconds.

5. Temperature Display

The clock automatically displays the ambient temperature. The unit of temperature (Celsius or Fahrenheit) can usually be toggled by pressing the **DOWN** button while in normal time display mode, or by a dedicated switch in the battery compartment.

MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the display becomes dim or functions become erratic. Always replace all batteries at the same time with new ones.
- **Storage:** If the clock will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

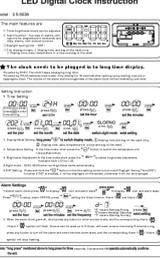
- **Display is blank or dim:** Check battery installation. Replace batteries with fresh ones.
- **Alarm does not sound:** Ensure the alarm is activated (alarm icon visible). Check alarm time settings.
- **Incorrect time/date:** Re-enter setting mode and adjust time/date as per instructions.
- **Temperature reading seems inaccurate:** Ensure the clock is placed away from direct sunlight, heat sources, or air conditioning vents that could affect local temperature readings.

SPECIFICATIONS

- **Model:** DS 2618
- **Display:** LCD Digital
- **Functions:** Time, Date, Alarm, Temperature Display
- **Dimensions:** Approximately 18 x 12 x 6 cm (7.1 x 4.7 x 2.4 inches)
- **Weight:** Approximately 200 g (0.44 lbs)
- **Power Source:** Batteries (type not specified, typically AAA, not included)

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to your purchase documentation for specific warranty terms and duration. For technical support or service inquiries, please contact your retailer or the point of purchase.

| | |
|---|--|
|  | <p>DS-3822LP Digital Clock User Manual: Features, Operation, and Settings</p> <p>Comprehensive user manual for the DS-3822LP digital clock, alarm, and thermometer with LED/LCD display and projection function. Learn how to set time, date, alarms, adjust brightness, and use projection features.</p> |
|  | <p>DS-6681/5519 LED Digital Clock User Manual</p> <p>Comprehensive user manual for the DS-6681/5519 LED Digital Clock, detailing features, setup, and operation in multiple languages. Includes instructions for time, date, alarm, temperature, and brightness settings.</p> |
|  | <p>NieNie DS-6657 9-Inch Digital Wall Clock User Manual - Features & Specifications</p> <p>Comprehensive user manual for the NieNie DS-6657 digital wall clock. Learn about its 9-inch LED display, USB power, temperature/humidity monitoring, auto-dimming, DST, and alarm functions. Includes detailed specifications and operation guide.</p> |
|  | <p>LED Digital Clock DS-6638 Instruction Manual</p> <p>Detailed instructions for setting up and using the DS-6638 LED Digital Clock, covering time, alarm, display modes, temperature, brightness, and DST settings.</p> |
|  | <p>NIDITON DS-6631 LED Digital Clock Instruction Manual</p> <p>Comprehensive user manual for the NIDITON DS-6631 LED Digital Clock. Learn how to set up time, date, temperature display, alarms, brightness, and utilize features like night mode and voice control. Includes multilingual instructions.</p> |
|  | <p>DS-6662/5508 LED Digital Clock Instruction Manual - Features and Settings</p> <p>Comprehensive guide for the DS-6662/5508 LED Digital Clock, covering its main functions, alarm settings, brightness adjustment, daylight saving time, and temperature unit selection. Learn how to set time, date, and alarms with this easy-to-follow manual.</p> |