

[Manuals.plus](#) /

› [ONN](#) /

› ONN ONA17TM009 Fixed Wall Mount for 17-42" TVs User Manual

## ONN ONA17TM009

# ONN ONA17TM009 Fixed Wall Mount User Manual

For 17-42" TVs

## PRODUCT OVERVIEW

The ONN ONA17TM009 Fixed Wall Mount is designed to securely hold 17-42 inch televisions, providing a space-saving solution for your home. This mount features a fixed design, ensuring your TV remains in a stable position once installed. Its sturdy construction and self-locking spring mechanism contribute to easy and secure installation.



Image: The ONN ONA17TM009 Fixed Wall Mount, showing the wall plate and two vertical TV brackets with pull strings for the self-locking mechanism.

## SETUP AND INSTALLATION

Before beginning installation, ensure you have all necessary parts and tools. Proper installation is crucial for the safety and stability of your television.

## 1. Pre-installation Checklist

- Verify that your TV's VESA mounting pattern is compatible with the mount.
- Ensure the wall structure can support the weight of the TV and the mount.
- Locate wall studs if mounting to drywall.
- Read all instructions thoroughly before proceeding.

## 2. Tools Required

- Pencil for marking
- Drill with appropriate drill bits (wood/concrete)
- Stud finder (for drywall installation)
- Level
- Phillips head screwdriver
- Socket wrench or adjustable wrench
- Measuring tape

## 3. Mounting the Wall Plate

1. Determine the desired height for your TV.
2. Using a stud finder, locate and mark the center of two adjacent wall studs. If mounting to concrete or brick, mark your desired drill points.
3. Position the wall plate against the wall at the marked height and use a level to ensure it is perfectly horizontal.
4. Mark the drilling points through the holes on the wall plate.
5. Drill pilot holes at the marked locations. The size of the drill bit will depend on your wall type and the provided hardware.
6. Attach the wall plate to the wall using the appropriate screws and anchors (if necessary). Ensure it is securely fastened.

## 4. Attaching TV Brackets to TV

1. Carefully place your TV face down on a soft, clean surface to prevent scratches.
2. Identify the VESA mounting holes on the back of your TV.
3. Attach the two vertical TV brackets to the back of your TV using the screws and spacers provided. Ensure the brackets are oriented correctly so they can hook onto the wall plate. The pull strings for the self-locking mechanism should hang freely at the bottom.
4. Tighten all screws securely, but do not overtighten.

## 5. Mounting TV to Wall Plate

1. With assistance, carefully lift the TV with the attached brackets.
2. Align the hooks on the TV brackets with the top edge of the wall plate.
3. Gently lower the TV, allowing the brackets to engage with the wall plate. The self-locking spring mechanism should click into place, securing the TV.
4. Gently pull on the bottom of the TV to ensure it is securely locked onto the wall mount.

## OPERATING THE MOUNT

---

The ONN ONA17TM009 is a fixed wall mount, meaning it does not offer tilt, swivel, or articulation. Once installed, your TV will remain in a static position.

## Detaching the TV

Should you need to detach the TV for access to ports or relocation, gently pull the release strings located at the bottom of the TV brackets. This will disengage the self-locking mechanism, allowing you to lift the TV off the wall plate. Always have assistance when detaching the TV to prevent damage or injury.

## MAINTENANCE

Regular maintenance helps ensure the longevity and safety of your TV wall mount.

- **Cleaning:** Use a soft, dry cloth to wipe down the mount. Avoid abrasive cleaners or solvents that could damage the finish.
- **Periodic Checks:** Periodically check all screws and bolts to ensure they remain tight and secure. Over time, vibrations or movement can cause fasteners to loosen.
- **Inspect for Damage:** Inspect the mount for any signs of wear, corrosion, or damage. If any damage is observed, do not use the mount and contact customer support.

## TROUBLESHOOTING

If you encounter issues during or after installation, refer to the following common problems and solutions.

| Problem                                        | Possible Cause                                                      | Solution                                                                                                                                                     |
|------------------------------------------------|---------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TV is not level after installation.            | Wall plate was not level during installation.                       | Remove the TV, loosen the wall plate screws slightly, adjust the plate with a level, and re-tighten. Re-mount the TV.                                        |
| TV does not securely lock onto the wall plate. | Brackets not properly aligned or self-locking mechanism obstructed. | Ensure the TV brackets are fully seated on the wall plate. Check that the pull strings are not caught or obstructing the locking mechanism.                  |
| Screws for TV brackets do not fit TV.          | Incorrect screw size or type used.                                  | Refer to your TV's manual for correct VESA screw specifications. Use the appropriate screws and spacers provided with the mount, or acquire compatible ones. |

## SPECIFICATIONS

|                            |                               |
|----------------------------|-------------------------------|
| Brand                      | ONN                           |
| Model Number               | ONA17TM009 (SG_B07659BS6Z_US) |
| Mounting Type              | Wall Mount                    |
| Movement Type              | Fixed                         |
| Minimum Compatible TV Size | 17 Inches                     |
| Maximum Compatible TV Size | 42 Inches                     |
| Compatible Devices         | Television                    |
| Product Dimensions         | 6 x 4 x 7 inches              |
| Item Weight                | 1.9 pounds                    |

|       |              |
|-------|--------------|
| Color | Grey         |
| UPC   | 681131160001 |

## WARRANTY AND SUPPORT

For information regarding product warranty, technical support, or replacement parts, please refer to the documentation included with your product packaging or visit the official ONN website. Contact details for customer service are typically provided there.

© 2025 ONN. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question