

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [barbecue](#) /

> [Barbecue Loewy 40 Black Charcoal BBQ User Manual](#)

barbecue 2234540000

Loewy 40 Black Charcoal BBQ User Manual

Model: 2234540000 | Brand: barbecue

INTRODUCTION

Thank you for choosing the Barbecue Loewy 40 Black Charcoal BBQ. This classic original charcoal barbecue is designed for ease of use and efficient grilling, featuring a simple design and a reinforced frame. It incorporates an ingenious QuickStart system for easy ignition and an adjustable air inlet for precise heat control. The enamel finish provides durability and shock absorption, ensuring a long-lasting product.

This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new charcoal barbecue. Please read it thoroughly before first use and keep it for future reference.

SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in fire, explosion, or burn hazard, which could cause property damage, personal injury, or death.

- **FOR OUTDOOR USE ONLY.** Do not operate this barbecue indoors or in any enclosed area.
- Keep children and pets away from the barbecue at all times.
- Use on a stable, level, non-combustible surface.
- Never leave a lit barbecue unattended.
- Keep the barbecue at a safe distance from combustible materials such as wood decks, fences, and overhanging branches.
- Use only charcoal briquettes or lump charcoal as fuel. Do not use gasoline, kerosene, or alcohol for lighting or relighting.
- Allow the barbecue to cool completely before moving or cleaning.
- Always have a fire extinguisher or a bucket of sand readily available in case of fire.
- Wear protective gloves when handling hot components.

PACKAGE CONTENTS

Please ensure all components are present and undamaged before assembly. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Main Barbecue Unit (Base and Bowl)
- Stainless Steel Grid (Cooking Grate)
- Windshield
- Assembly Hardware (Screws, Nuts, etc.)
- User Manual (This Document)

SETUP AND ASSEMBLY

Assembly is required for the Barbecue Loewy 40. Please follow these general steps. Refer to the included assembly diagram for detailed instructions specific to your model.

1. Unpack all components and lay them out on a clean, flat surface.
2. Attach the main barbecue bowl to the central column/base using the provided hardware. Ensure all connections are secure.
3. Install the windshield around the rim of the barbecue bowl. This helps protect the flame from wind and directs heat.
4. Place the stainless steel cooking grid into the designated slots in the bowl. Note that the grid is height-adjustable.
5. Ensure all parts are firmly connected and the barbecue is stable before use.





Figure 1: Fully assembled Barbecook Loewy 40 Charcoal BBQ, ready for use.



Figure 2: Dimensions of the Barbecue Loewy 40, showing its compact design at 16.18"D x 16.18"W x 29.72"H.

OPERATING INSTRUCTIONS

1. Lighting the Charcoal (QuickStart System)

The Barbecue Loewy 40 features an innovative QuickStart system for easy and efficient charcoal ignition.

1. Place charcoal briquettes or lump charcoal into the charcoal bowl. Do not overfill.
2. Locate the QuickStart ignition port at the base of the central column.
3. Insert a crumpled piece of newspaper or a firelighter into the QuickStart tube from the bottom.
4. Light the paper/firelighter through the opening. The design of the QuickStart system will create a chimney effect, drawing air through the charcoal and igniting it quickly and evenly.
5. Allow the charcoal to ash over (turn grey) before placing food on the grill. This typically takes 15-20 minutes.

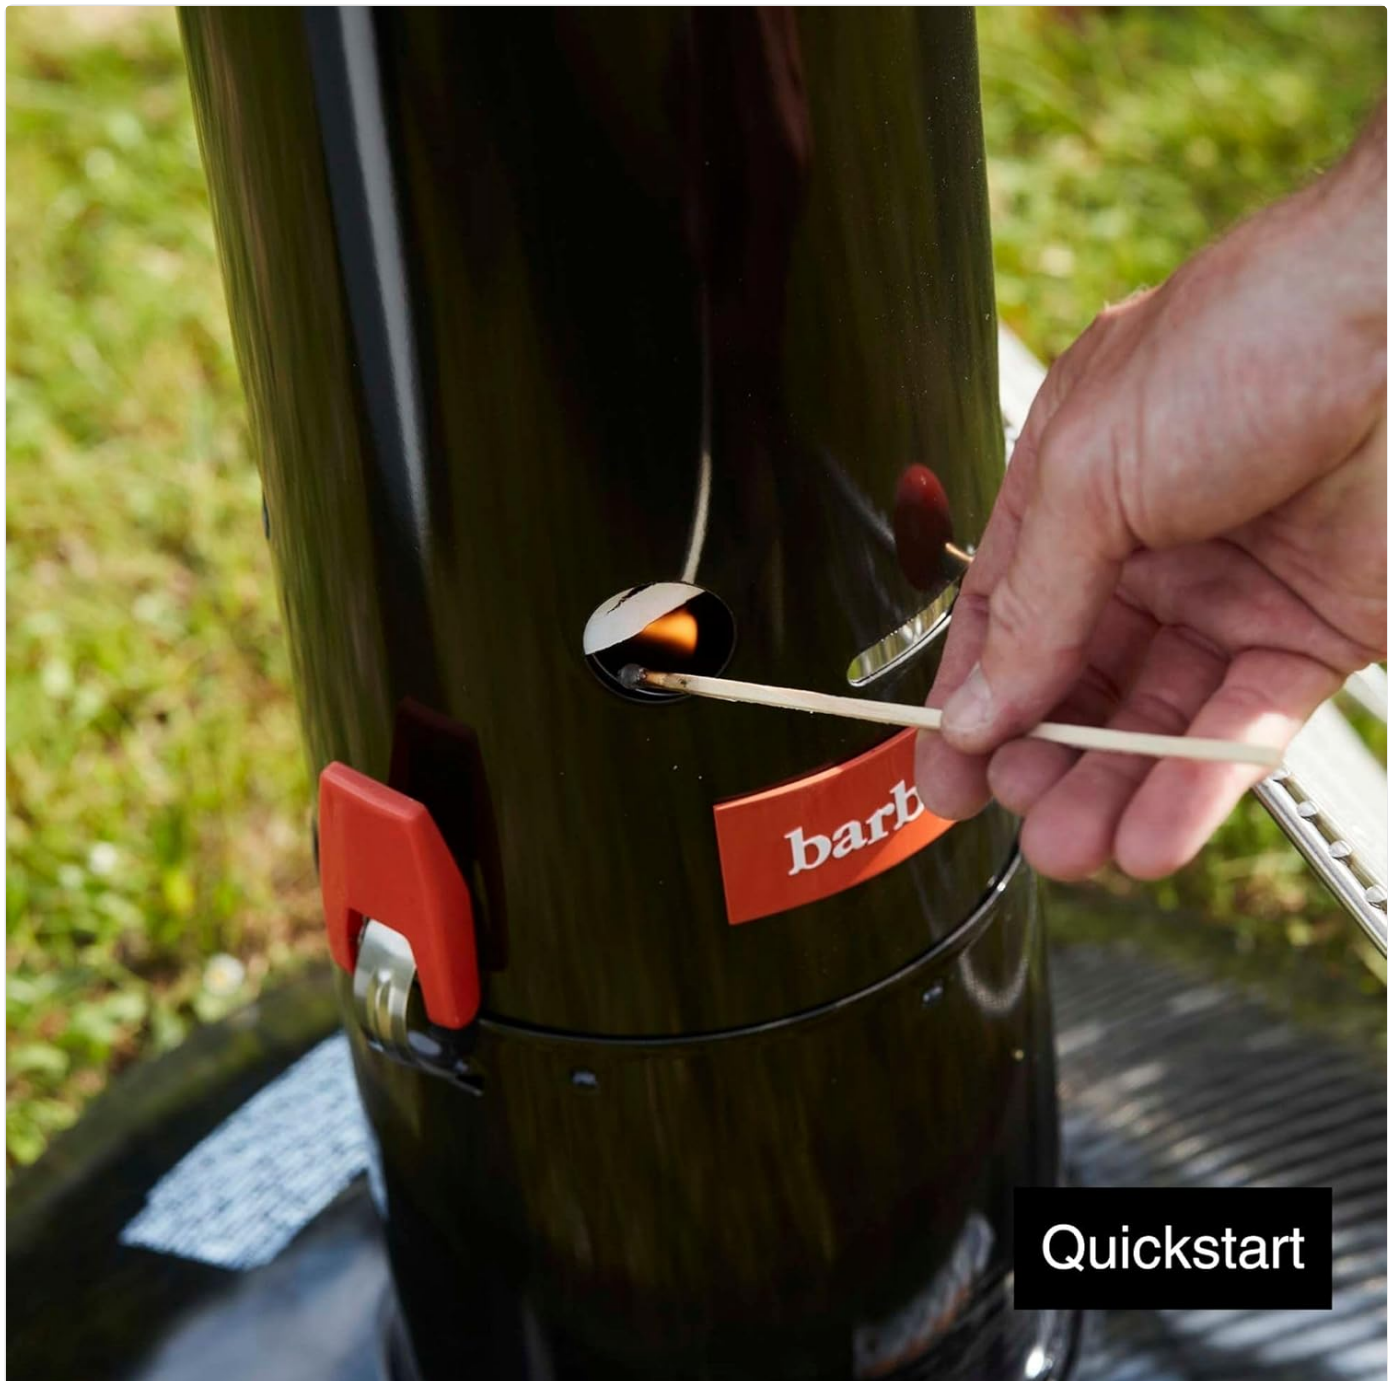


Figure 3: Using the QuickStart system to ignite charcoal with a match, demonstrating the ease of starting the barbecue.



Figure 4: Close-up view of glowing charcoal, indicating it is ready for grilling after the QuickStart process.

2. Heat Control (Adjustable Air Inlet)

The barbecue features an adjustable air inlet to control the intensity of the heat.

- **Increasing Heat:** Open the air inlet wider to allow more oxygen to reach the charcoal, increasing the burn rate and heat.
- **Decreasing Heat:** Close the air inlet partially to restrict oxygen flow, reducing the burn rate and heat.

3. Grill Height Adjustment

The chrome-plated cooking grid offers 3 positions for height adjustment, allowing you to control the cooking temperature relative to the charcoal.

- **Higher Position:** For slower cooking or keeping food warm.
- **Lower Position:** For searing or faster cooking.
- To adjust, carefully lift the grid using the handles and place it into the desired set of notches on the barbecue bowl.



Figure 5: The height-adjustable grill with 3 levels, allowing for versatile cooking temperatures.

Stainless steel grid



Figure 6: The durable stainless steel grid, shown with food cooking, highlighting its robust construction.



Figure 7: The integrated windshield, designed to protect the flame and enhance heat retention during grilling.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will extend the life of your Barbecook Loewy 40 BBQ.

- **After Each Use:** Allow the barbecue to cool completely. Remove the cooking grid and clean it with a grill brush. For stubborn residue, soak in warm, soapy water.
- **Ash Disposal:** Once cooled, carefully remove the ash from the charcoal bowl. Dispose of ash in a non-combustible container.
- **Exterior Cleaning:** Wipe down the exterior enamel surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners that could damage the finish. The enamel is designed to be immune to shock and easy to clean.
- **Storage:** Store the barbecue in a dry, covered area when not in use to protect it from the elements.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Charcoal not lighting easily.	Insufficient air flow; damp charcoal; not enough kindling.	Ensure QuickStart tube is clear. Use dry charcoal. Add more kindling (newspaper/firelighter). Ensure air inlet is open.
Heat is too low/high.	Air inlet setting incorrect; grill height.	Adjust the air inlet to increase or decrease heat. Adjust the cooking grid to a higher or lower position.
Food sticking to the grill.	Grill not seasoned; grill not clean; insufficient oil on food/grill.	Ensure grill is clean before use. Lightly oil the grill grate before placing food.

SPECIFICATIONS

Feature	Detail
Brand	barbecook
Model Name	Barbecook Loewy 40
Model Number	2234540000
Product Dimensions	16.18"D x 16.18"W x 29.72"H (41.1 cm x 41.1 cm x 75.5 cm)
Item Weight	13.2 pounds (6 Kilograms)
Color	Black
Fuel Type	Charcoal
Material	Stainless Steel (Grid), Alloy Steel (Frame)
Special Feature	Adjustable Air, QuickStart System
Included Components	Windshield, Stainless Steel Grid
Cooking Surface Area	1256 Square Centimeters
Grill Positions	3 (Chrome Grille)
Assembly Required	Yes

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the manufacturer's official website or the original purchase documentation provided with your Barbecook Loewy 40 BBQ.

For technical support, replacement parts, or any other inquiries, please contact Barbecook customer support through their official channels. Contact information can typically be found on the manufacturer's website or your purchase receipt.

