

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Devoko](#) /

› Devoko 3-Piece Patio Furniture Set Instruction Manual

Devoko DV17QRD

Devoko 3-Piece Patio Furniture Set Instruction Manual

Model: DV17QRD

1. PRODUCT OVERVIEW

The Devoko 3-Piece Patio Furniture Set is designed to enhance your outdoor living space with comfort and durability. This set includes two chairs and one tea table, perfect for a patio, porch, backyard, balcony, poolside, or garden. The furniture is constructed from high-quality PE rattan and a robust steel frame, ensuring long-lasting performance and resistance to various weather conditions.

Key features include:

- **Sturdy & Durable Construction:** Made with brown PE rattan and a strong steel frame, designed to withstand rain and wind.
- **Comfortable & Convenient:** Features soft, sponge-filled seats with removable covers for easy cleaning and maintenance.
- **Toughened Glass Table:** The tea table includes a strong, light toughened glass top that can be easily wiped or washed.
- **Versatile Application:** Suitable for both indoor and outdoor use, complementing various leisure spaces.

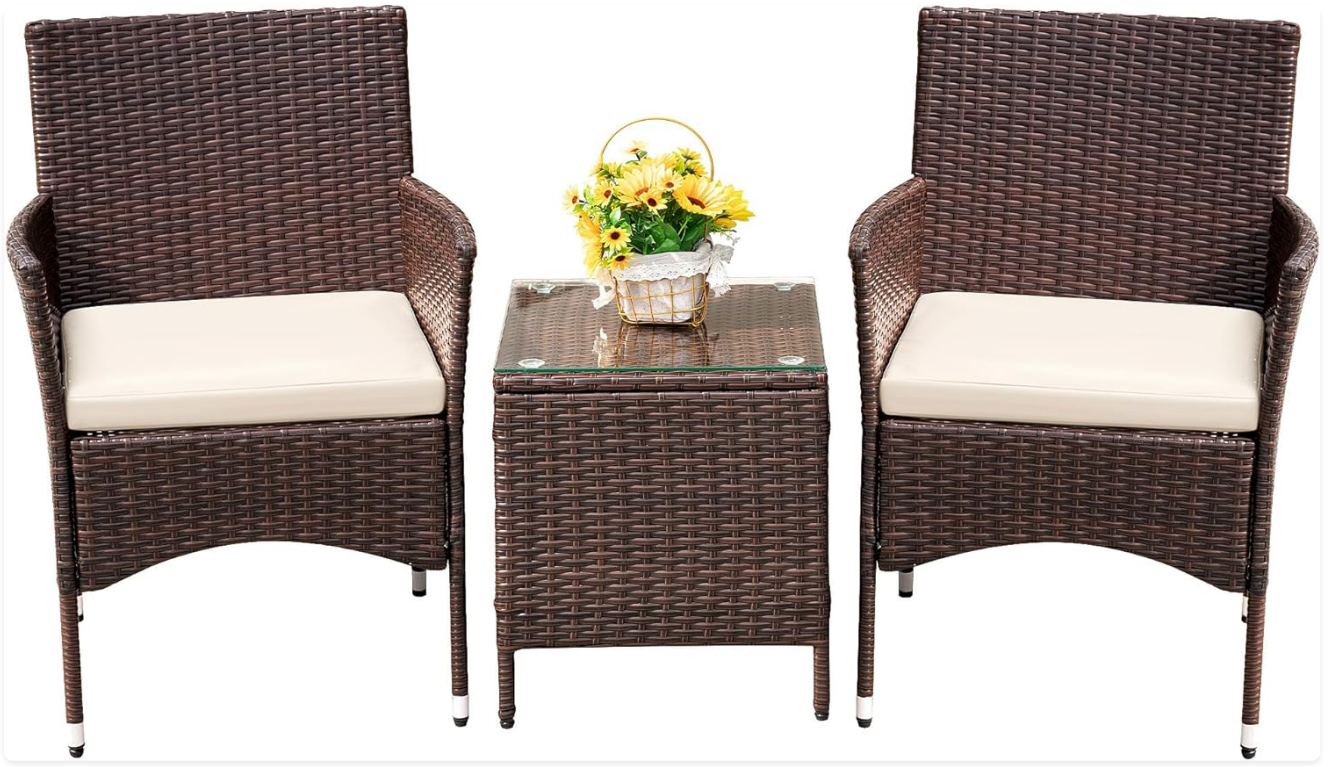


Figure 1.1: The Devoko 3-Piece Patio Furniture Set, showcasing two chairs and a central tea table.

2. SETUP

The Devoko Patio Furniture Set is designed for easy and quick assembly. All necessary installation tools and instructions are included to guide you through the process.

2.1 Unpacking and Component Identification

Carefully unpack all components from the box. Verify that all parts listed in the instruction manual are present before beginning assembly. Lay out all pieces on a soft, clean surface to prevent scratches.



EASY & QUICK ASSEMBLE

The installation takes ten minutes to complete

Figure 2.1: All components of the furniture set laid out for assembly.

2.2 Assembly Steps

Follow the step-by-step instructions provided in the included manual. Typically, assembly involves attaching the backrests and armrests to the seat bases, and then assembling the tea table. Ensure all screws are tightened securely, but avoid over-tightening to prevent damage.



Figure 2.2: Detailed view of the chair, cushion, and table components.

3. OPERATING

Once assembled, your Devoko Patio Furniture Set is ready for use. The chairs are designed for comfortable seating, and the tea table provides a convenient surface for drinks, snacks, or decorative items.

3.1 Seating Comfort

The soft, sponge-filled cushions provide extra comfort for extended periods of relaxation. The PE rattan construction offers a supportive yet flexible seating experience.



WICKER CHAIRS

PE rattan and strong steel frame, durable & solid

Figure 3.1: Enjoying the patio set in an outdoor setting.

3.2 Table Usage

The tea table's toughened glass top is ideal for placing beverages, books, or small decor. The glass is secured to the rattan frame to prevent accidental sliding.



RATTAN TABLE

Table with glass allows you to place foods

Figure 3.2: The tea table provides a convenient surface for various items.

4. MAINTENANCE

Proper maintenance will extend the lifespan and preserve the appearance of your Devoko Patio Furniture Set.

4.1 Cleaning Instructions

- **Rattan Frame:** Wipe the PE rattan and steel frame with a damp cloth. For tougher dirt, a mild soap solution can be used, followed by rinsing with water.
- **Cushions:** The cushion covers are removable for easy cleaning. Hand wash the covers or follow specific care instructions on the label. Allow to air dry completely before reattaching.
- **Glass Top:** The toughened glass can be swabbed or washed with water. Use a glass cleaner for streak-free shine.

4.2 Weather Protection

The PE rattan is designed to be weatherproof, resisting splitting, cracking, fading, rot, and deterioration. However, for prolonged durability, especially in harsh weather conditions, consider covering the furniture or storing cushions indoors when not in use.

5. TROUBLESHOOTING

If you encounter any issues with your Devoko Patio Furniture Set, please refer to the following common solutions:

- **Loose Connections:** If the furniture feels wobbly, check all screws and bolts. Tighten them using the provided Allen wrench. Avoid over-tightening.
- **Cushion Flatness:** Over time, cushions may compress. Fluffing them regularly can help maintain their shape and comfort.
- **Glass Top Movement:** Ensure the suction cups beneath the glass top are properly adhered to the rattan surface. Clean both surfaces before re-applying the suction cups for better grip.

For any assembly questions or persistent issues, please contact Devoko customer service via Amazon message for prompt assistance.

6. SPECIFICATIONS

Attribute	Value
Brand	Devoko
Model Number	DV17QRD
Material	Rattan
Color	Brown/Beige
Product Dimensions	27.36 x 19.88 x 11.22 inches
Item Weight	40 pounds
Manufacturer	Devoko
Product Care Instructions	Wipe with Damp Cloth, Hand Wash

7. WARRANTY & SUPPORT

Devoko offers a worry-free 12-month after-sale service for your patio furniture set. Our friendly customer service team is available to assist you with any inquiries or concerns.

For support, please contact us directly through Amazon message. We are committed to providing prompt and helpful responses to ensure your satisfaction.