

[Manuals.plus](#) /

› [USARMT](#) /

› USARMT Replacement Remote Control for Proscan TVs Instruction Manual

USARMT Proscan PL-1.0

USARMT Replacement Remote Control for Proscan TVs

Model: Proscan PL-1.0

Brand: USARMT

INTRODUCTION

This manual provides instructions for the USARMT replacement remote control, designed for various Proscan TV models. This remote offers a direct replacement solution, requiring no programming for immediate use. It is compatible with models such as RLDED3258A-F, RLDED3258AF, RLDED5099, RLDED5099-UHD, PLDED5068AD, PLDED5068A-D, PLDED3273AE, PLDED5066A-B, PLDED3273A-E, PLDED3996A-E, PLED5529A-G, Pledv3282a, Pled2243a-I, PLDED5066A, and PLDED5066B. Please ensure your TV model is listed for compatibility, especially if your TV was manufactured before 2010.

SETUP

1. Battery Installation

The remote control requires two AA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two new AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

No programming is required. Once batteries are installed, the remote is ready for use with compatible Proscan TVs.



Image: Back of the remote control with the battery compartment open for battery installation.

OPERATING INSTRUCTIONS

This remote control is designed to function immediately with compatible Proscan TV models without any setup or pairing process. Simply point the remote at your TV and press the desired button.

Key Functions:

- **Power Button (Red Circle):** Turns the TV on or off.
- **Mute Button (Green X):** Mutes or unmutes the TV audio.

- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (VOL +/-):** Adjusts the TV volume.
- **Channel Up/Down (CH +/-):** Changes the TV channel.
- **Source Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Menu Button:** Accesses the TV's main menu.
- **Navigation Buttons (Arrows and ENTER):** Navigate through TV menus and confirm selections.
- **Exit Button:** Exits the current menu or function.



Image: Front view of the remote control, highlighting various function buttons.

Cleaning the Remote

To maintain optimal performance and appearance, clean the remote control regularly:

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

Battery Care

- Replace batteries when the remote's responsiveness decreases.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

If your remote control is not functioning as expected, try the following steps:

Remote Control Not Responding:

1. **Check Batteries:** Ensure new AA batteries are correctly installed with the correct polarity (+/-).
2. **Power Cycle Remote:** Remove the batteries from the remote. Press and hold the power button on the remote for 5 seconds to drain any residual power. While batteries are out, gently press each button a couple of times to ensure no buttons are stuck. Reinsert brand new batteries, ensuring correct alignment.
3. **Line of Sight:** Ensure there is a clear line of sight between the remote control and the TV's infrared sensor. Obstructions can block the signal.
4. **Remote Compatibility:** Verify that the remote model is specifically compatible with your Proscan TV model. Refer to the product description or your TV's original manual.

TV Not Responding to Remote:

1. **Power Cycle TV:** Unplug the TV from the power outlet. Press and hold the power button on the TV itself for 15 seconds to drain any residual power. Plug the TV back in and power it on. Test the remote again. This can resolve various TV-related issues.
2. **TV Sensor:** Ensure the TV's infrared sensor is not blocked or dirty.

If issues persist after following these steps, please contact USARMT customer support for further assistance.

SPECIFICATIONS

Brand	USARMT
Model Number	Proscan PL-1.0
Special Feature	Ergonomic
Color	Black

Max Number of Supported Devices	1
Compatible Devices	Television
Connectivity Technology	Infrared
Controller Type	Button Control
Maximum Range	30 Feet
Number of Batteries Required	2 AA batteries (not included)
Battery Type	AA
UPC	688934118314

WARRANTY AND SUPPORT

For any questions, concerns, or support needs regarding your USARMT replacement remote control, please contact USARMT customer service. We aim to respond to all inquiries within 24 hours.

Please ensure you have purchased the exact remote model that is compatible with your original TV. This will help in providing accurate support.

