Amazon Echo Dot (2. Generation)

Amazon Echo Dot (2nd Generation) User Manual

Model: Echo Dot (2. Generation)

INTRODUCTION

The Amazon Echo Dot (2nd Generation) is a voice-controlled smart speaker that connects to the Alexa Voice Service. It is designed to provide hands-free assistance for various tasks, including playing music, making calls, setting alarms, answering questions, providing information, and controlling compatible smart home devices. Its compact design allows it to fit seamlessly into any room.



Image: Top view of the Amazon Echo Dot (2nd Generation) showing the control buttons and light ring.

SETUP

1. Unboxing and Power Connection

Carefully remove the Echo Dot and its accessories from the packaging. Connect the included EU power adapter to the

Echo Dot and then plug it into a wall outlet. The light ring on the Echo Dot will turn blue, then orange, indicating it is ready for setup.



Image: The EU power adapter included with the Amazon Echo Dot.

2. Download the Alexa App

Download the Amazon Alexa app on your smartphone or tablet. The app is available for iOS and Android devices. Search for "Amazon Alexa" in your device's app store.

3. Connect to Wi-Fi

Open the Alexa app and follow the on-screen instructions to connect your Echo Dot to your Wi-Fi network. You will need your Wi-Fi network name and password. Ensure your smartphone is connected to the same Wi-Fi network you intend to use for the Echo Dot during setup.

4. Connect to External Speakers (Optional)

The Echo Dot can be connected to external speakers or headphones via Bluetooth or a 3.5mm stereo cable for enhanced audio output. To connect via Bluetooth, say "Alexa, pair" and follow the instructions in the Alexa app. For a wired connection, simply plug a 3.5mm audio cable from the Echo Dot's audio output jack to your speaker's input.

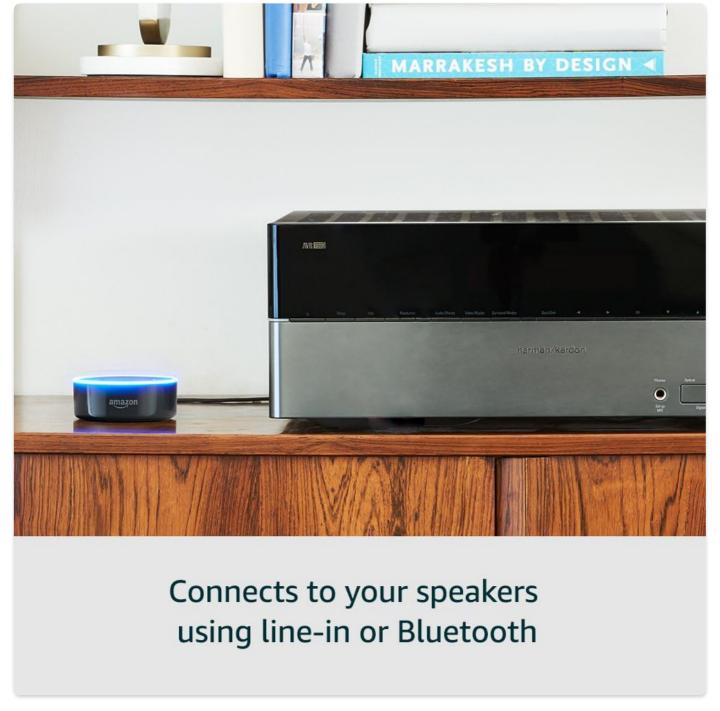


Image: The Echo Dot connected to a home audio system via a line-in cable, demonstrating its ability to connect to external speakers.

OPERATING THE ECHO DOT

The Echo Dot is primarily operated using voice commands through the Alexa Voice Service. Simply say the wake word "Alexa" followed by your command or question.

Voice Control and Microphones

The Echo Dot features seven far-field microphones, allowing it to hear your voice commands from across the room, even in noisy environments or while music is playing. The light ring indicates when Alexa is listening or processing a request.




Compact design makes it a convenient addition to any room

Image: An illustration showing sound waves emanating from the Echo Dot, representing its far-field microphone capabilities.

Key Functions:

- **Music Playback:** Ask Alexa to play music from supported services like Amazon Music Unlimited (subscription required) and TuneIn. You can request specific songs, artists, genres, or playlists.
- Calls and Messaging: Make hands-free calls and send messages to other Echo devices or contacts via the Alexa app. You can also use the Drop In feature to connect quickly with other Echo devices in your home.
- Information and Assistance: Ask questions to get information, check the weather, set alarms and timers, manage todo lists, and more.
- Smart Home Control: Control compatible smart home devices such as lights, plugs, switches, and thermostats using voice commands. Ensure your smart home devices are linked through the Alexa app.

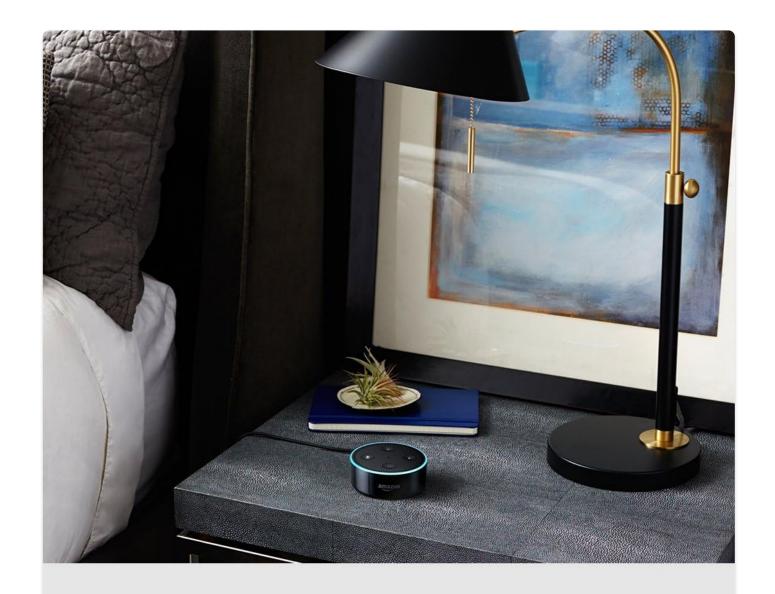

Control lights and other smart home devices

Image: The Echo Dot positioned on a bedside table, demonstrating its use in controlling smart home devices like lights.

Supported Languages

The Amazon Echo Dot (2nd Generation) supports English (UK) and German languages. The availability of specific skills may vary by country and language setting.

MAINTENANCE

Cleaning

To clean your Echo Dot, gently wipe the exterior with a soft, dry, lint-free cloth. Do not use abrasive cleaners or solvents. Avoid getting moisture into any openings.

Software Updates

Your Echo Dot automatically receives software updates over Wi-Fi. Ensure your device is connected to the internet to

TROUBLESHOOTING

Problem	Solution
Echo Dot is not responding.	Ensure the device is plugged in and the light ring is illuminated. Check if the microphone is muted (red light ring). Try saying "Alexa, stop" or "Alexa, cancel" if it's stuck on a command. Unplug the device for 30 seconds and plug it back in.
Cannot connect to Wi-Fi.	Verify your Wi-Fi password. Ensure your router is working correctly. Move the Echo Dot closer to your router. Restart your router and the Echo Dot. Use the Alexa app to reconfigure Wi-Fi settings.
Audio quality is poor or no sound.	Adjust the volume using voice commands or the buttons on top of the device. If connected to external speakers, check their power and volume. Ensure the 3.5mm cable is fully inserted or Bluetooth connection is stable.
Alexa is not understanding commands.	Speak clearly and directly to the device. Reduce background noise. Ensure you are using the correct wake word ("Alexa"). Check your device's language setting in the Alexa app.

SPECIFICATIONS

Model: Amazon Echo Dot (2nd Generation)

Connectivity: Dual-band Wi-Fi (802.11a/b/g/n), Bluetooth, 3.5mm audio output

Microphones: 7 far-field microphones

Speaker: Built-in speaker

Power: EU Power Adapter included

Dimensions: Approximately 32 mm x 84 mm x 84 mm (1.3" x 3.3" x 3.3")

Weight: Approximately 163 grams (5.7 oz)

WARRANTY AND SUPPORT

Warranty Information


Your Amazon Echo Dot (2nd Generation) is covered by a limited warranty. For detailed information regarding warranty terms and conditions, please refer to the warranty card included with your product or visit the official Amazon support website.

Customer Support

For further assistance, technical support, or to report issues not covered in this manual, please visit the Amazon Devices Support page on the official Amazon website or contact Amazon Customer Service directly. Have your device's serial number ready for faster service.

© 2024 Amazon. All rights reserved.

Documents - Amazon - Echo Dot (2. Generation)

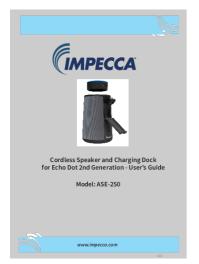

[pdf] User Manual Instructions Guide Warranty

Portable Charging Dock Manual MAIN COPY cdr PRAISEPAUL Cordless Speaker and for Echo Dot 2nd General Features Generation sold separately Turn your into a portable device ASE 250 EN ES FR W v1 5 s3 amazonaws magento luzerne user guide |||

Cordless Speaker and Charging Dock for Echo Dot 2nd Generation - User's Guide Model: ASE-250 www.impecca.com v1.5 ENGLISH ESPAOL FRANAIS TABLE OF CONTENTS Safety Instructions Maintenance 1 What's in the Box 2 Product Specifics 3 Connecting your Echo Dot 4 Cautions / Indication 5 Cu...

lang:en score:24 filesize: 8.24 M page_count: 25 document date: 2018-07-16



[pdf] Decleration of Conformity

document ie01falb Giessen 08 02 2023 Declaration of RoHS conformity Dear ladies Feb $8 \cdot 23179A$ InLine® Wall mount for Amazon Echo Dot 2 Generation is compliant according to Directive 2011 65 EU and 2015 863 The following EN intos de files Dokumente |||

Giessen, 08/02/2023 Declaration of RoHS conformity Dear ladies and gentlemen, herewith we confirm that our product 23179A InLine Wall mount for Amazon Echo Dot 2. Generation is compliant according to Directive 2011/65/EU and 2015/863/EU. The following substances are not included above specified c...

lang:en score:20 filesize: 95.13 K page_count: 1 document date: 2023-08-02

Bluetooth Low Energy(BLE) Mesh Smart Plug

[pdf] Quick Start Guide Troubleshooting Guide Guide

761558296@qq Bluetooth Low Energy BLE Mesh Smart Plug 7 may 2025 — Quick Start Guide Video Page Troubleshooting 1 Check that your plug is within 30 ft 9 m of Alexa Echo 2 Set the plugs one by do not pair 916Qj4lwGGL ref dp product quick view media amazon images I |||

Bluetooth Low Energy BLE Mesh Smart Plug Works exclusively with Alexa Alexa Echo Required Rated Voltage Rated Current AC Frequency Max Power Working Temperature Alexa App AC 120V-220V 10A-16A Resistive Max 50-60Hz 1200W -20 -40/-4 - 104 The Alexa app is compatible with Fire OS, Android, and iO...

lang:en score:14 filesize: 979.94 K page_count: 72 document date: 2024-07-01

Ihr Echo Dot einrichten

Sie können ihr Echo Dot an den verschiedensten Orten aufstellen, z. B. auf der Küchentheke, im Wohnzimmer, auf dem Nachtlach oder überall dort, wo Sie sich einen syrachspesteuerten Computer wünsthen. Echo Dot kann auch chine andere Alexa-Geräte verwendst werden.

Bevor Sie Ihr Echo Dot und den Alexa Volce Service erstmalig verwenden, stellen Sie eine Verbindung mit einem WLAN Nettwerk her und melden Sie das Geräf über die Alexa App bei Ihrem Amazon-Konto an. Führen Sie dazu die folgenden Schritte aus

Probleme bei der Armeidung können off durch falsche Passwörter verursacht werden. Wenn Sie einen Passwortfehler erhalten oder Ihr Passwort vergessen haben, können Sie einen personalisierten Link zum Zurücksetzen des Passwortes offenden.

Passwort vergessen

. Laden Sie die Alexa App herunter und melden Sie sich an.

Mit der kosteniosen Alexa App können Sie ihr Gerät einrichten und Wecker, Musik, Einkaufsisten und weitere Furktionen verwalten. Die Alexa App gibt es für Smartphones und Tablets mit:

- Fire OS 3.0 oder höher
- Android 4.4 oder höh iOS 8.0 oder höher

Um die Alexa App herunterzuladen, rufen Sie auf ihrem Mobilgerät den Appstore auf und suchen Sie nach "Alexa App". Wählen Sie die App aus und laden Sie sie herunter.

Alternativ können Sie auf einem Computer mit WLAN die Seite https://alexa.ammzon.de in Safari, Chrome, Firefox, Microsoft Edge oder internet Explorer (10 oder höher) aufzurufen.

Schalten Sie den Echo Dot ein.

latzieren Sie den Echo Dot an einem zentralen Ort (mit mindestens 20 cmb batand von Wänden und Fenstern). Schließen Sie das mitgeleferte Nettet m Echo Dot an und seeken Sie den Stecker in eine Steckdose. Der Lichtfelig uf dem Echo Dot wird zuerst blau und danach orange. Wenn das Licht zu range wechselt, werden Sie von Alexa begrüßt.

Anmerkung: Über andere USB-Netzteile (wie Smartphone-Zubehör) erhäl der Echo Dot mödlicherweise zu wenig Strom

Notice of the second se

[pdf] User Manual

Microsoft Word Dokument4 Katharina Bedienungsanleitung Amazon Echo Dot bedienungsanleitung24 de file 1 1523002529 4345 bedienungsanleitung preview |||

Ihr Echo Dot einrichten Sie knnen Ihr Echo Dot an den verschiedensten Orten aufstellen, z. B. auf der Kchentheke, im Wohnzimmer, auf dem Nachttisch oder berall dort, wo Sie sich einen sprachgesteuerten Computer wnschen. Echo Dot kann auch ohne andere Alexa-Gerte verwendet werden. Bevor Sie Ihr Echo ...

lang:de score:12 filesize: 83.8 K page_count: 8 document date: 2018-04-06