

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [AEG](#) /

> [AEG L9WS99ÖKO Washer-Dryer Instruction Manual](#)

AEG L9WS99ÖKO

AEG L9WS99ÖKO Washer-Dryer

INSTRUCTION MANUAL

Introduction

Thank you for choosing the AEG L9WS99ÖKO Washer-Dryer. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your appliance. Please read these instructions carefully before using the appliance and keep them for future reference. Proper use and care will ensure optimal performance and extend the lifespan of your washer-dryer.

Safety Information

Always follow basic safety precautions when using any electrical appliance. This section outlines important safety guidelines to prevent injury and damage.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded outlet. Do not use extension cords or adapters. Disconnect power before any maintenance or cleaning.
- **Water Safety:** Ensure all water connections are secure to prevent leaks. Do not operate the appliance if there is visible water leakage.
- **Child Safety:** Keep children and pets away from the appliance during operation. Do not allow children to play with the controls.
- **Installation:** The appliance must be installed on a firm, level surface. Ensure adequate ventilation around the appliance.
- **Flammable Materials:** Do not wash or dry items that have been soiled with flammable substances (e.g., cooking oil, gasoline).
- **Maintenance:** Only perform maintenance tasks described in this manual. For complex repairs, contact qualified service personnel.

Product Overview

The AEG L9WS99ÖKO is a versatile front-loading washer-dryer designed for efficient laundry care. It combines washing and drying functions in a single unit, offering convenience and performance.



Image 1: Control panel of the AEG L9WS99ÖKO Washer-Dryer. This image displays the main rotary selector for programs, the digital LED display showing cycle information, and various touch buttons for additional functions and settings. The AEG brand logo and 'Heatpump Technology' are visible on the left.

Control Panel Features:

- **Program Selector Dial:** Used to select the desired wash or dry program.
- **LED Display:** Shows program duration, remaining time, error codes, and selected options.
- **Touch Controls:** Buttons for functions such as temperature selection, spin speed, delay start, extra rinse, and drying options.
- **Detergent Dispenser:** Located on the top left, for adding detergent and fabric softener.

Installation

Proper installation is crucial for the safe and efficient operation of your appliance. It is recommended that installation be performed by a qualified technician.

Unpacking:

- Remove all packaging materials, including polystyrene blocks and protective film.
- Remove the transport bolts from the rear of the appliance. Keep them for future transport.

Placement:

- Place the appliance on a solid, level floor.
- Ensure there is sufficient space around the appliance for ventilation. Dimensions: 600 mm (width) x 639 mm (depth) x 870 mm (height).

Leveling:

Adjust the adjustable feet at the bottom of the appliance to ensure it is perfectly level and stable. An unlevel appliance can cause excessive vibration and noise.

Water Connection:

- Connect the cold water inlet hose to a cold water tap with a 3/4-inch thread.
- Ensure the hose is securely tightened to prevent leaks.

Drain Connection:

- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.
- The drain hose should be positioned at a height between 60 cm and 100 cm from the floor.

Electrical Connection:

- Plug the appliance into a grounded electrical outlet.
- Ensure the power supply matches the appliance's requirements: 230 V AC, 10 A, 2200 W.
- Do not use adapter plugs or extension cords.

Operating Instructions

1. Preparing Laundry:

- Sort laundry by fabric type, color, and degree of soiling.
- Check garment care labels for washing and drying instructions.
- Empty pockets and close zippers and fasteners.
- Load laundry into the drum, ensuring not to overload. The maximum washing capacity is 9 kg, and drying capacity is 6 kg.

2. Adding Detergent and Additives:

- Open the detergent dispenser drawer.
- Add the appropriate amount of detergent to the main wash compartment.
- Add fabric softener to the designated compartment (if desired).
- Close the dispenser drawer gently.

3. Selecting a Program:

Turn the Program Selector Dial to choose the desired wash or wash&dry program. The LED display will show the default settings for the selected program.

Available programs include:

- **Cotton:** For normally soiled cotton items.
- **Synthetics:** For synthetic or mixed fabric items.
- **Delicate/Silk:** For delicate items requiring gentle care.
- **Wool/Hand Wash:** For woolens and hand-washable items.
- **Eco:** Energy-efficient program for cottons.
- **Anti-Allergy:** For items requiring thorough rinsing to remove allergens.
- **Steam:** For refreshing clothes and reducing wrinkles.
- **Quick Dry:** For fast drying of small loads.
- **Cotton Dry:** For drying cotton items.
- **Synthetic Dry:** For drying synthetic items.

4. Adjusting Settings:

After selecting a program, you can modify settings using the touch controls:

- **Temperature:** Adjust the wash temperature.
- **Spin Speed:** Select the desired spin speed (up to 1600 RPM).
- **Rinse Plus:** Adds an extra rinse cycle for better detergent removal.
- **Delay Start:** Set a delayed start time for the program.
- **Drying Level:** For wash&dry programs, select the desired drying level (e.g., cupboard dry, iron dry).

5. Starting the Program:

Press the Start/Pause button to begin the selected program. The door will lock, and the cycle will commence.

6. End of Cycle:

Once the program is complete, the appliance will signal with an audible alert, and the door will unlock. Remove laundry promptly to prevent wrinkles.

Maintenance and Care

Regular cleaning and maintenance ensure the longevity and optimal performance of your AEG L9WS99ÖKO washer-dryer.

Cleaning the Exterior:

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Cleaning the Detergent Dispenser:

- Pull out the detergent dispenser drawer completely.
- Remove any removable parts and rinse them under running water.
- Clean the inside of the dispenser housing with a brush.
- Reassemble and reinsert the dispenser drawer.

Cleaning the Drum:

Periodically run a maintenance wash cycle (e.g., a hot cotton wash with no laundry and a descaling agent) to clean the drum and internal components.

Cleaning the Drain Filter:

The drain filter should be cleaned regularly to prevent blockages. Refer to the appliance's front panel for the filter location, typically behind a small access door at the bottom.

- Place a shallow container under the filter to catch any residual water.
- Carefully unscrew and remove the filter.
- Clean the filter under running water, removing any lint or debris.
- Screw the filter back in securely.

Door Seal:

Wipe the door seal after each wash to remove any lint or moisture, preventing mold and odors.

Troubleshooting

If you encounter issues with your appliance, consult this section before contacting service. Many common problems can be resolved easily.

Problem	Possible Cause	Solution
Appliance does not start.	No power supply; door not closed properly; program not selected.	Check power plug and fuse; ensure door is firmly closed; select a program and press Start.
Water leakage.	Loose hose connections; clogged drain filter; excessive detergent.	Check and tighten water inlet/drain hoses; clean drain filter; use correct detergent dosage.
Excessive vibration/noise.	Appliance not level; transport bolts not removed; uneven load.	Adjust leveling feet; ensure transport bolts are removed; redistribute laundry in the drum.
Poor washing results.	Overloading; incorrect program/temperature; insufficient detergent.	Reduce load size; select appropriate program/temperature; use correct detergent amount.
Drying not effective.	Overloading; incorrect drying program; lint filter clogged.	Reduce load size; select appropriate drying program; clean the lint filter.

If the problem persists after attempting these solutions, please contact AEG customer service or a qualified technician.

Specifications

Model Number	914 605 922
Type	Freestanding Front-Load Washer-Dryer
Washing Capacity	9 kg
Drying Capacity	6 kg
Maximum Spin Speed	1600 RPM
Energy Efficiency Class (Washing)	A
Washing Performance Class	A
Annual Energy Consumption (Washing)	154 kWh
Energy Consumption (Wash & Dry)	3.64 kWh/cycle
Annual Water Consumption (Washing)	15600 L
Water Consumption (Wash & Dry)	80 L/cycle
Dimensions (W x D x H)	600 mm x 639 mm x 870 mm
Weight	98 kg (216.05 lbs)
Noise Level (Spin)	75 dB

Power Supply	230 V AC, 10 A, 2200 W
Motor Type	Brushless

Warranty and Support

For information regarding your product's warranty, please refer to the warranty card provided with your appliance or visit the official AEG website. For technical support, spare parts, or service requests, please contact AEG customer service. When contacting support, please have your appliance's model number (L9WS99ÖKO) and serial number ready.

AEG Customer Service: Refer to your local AEG contact information or the official AEG website for support details.