

MoKo 4335021371

MoKo Universal Active Stylus Pen

Model: 4335021371

INTRODUCTION

Thank you for choosing the MoKo Universal Active Stylus Pen. This 2-in-1 capacitive stylus is designed to provide a precise and natural writing and drawing experience on various touchscreen devices. This manual will guide you through the setup, operation, and maintenance of your new stylus.

PRODUCT FEATURES

- **2-in-1 Design:** Features a precise 1.5mm fine metal point for detailed writing and drawing, and a sensitive rubber tip for general navigation and protection against scratches and fingerprints. The rubber tip can be used when the stylus battery is depleted.
- **Natural Writing & Drawing:** Constructed with a slim aluminum alloy body and a polished surface, offering a comfortable grip similar to a traditional pen.
- **Rechargeable Battery:** Provides up to 8 hours of continuous use on a single one-hour charge via the included Micro USB cable. The stylus automatically powers off after 30 minutes of inactivity to conserve battery.
- **Integrated Clip:** A durable, gently curved clip made from high-quality anodized aluminum allows for easy attachment to tablet covers or pockets, enhancing portability.

Friendly-Interaction

Away From Scratches & Smudges



Image: The MoKo Stylus Pen highlighting its dual-tip design, featuring a 1.5mm fine point and a soft rubber tip for versatile use.

Charging Status, Clean Readouts.

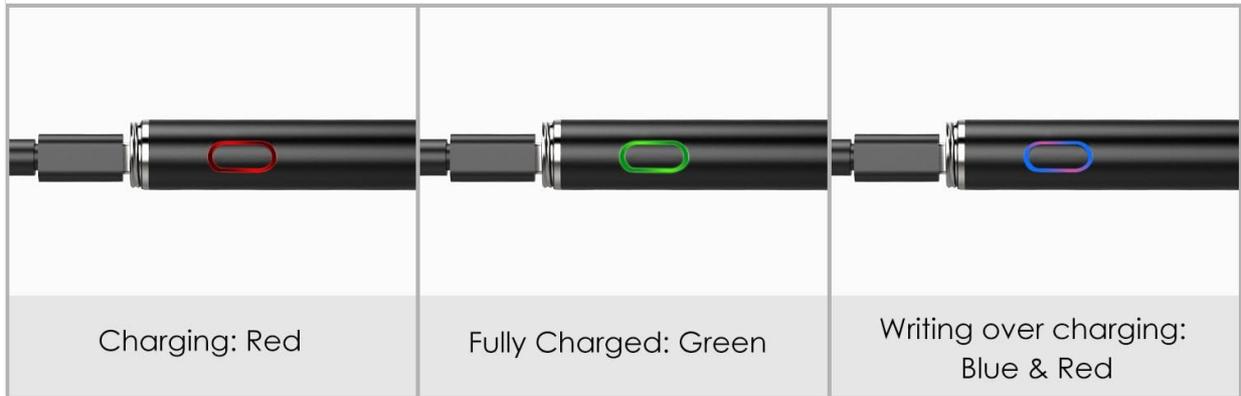


Image: The MoKo Stylus Pen demonstrating its integrated clip, allowing for convenient portability by securing it to clothing or a tablet case.

SETUP

- 1. Initial Charge:** Before first use, fully charge the stylus using the provided Micro USB cable. Connect the cable to the charging port on the stylus and a USB power source.
- 2. Power On:** Press the On/Off button located on the stylus body to turn it on. The indicator light will illuminate.
- 3. Ready to Use:** No Bluetooth pairing is required. The stylus is ready for immediate use on compatible touchscreen devices.

OPERATING INSTRUCTIONS

The MoKo Universal Active Stylus Pen offers two distinct tips for different uses:

- **Fine Point Tip:** Use this tip for precise writing, drawing, and detailed tasks. Its 1.5mm fine point provides accuracy for intricate work.
- **Rubber Tip:** The soft rubber tip is ideal for general navigation, tapping, and protecting your screen from scratches and smudges. It also serves as a backup if the active fine point tip runs out of battery.

Simply touch the desired tip to your touchscreen device to begin interaction. The stylus is designed to mimic the natural feel of a pen on paper, enhancing your digital experience.

Carrying Clip

Always keep it handy and make portability much easier.



Image: A user actively drawing on a tablet screen with the MoKo Stylus Pen, demonstrating its application for creative tasks.

CHARGING THE STYLUS

To charge your MoKo Active Stylus Pen:

1. Locate the Micro USB charging port on the stylus.
2. Connect the provided Micro USB cable to the stylus and a standard USB power adapter (not included) or a computer's USB port.
3. The indicator light will show the charging status:
 - **Red:** Charging
 - **Green:** Fully Charged
 - **Blue & Red:** Writing while charging
4. A full charge takes approximately 1 hour and provides up to 8 hours of continuous use.
5. The stylus will automatically power off after 30 minutes of no use to save battery.

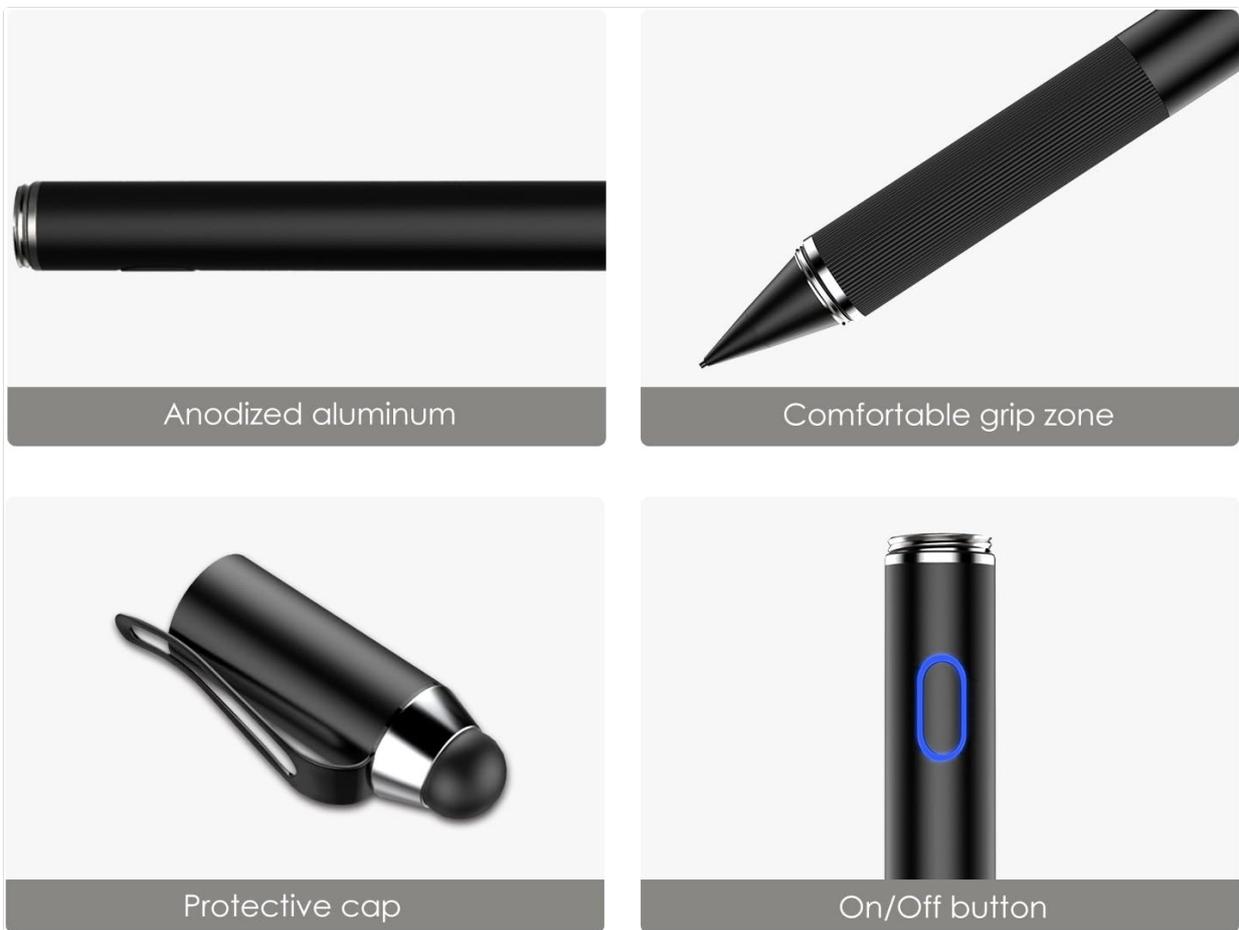


Image: Visual representation of the MoKo Stylus Pen's charging status indicators, showing different LED colors for charging, fully charged, and active use while charging.

COMPATIBILITY

The MoKo Universal Active Stylus Pen is compatible with a wide range of touchscreen tablets and smartphones, including but not limited to:

- iPhone iPad Series (e.g., iPhone 13 / 12 / X / 8 / 8 Plus / 7 / 7 Plus)
- All-New iPad Pro 11" / 12.9" 2022, iPad Pro 12.9 Inch 2020, iPad 9.7 2017, iPad Pro 9.7 Inch, iPad Pro 10.5 Inch (2017)
- iPad 1/2/3/4, iPad mini 1/2/3/4, iPad Air, iPad Air 2
- Samsung Galaxy devices
- Huawei, HTC, Google, LG, and other touchscreen devices.

Note: This stylus is **not compatible** with Surface Pro tablets.

MAINTENANCE

To ensure the longevity and optimal performance of your stylus, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the stylus body and tips with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the stylus in a safe place when not in use to prevent damage to the tips. The integrated clip can help secure it.
- **Protection:** The rubber tip helps protect your device screen. Avoid excessive force when using either tip.
- **Charging:** Do not overcharge the battery. Disconnect the charging cable once the stylus is fully charged.

TROUBLESHOOTING

Stylus is not responding:

Ensure the stylus is powered on. Check the battery level and charge the stylus if necessary. If the fine point tip is not working, try using the rubber tip as a temporary solution or while charging.

Inaccurate or skipping input:

Ensure your device screen is clean and free of debris. Some screen protectors may affect stylus performance. Ensure your hand is not resting on the screen in a way that interferes with capacitive input (palm rejection is not a universal feature for all devices with this stylus type).

Stylus not charging:

Verify that the Micro USB cable is securely connected to both the stylus and the power source. Try a different USB port or power adapter. Ensure the charging port on the stylus is clean.

SPECIFICATIONS

Model Number:	4335021371
Product Dimensions:	6.3 x 0.4 x 0.4 inches (160 x 10.7 x 10.7 mm)
Item Weight:	0.9 ounces (26g)
Material:	Aluminum, Metal
Battery Life (Continuous Use):	Up to 8 hours
Charging Time:	Approx. 1 hour
Auto Power-Off:	After 30 minutes of inactivity



Image: Detailed dimensions of the MoKo Stylus Pen, illustrating its length and width for reference.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official MoKo website or contact the retailer where you purchased the product. Keep your purchase receipt for warranty claims.