

[Manuals.plus](#) /

> [Inventum](#) /

> Inventum VVW6025A Freestanding Dishwasher User Manual

Inventum VVW6025A

Inventum VVW6025A Freestanding Dishwasher

USER MANUAL

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your Inventum VVW6025A freestanding dishwasher. Please read this manual thoroughly before using the appliance and keep it for future reference. Proper use and care will ensure optimal performance and extend the lifespan of your dishwasher.

The Inventum VVW6025A is a full-size (60 cm) freestanding dishwasher designed for household use, offering 15 place settings and an A++ energy efficiency rating.

2. SAFETY INFORMATION

Always adhere to the following safety precautions to prevent injury or damage to the appliance.

- Ensure the dishwasher is properly grounded before use.
- Do not operate the dishwasher if the power cord is damaged.
- Keep children and pets away from the dishwasher during operation.
- Only use detergents and rinse aids specifically designed for automatic dishwashers.
- Do not open the door during a wash cycle, as hot water and steam may escape.
- Sharp items, such as knives, should be loaded with the sharp points down to prevent injury.
- Disconnect the appliance from the power supply before performing any cleaning or maintenance.

3. PRODUCT OVERVIEW



This image shows the front of the Inventum VVW6025A freestanding dishwasher. It is a white, full-size appliance with a control panel at the top. The control panel features a digital display, push buttons, and a rotary knob for program selection. The Inventum brand logo is visible above the handle.

The Inventum VVW6025A features a user-friendly control panel with intuitive buttons and a rotary knob for program selection. The interior is designed to accommodate 15 place settings, including a dedicated cutlery basket for efficient cleaning.

4. SETUP AND INSTALLATION

Follow these steps for proper installation of your dishwasher.

1. **Unpacking:** Carefully remove all packaging materials. Inspect the dishwasher for any transit damage.
2. **Positioning:** Place the dishwasher on a flat, stable surface. Ensure there is adequate space for door opening and ventilation. The appliance dimensions are 59.8 cm (width) x 59.8 cm (depth) x 85 cm (height).
3. **Water Connection:** Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is secure and leak-free.
4. **Drain Connection:** Connect the drain hose to a suitable drain pipe or sink trap. Ensure the hose is not kinked or obstructed.
5. **Electrical Connection:** Plug the dishwasher into a grounded electrical outlet. Verify that the power supply matches the specifications on the rating label.
6. **Leveling:** Adjust the leveling feet at the bottom of the dishwasher to ensure it is perfectly level. This prevents vibrations and ensures proper door closure.
7. **First Use:** Before the first wash, fill the salt dispenser and rinse aid dispenser according to the instructions in the operating section.

5. OPERATING INSTRUCTIONS

This section details how to use your dishwasher for optimal cleaning results.

5.1 Loading the Dishwasher

- Scrape off large food particles from dishes before loading.
- Place larger items in the lower basket and smaller, delicate items in the upper basket.
- Ensure dishes do not block the spray arms.
- Load cutlery into the cutlery basket with handles down for forks and spoons, and handles up for knives.

5.2 Adding Detergent and Rinse Aid

- Open the detergent dispenser and add the recommended amount of dishwasher detergent. Close the dispenser lid securely.
- Fill the rinse aid dispenser with rinse aid until the indicator shows full. Adjust the rinse aid setting if streaks or spots appear on dishes.
- If your water is hard, fill the salt dispenser with dishwasher salt. Refer to the water hardness settings in the full manual.

5.3 Program Selection and Start

The dishwasher offers multiple wash programs. Use the rotary knob to select your desired program and the push buttons for additional options.

- **Intensive:** For heavily soiled dishes, pots, and pans.
- **Normal:** For normally soiled daily dishes.
- **Eco:** Energy-saving program for normally soiled dishes.
- **Glass:** For delicate glassware.
- **90 min:** Quick wash for lightly soiled dishes.
- **Rapid:** Very quick wash for lightly soiled dishes without drying.

After selecting the program, press the Start button to begin the cycle. The display will show the remaining time.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and efficiency of your dishwasher.

- **Cleaning the Filters:** Regularly check and clean the coarse, fine, and micro filters located at the bottom of the dishwasher tub. Remove food particles and rinse under running water.
- **Cleaning the Spray Arms:** Periodically check the spray arm nozzles for blockages. Remove any debris with a toothpick or similar tool.
- **Cleaning the Interior:** Wipe the interior surfaces with a damp cloth after each use. For deeper cleaning, run an empty cycle with a dishwasher cleaner.
- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Door Seal:** Clean the door seal regularly to remove food residue and prevent odors.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	No power; Door not closed properly; Program not selected.	Check power connection; Ensure door is latched; Select a program and press Start.
Dishes not clean	Improper loading; Clogged spray arms; Insufficient detergent; Clogged filters.	Reload dishes correctly; Clean spray arms; Add more detergent; Clean filters.
Water not draining	Clogged drain hose; Clogged filter; Drain pump issue.	Check and clear drain hose; Clean filters; Contact service if pump is faulty.
Excessive noise	Dishwasher not level; Items hitting spray arms; Foreign object in pump.	Level the appliance; Rearrange dishes; Check for foreign objects.
Streaks or spots on dishes	Insufficient rinse aid; Hard water; Incorrect detergent dosage.	Refill rinse aid; Adjust rinse aid setting; Use appropriate detergent.

8. SPECIFICATIONS

Technical data for the Inventum VVW6025A dishwasher.

Feature	Value
Model Name	VVW6025A
Design Type	Freestanding
Color	White
Product Dimensions (W x D x H)	59.8 x 59.8 x 85 cm
Item Weight	53 kg
Place Settings	15

Feature	Value
Energy Efficiency Class	A++
Annual Energy Consumption	267 kWh
Energy Consumption per Cycle	0.94 kWh
Water Consumption per Cycle	9 L
Noise Level	45 dB
Drying Efficiency Class	A
Washing Efficiency Class	A
Control Type	Push Button, Rotary Knob
Material	Stainless Steel (interior)
Included Components	Cutlery basket, User Manual

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your appliance or visit the official Inventum website. Keep your proof of purchase for any warranty claims.

If you encounter issues that cannot be resolved using the troubleshooting guide, please contact Inventum customer support. Have your model number (VVW6025A) and purchase date ready when contacting support.

© 2024 Inventum. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B076CWZYY5>

More documents and user manuals: <https://manuals.plus/>