

GENERAL TRADE GNR12069

GENERAL TRADE L.DICTROLUX GNR12069 Coffee Grinder User Manual

Model: GNR12069 | Brand: GENERAL TRADE

[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Safety Instructions](#) [Product](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Retain this manual for future reference.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- This appliance is for household use only.
- Do not use the appliance for anything other than its intended use.
- The grinding bowl and blades are sharp. Handle with care.

2. PRODUCT OVERVIEW

The GENERAL TRADE L.DICTROLUX GNR12069 is an electric coffee grinder designed for grinding whole coffee beans. It features a powerful 150W motor and a durable aluminum body.



Figure 1: The GENERAL TRADE L.DICTROLUX GNR12069 electric coffee grinder. This image shows the overall design of the appliance, including its main body and lid.

Components:

1. Motor Unit / Base
2. Grinding Bowl (integrated)
3. Stainless Steel Blades
4. Transparent Lid
5. Power Cord with Plug
6. On/Off Pulse Button

3. SETUP

1. **Unpack the Grinder:** Carefully remove all packaging materials from the coffee grinder.
2. **Inspect for Damage:** Check the appliance for any signs of damage during transit. Do not use if damaged.
3. **Clean Before First Use:** Wipe the exterior of the motor unit with a damp cloth. Clean the grinding bowl and lid with a damp cloth and dry thoroughly. Ensure no water enters the motor unit.
4. **Placement:** Place the grinder on a stable, flat, and dry surface, away from water sources and heat.

5. **Power Connection:** Ensure the grinder is unplugged before adding coffee beans.

4. OPERATING INSTRUCTIONS

Follow these steps to grind coffee beans:

1. **Add Coffee Beans:** Open the transparent lid. Add the desired amount of whole coffee beans into the grinding bowl. Do not overfill; ensure the lid can close properly.
2. **Secure the Lid:** Place the transparent lid firmly onto the grinding bowl. Ensure it is securely locked in place to prevent spillage and ensure safe operation.
3. **Plug In:** Insert the power plug into a suitable electrical outlet.
4. **Grind:** Press and hold the On/Off pulse button. The blades will start rotating, grinding the coffee beans.
5. **Monitor Grinding:** Observe the consistency of the grind through the transparent lid. Grind for short bursts (e.g., 5-10 seconds) and check the consistency. Repeat until the desired fineness is achieved. For a coarser grind, grind for a shorter duration; for a finer grind, grind for a longer duration.
6. **Stop Grinding:** Release the On/Off pulse button to stop the grinding process.
7. **Unplug and Remove Grounds:** Unplug the grinder from the power outlet. Carefully remove the lid and pour the freshly ground coffee into a container.

Note: Do not operate the grinder continuously for more than 30 seconds. Allow a short break between grinding cycles to prevent overheating.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee grinder.

Cleaning Instructions:

1. **Unplug:** Always ensure the grinder is unplugged from the power outlet before cleaning.
2. **Empty Grinding Bowl:** Remove all remaining coffee grounds from the grinding bowl.
3. **Clean Blades and Bowl:** Use a small brush (e.g., a stiff pastry brush or a dedicated cleaning brush) to remove coffee particles from the blades and the interior of the grinding bowl. Wipe with a damp cloth and dry thoroughly.
4. **Clean Lid:** Wash the transparent lid with warm, soapy water, rinse, and dry completely.
5. **Clean Motor Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not immerse the motor unit in water or any other liquid.
6. **Drying:** Ensure all parts are completely dry before reassembling or storing the grinder.

Important: The grinding bowl is integrated and not dishwasher safe. Do not attempt to remove it. Do not use abrasive cleaners or scouring pads, as they may damage the surfaces.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Grinder does not start.	Not plugged in. Lid not properly secured. Power outage.	Ensure the power cord is securely plugged into a working outlet. Check that the transparent lid is correctly placed and locked. Check your household's power supply.
Grinder stops during operation.	Overheating due to continuous use. Too many beans in the bowl.	Release the pulse button and allow the grinder to cool down for several minutes. Reduce the amount of coffee beans. Do not overfill.
Coffee grounds are inconsistent.	Insufficient grinding time. Uneven distribution of beans.	Grind for a longer duration, using short pulses. Gently shake the grinder during pauses (while unplugged) to redistribute beans, then continue grinding.
Burning smell.	Overheating. Motor strain.	Immediately unplug the grinder and allow it to cool down completely. Do not use until the smell dissipates. If the smell persists, contact customer support.

7. SPECIFICATIONS

- Model:** GNR12069
- Brand:** GENERAL TRADE
- Power:** 150W
- Material:** Aluminum (body)
- Color:** White
- Power Source:** AC
- Operation Mode:** Manual (pulse button)
- Special Feature:** Integrated coffee grinder
- Dishwasher Safe:** No (for main unit and grinding bowl)

8. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or inquiries regarding your GENERAL TRADE L.DICTROLUX GNR12069 coffee grinder, please contact your retailer or the GENERAL TRADE customer service department. Contact information can typically be found on the product packaging or the manufacturer's official website.

When contacting support, please have your product model number (GNR12069) and purchase date available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question