

GE 847975

GE StayBright 300-Count Warm White Mini LED Christmas String Lights Instruction Manual

Model: 847975

INTRODUCTION

This manual provides instructions for the safe and effective use of your GE StayBright 300-Count Warm White Mini LED Christmas String Lights. Please read all instructions carefully before installation and operation.

These LED string lights are designed for both indoor and outdoor seasonal decorative use. They feature warm white mini LED bulbs on a green wire, with a total lighted length of 74.5 feet (two 37.2 ft strands). Up to 20 sets can be connected end-to-end.

IMPORTANT SAFETY INSTRUCTIONS

• READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- This product is for decorative use only and is **NOT A TOY**. Keep out of reach of children.
- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper, or any material not part of the product when in use.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit condition. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit condition may be present and the product

should be discarded.

- Read and follow all instructions that are on the product or provided with the product.

SETUP AND INSTALLATION

Before installation, carefully uncoil the light string and inspect for any damage. Ensure all bulbs are securely seated.

Connecting Multiple Sets:

These lights feature an end-to-end plug system, allowing you to connect up to 20 identical GE LED sets. To connect, simply plug the end connector of one set into the fused plug of the next set. Ensure connections are secure to prevent moisture ingress, especially for outdoor use.

Placement:

Suitable for both indoor and outdoor applications. When installing outdoors, ensure the power source is a GFCI outlet. Avoid placing lights where they can be damaged by foot traffic or sharp objects.

OPERATING INSTRUCTIONS

Plug the light string into a standard electrical outlet. The lights are designed to provide a constant warm white illumination.

Remote Control (if applicable):

If your model includes a remote control, refer to the separate remote control instructions for details on changing light modes or settings. Otherwise, the lights will operate in a constant-on mode when plugged in.

MAINTENANCE

Bulb Replacement:

Replacement bulbs are included with your set. If a bulb burns out, carefully remove the old bulb by pulling it straight out and insert a new replacement bulb, ensuring it is fully seated. Always unplug the light string before attempting any bulb replacement.

Fuse Replacement:

This product is equipped with a fused plug for safety. If the entire string or a section of the string does not light up, the fuse may need replacement. Replacement fuses are included (2 x 3-amp fuses).

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
3. Remove fuse carefully.
4. Replace fuse only with 3 Amp, 125 Volt fuse (provided).
5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.

If the replacement fuse blows, a short-circuit condition may be present, and the product should be discarded.

TROUBLESHOOTING

If your GE StayBright LED Christmas String Lights are not functioning as expected, please refer to the following common issues and solutions:

- **Lights are completely out:** Check the power connection. Ensure the plug is fully inserted into a working outlet.

Inspect the fuse in the plug and replace if blown (refer to Maintenance section).

- **A section of lights is out or dimly lit:** This often indicates a loose or burnt-out bulb within that section. Carefully inspect each bulb and replace any that are loose or appear damaged. Ensure replacement bulbs are fully seated. The set includes 2 steady burning LEDs as spare parts.
- **Lights are flickering:** Check all connections, including end-to-end connections if multiple sets are linked. Ensure no wires are pinched or damaged.

SPECIFICATIONS

Feature	Detail
Brand	GE
Model Number	847975
Total LED Count	300 (150 LEDs per strand)
Light Color	Warm White
Wire Color	Green
Lighted Length (per set)	37.2 ft (11.3 m)
Total Lighted Length (2 strands)	74.5 ft
Socket Spacing	3 in (7.62 cm) between lights
Maximum Connected Sets	Up to 20 identical GE LED sets
Plug System	Double end add-on plus end connector
Fusing System	Fused plug (2 x 3-amp fuses)
Spare Parts Included	2 steady burning LEDs, (2) 3-amp fuses
Indoor/Outdoor Usage	Indoor/Outdoor
Power Source	Corded Electric
Special Feature	Weather Resistant
Controller Type	Remote Control (if applicable)
Material Type	Plastic
Item Weight	2.93 Pounds
Item Dimensions	7.2 x 5.6 x 10 inches (packaging)
UPC	803993910963

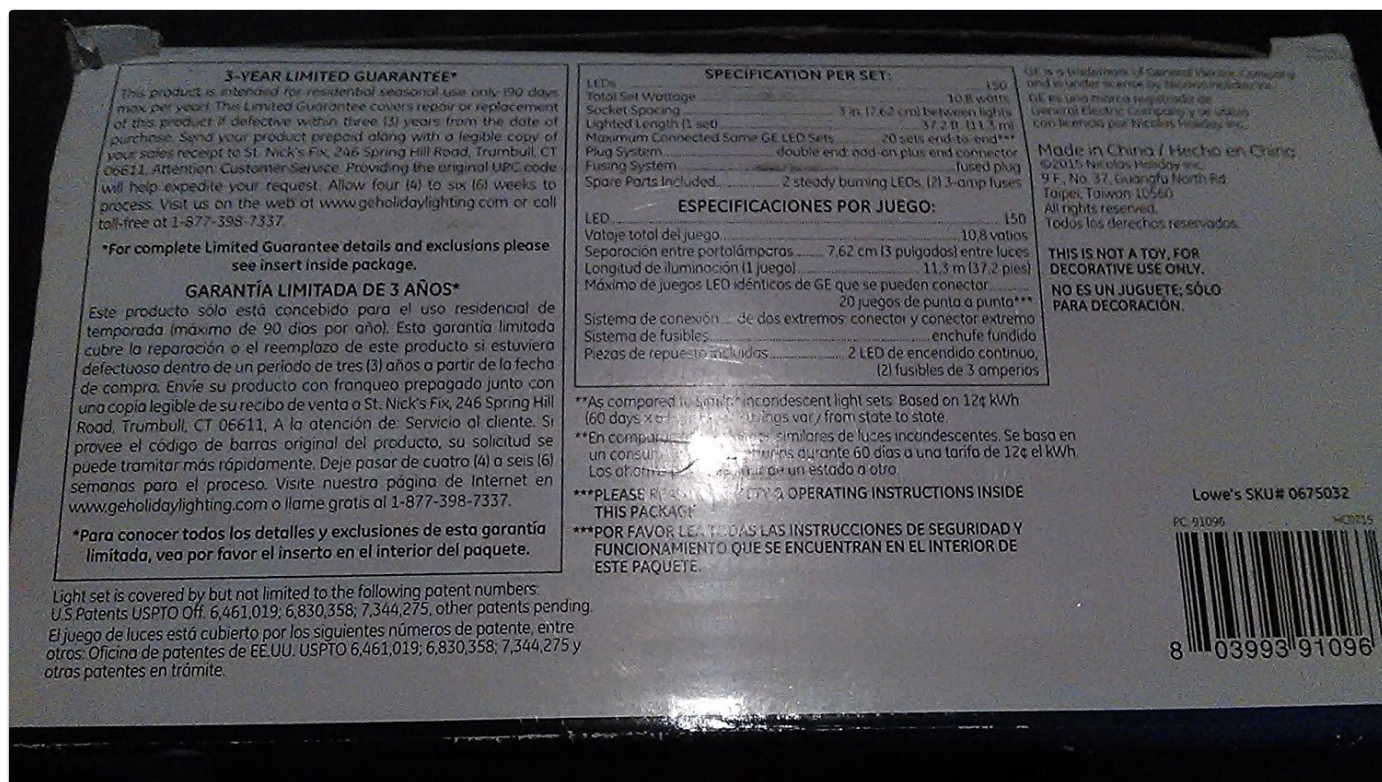


Image: Product packaging label detailing specifications and warranty information for the GE StayBright LED Christmas Lights.

3-YEAR LIMITED GUARANTEE

This product is intended for residential seasonal use only (maximum 90 days per year). This Limited Guarantee covers repair or replacement of this product if defective within three (3) years from the date of purchase.

To claim warranty service, send your product prepaid along with a legible copy of your sales receipt to:

St. Nick's Fix
246 Spring Hill Road
Trumbull, CT 06611
Attention: Customer Service

Providing the original UPC code will help expedite your request. Allow four (4) to six (6) weeks for processing. For complete Limited Guarantee details and exclusions, please see the insert inside the package.

SUPPORT AND CONTACT INFORMATION

For additional support or inquiries, please visit our website or contact customer service:

Website: www.geholidaylighting.com

Toll-Free: 1-877-398-7337

PATENT INFORMATION

This light set is covered by, but not limited to, the following U.S. Patent numbers: USPTO Off. 6,461,019; 6,830,358; 7,344,275, and other patents pending.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question