

[Manuals.plus](#) /

- › [Bonsenkitchen](#) /
- › Bonsenkitchen Handheld Milk Frother User Manual

Bonsenkitchen MF8712-NEW

Bonsenkitchen Handheld Milk Frother User Manual

Model: MF8712-NEW | Brand: Bonsenkitchen

1. INTRODUCTION

Thank you for choosing the Bonsenkitchen Handheld Milk Frother. This device is designed to help you effortlessly create rich, creamy froth for various beverages. Its compact and ergonomic design makes it convenient for daily use at home or while traveling. Please read this manual carefully before operation to ensure safe and optimal performance.



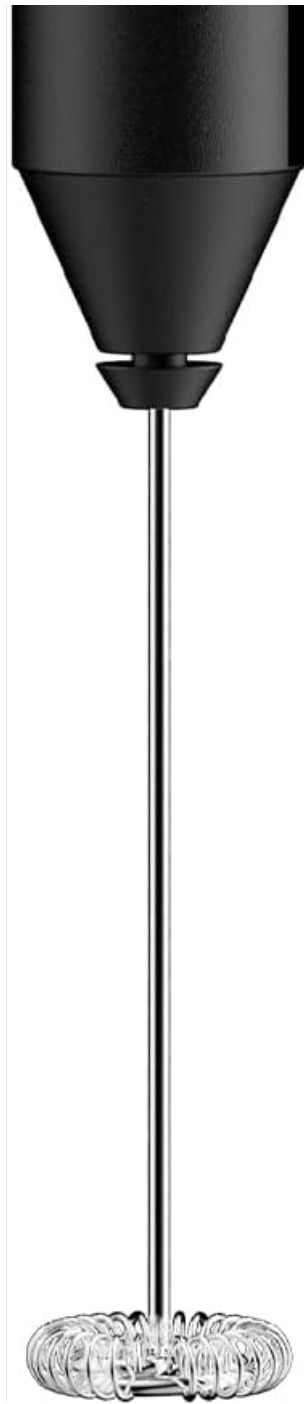


Image: Bonsenkitchen Handheld Milk Frother, black with a stainless steel whisk.

2. SAFETY INSTRUCTIONS

- Keep the frother out of reach of children.
- Do not immerse the main body of the frother in water or any other liquid. Only the stainless steel whisk is washable.
- Ensure hands are dry before handling the frother or batteries.
- Do not operate the frother near heat-sources or open flames.
- Remove batteries if the frother will not be used for an extended period.
- Use only the specified battery type (2 AA batteries). Do not mix old and new batteries or different types of batteries.
- Avoid touching the whisk while it is rotating.

3. PRODUCT COMPONENTS

- Main Body (Black, ABS Plastic)
- Stainless Steel Whisk
- One-Touch Power Button
- Battery Compartment (for 2 AA batteries, not included)

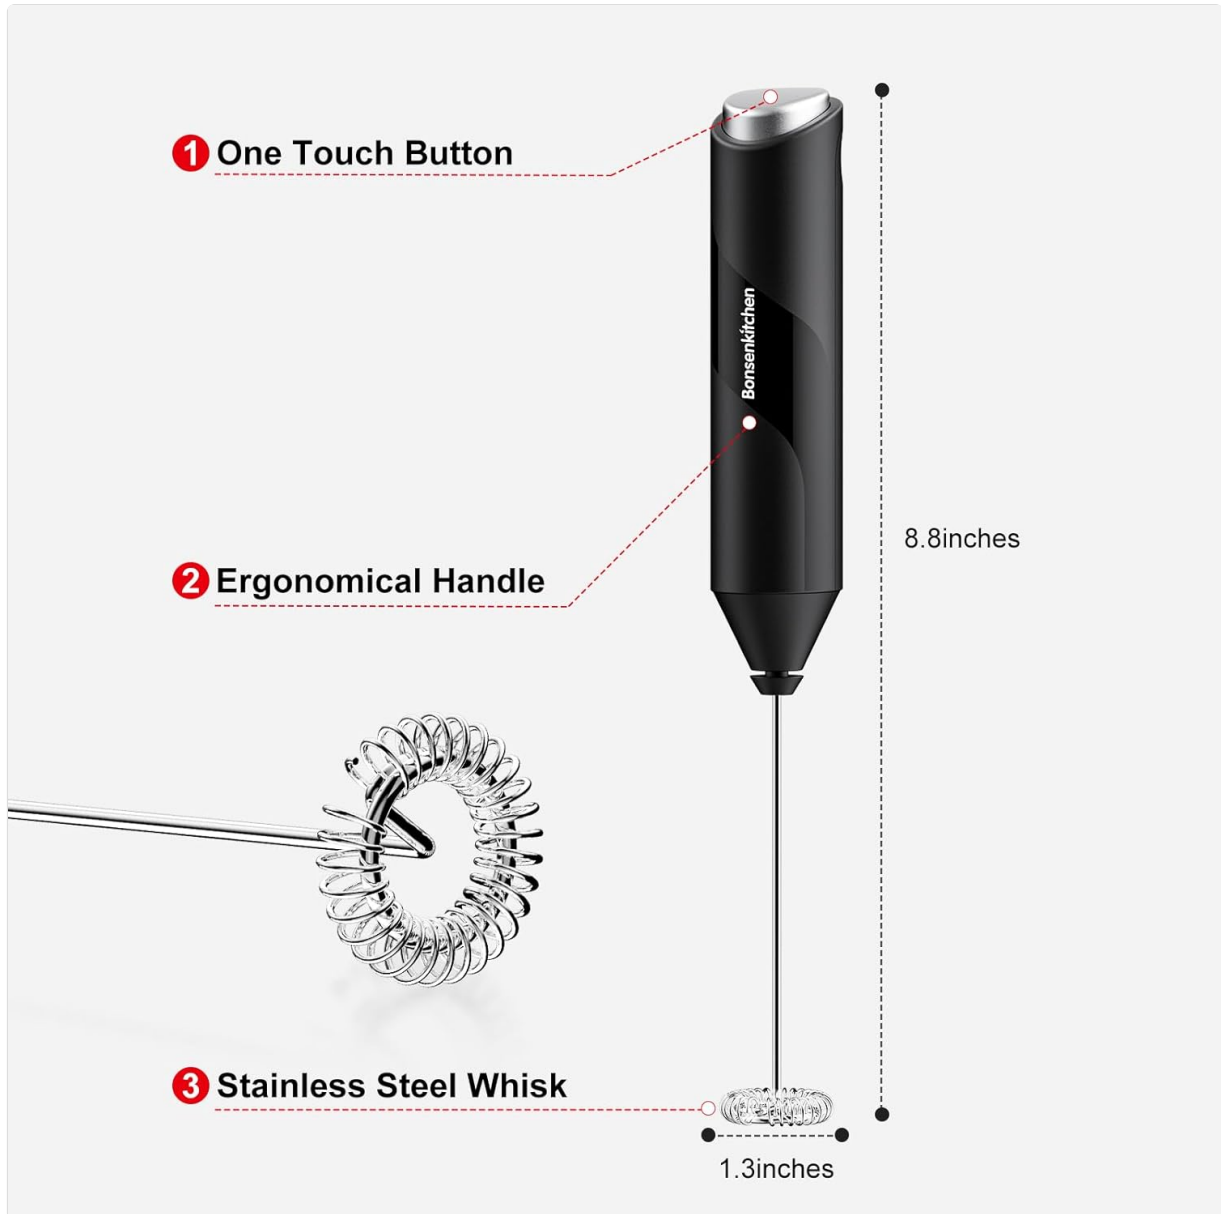


Image: Diagram illustrating the frother's one-touch button, ergonomic handle, and stainless steel whisk, with dimensions of 8.8 inches in height and 1.3 inches for the whisk diameter.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment cover on the frother's handle.
2. Push down the tab and slide off the battery cover.
3. Insert two AA batteries (not included) into the compartment. Ensure correct polarity: the positive terminal of the first battery (inside) faces downwards, while the positive terminal of the second battery (outside) faces upwards. A small strap is included to facilitate removal of the innermost battery.
4. Replace the battery cover securely.



Image: Visual guide for installing two AA batteries into the frother, showing the correct orientation and the removal strap.

5. OPERATING INSTRUCTIONS

5.1 General Operation

1. Insert the stainless steel whisk into your desired beverage.
2. Press and hold the one-touch button on the top of the frother to start rotation.
3. Move the frother up and down gently to create foam.
4. Release the button to stop the frother.

5.2 Making Rich Foam for Coffee

- **Milk Selection:** Fresh whole milk works best due to its higher milkfat content. 2% milk also yields good results.
- **Milk Temperature:** Heating the milk to approximately 60°C/140°F makes it easier to create rich foam.
- **Method:** Submerge the whisk into the milk. Press the button and move the frother up and down for about 15-20 seconds until desired foam consistency is achieved.



Image: A hand operating the Bonsenkitchen frother in a pitcher of milk, demonstrating how easy it is to press the button and create creamy foam.



Image: Instructions on milk selection, temperature, and frothing method for achieving rich foam, with an image of frothed coffee.

5.3 Versatile Applications

The Bonsenkitchen Handheld Milk Frother is not limited to just milk. It can also be used to mix a variety of beverages and powders, including:

- Matcha powder
- Nutritious protein shakes
- Milkshakes

- Hot chocolate
- Other powdered drinks

MULTIFUNCTION USE



Image: Display of various beverages like Hot Chocolate, Caramel Macchiato, Latte, Matcha, and Cappuccino, indicating the frother's versatile use.

6. CLEANING AND MAINTENANCE

Cleaning the frother is quick and easy:

1. After each use, simply place the stainless steel whisk under running water.
2. Briefly turn on the frother to allow the whisk to clean itself.
3. Wipe the main body with a damp cloth if needed. Do not immerse the main body in water.
4. Store the frother in a dry place.

Easy to Clean



Image: A hand holding the frother with its whisk submerged in water, demonstrating the easy cleaning process by simply turning it on under running water.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Frother does not turn on.	Batteries are dead or incorrectly installed.	Replace batteries with new AA batteries, ensuring correct polarity.
Frother rotation is weak.	Low battery power.	Replace batteries.
Milk does not froth well.	Milk type or temperature is not ideal.	Use fresh whole milk or 2% milk. Heat milk to 60°C/140°F for best results.

8. SPECIFICATIONS

- **Brand:** Bonsenkitchen
- **Model Name:** MF8712-NEW

- **Color:** Black
- **Material:** Stainless Steel, Plastic (ABS Body)
- **Product Dimensions:** 1.5"W x 9.4"H
- **Item Weight:** 3.2 ounces (approx. 0.2 Pounds)
- **Power Source:** 2 AA Batteries (NOT INCLUDED)
- **Wattage:** 10 watts
- **Special Features:** BPA-FREE, Lightweight, Easy to Use, Compact Design
- **UPC:** 742297916885
- **Country of Origin:** China



Image: Illustration highlighting the frother's 14000 RPM high rotation speed for creating rich and even foam, and indicating it requires 2 AA batteries (not included).

9. WARRANTY AND SUPPORT

Bonsenkitchen is dedicated to providing high-quality service. This product comes with a lifetime quality commitment and technical support. For any questions or concerns regarding your Bonsenkitchen Handheld Milk Frother, please contact our customer support team.

You can also refer to the official [User Manual \(PDF\)](#) for additional information.

