

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Emerio](#) /
- › [Emerio ECO 1.5L Rice Cooker Instruction Manual \(Model RCE-110118\)](#)

## Emerio RCE-110118

# Emerio ECO 1.5L Rice Cooker Instruction Manual (Model RCE-110118)

Your guide to safe and efficient operation of your Emerio Rice Cooker.

## INTRODUCTION

---

Thank you for choosing the Emerio ECO 1.5L Rice Cooker. This manual provides essential information for the safe and effective use of your appliance. Please read it thoroughly before first use and keep it for future reference.



Image: Front view of the Emerio ECO 1.5L Rice Cooker, showcasing its stainless steel housing, black base, glass lid, and control panel with indicator lights.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Always ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Close supervision is necessary when the appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- This appliance is intended for household use only.
- The inner pot has a non-stick coating. Avoid using metal utensils that could scratch the surface.

## PARTS DESCRIPTION

---

1. Glass Lid with handle
2. Stainless Steel Housing
3. Inner Cooking Pot (non-stick)
4. Control Panel with Cook/Warm indicator lights
5. Power Switch
6. Measuring Cup
7. Rice Spoon



Image: The Emerio ECO 1.5L Rice Cooker displayed with a bowl of cooked rice, chopsticks, and fresh vegetables, illustrating its use.



Image: The included measuring cup and rice spoon, essential tools for precise rice preparation.

## SETUP AND FIRST USE

---

### Before First Use:

- Remove all packaging materials and labels.
- Wash the inner cooking pot, glass lid, measuring cup, and rice spoon in warm, soapy water. Rinse thoroughly and dry completely.
- Wipe the exterior of the rice cooker housing with a damp cloth. Do not immerse the housing in water.
- Ensure the appliance is placed on a stable, level, heat-resistant surface.

## OPERATING INSTRUCTIONS

---

### Cooking Rice:

1. Using the provided measuring cup, measure the desired amount of rice. One cup of uncooked rice typically yields two cups of cooked rice.
2. Rinse the rice thoroughly under cold water until the water runs clear.

3. Place the rinsed rice into the inner cooking pot.
4. Add the appropriate amount of water. A general ratio is 1:1.5 (1 cup rice to 1.5 cups water), but this can vary based on rice type and desired consistency. Refer to the rice packaging for specific recommendations.
5. Place the inner cooking pot into the rice cooker housing. Ensure it is seated correctly.
6. Cover the pot with the glass lid.
7. Plug the power cord into a wall outlet.
8. Press the power switch (if present) to the "on" position.
9. Press the "Cook" switch or lever down. The "Cook" indicator light will illuminate.
10. The rice cooker will automatically switch to "Keep Warm" mode once the rice is cooked. The "Warm" indicator light will illuminate.
11. Allow the rice to rest in "Keep Warm" mode for 5-10 minutes after cooking for best results.
12. Unplug the appliance when serving is complete.



Image: Close-up view of the power switch located on the side of the Emerio rice cooker housing, showing the 'on' and 'off' positions.

## Keep Warm Function:

The rice cooker automatically switches to the "Keep Warm" function after the cooking cycle is complete. This function maintains the rice at an optimal serving temperature without overcooking. Do not leave rice in "Keep Warm" mode for extended periods (e.g., more than 12 hours) as it may affect texture and quality.

## CARE AND MAINTENANCE

---

### Cleaning:

- Always unplug the rice cooker and allow it to cool completely before cleaning.
- **Inner Cooking Pot and Lid:** Wash with warm, soapy water using a soft sponge or cloth. Rinse thoroughly and dry. The non-stick coating requires gentle care. Do not use abrasive cleaners or metal scouring pads.
- **Rice Spoon and Measuring Cup:** Wash with warm, soapy water.
- **Exterior Housing:** Wipe with a damp cloth. Do not immerse the housing in water or rinse it under a tap.
- Ensure all parts are completely dry before storing or next use.

### Storage:

Store the rice cooker in a cool, dry place. You can store the measuring cup and rice spoon inside the inner pot for convenience.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Rice is too hard or undercooked.	Not enough water; cooking cycle interrupted; lid not sealed properly.	Add more water next time; ensure lid is secure; do not open lid during cooking.
Rice is too soft or mushy.	Too much water; rice not rinsed properly.	Reduce water next time; rinse rice thoroughly before cooking.
Rice sticks to the bottom of the pot.	Insufficient water; non-stick coating damaged; rice left on "Keep Warm" too long.	Ensure correct water ratio; use only plastic/wooden utensils; do not leave on "Keep Warm" for excessive periods.
Cooker does not turn on.	Not plugged in; power switch off; power outage.	Check power connection; ensure power switch is on; check household circuit breaker.

## SPECIFICATIONS

---

**Model:** RCE-110118

**Brand:** Emerio

**Capacity:** 1.5 Liters

**Power:** 500 Watts

**Material:** 18/8 Stainless Steel, Plastic

**Inner Pot:** Non-stick coating

**Dimensions:** Approximately 26.5 x 26.3 x 24 cm (L x W x H)

**Weight:** Approximately 2 kg

**Special Features:** Keep Warm function, Indicator lights, Anti-slip feet

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the warranty card included with your purchase or contact Emerio customer service. Contact details can typically be found on the manufacturer's website or on the product packaging.

Please retain your proof of purchase for any warranty claims.

© 2023 Emerio. All rights reserved.