

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [DemerBox](#) /

› [DemerBox DB2 Waterproof Portable Bluetooth Speaker User Manual](#)

DemerBox DB2

DemerBox DB2 Waterproof Portable Bluetooth Speaker User Manual

MODEL: DB2

1. Introduction

The DemerBox DB2 is a rugged, portable Bluetooth speaker designed for outdoor adventures. It features powerful sound, deep bass, extended battery life, and a waterproof dry storage compartment. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your DemerBox DB2 speaker.

2. Safety Information

- Do not attempt to disassemble or modify the speaker. This may void the warranty and cause damage.
- Use only the specified charging adapter to prevent damage to the battery and speaker.
- Keep the speaker away from extreme temperatures and direct sunlight for prolonged periods.
- Ensure the port plug is securely fastened when using the speaker in wet environments to maintain its waterproof integrity.

3. Package Contents

- DemerBox DB2 Outdoor Bluetooth Speaker
- Charging Cable
- User Guide (this document)

4. Product Overview

The DemerBox DB2 is built into a durable Pelican case, offering robust protection and functionality.



Figure 1: Front view of the DemerBox DB2 speaker, showcasing the speaker grilles and control panel.



Figure 2: The DemerBox DB2 opened, revealing the internal dry storage compartment and components.

Key Components:

- **Speaker Grilles:** Protect the audio drivers and allow sound projection.
- **Control Panel:** Located on the front, includes power, volume, and Bluetooth pairing buttons.
- **Port Plug:** A removable plug that seals the bass port for full waterproofing.
- **Internal Dry Storage:** A sealed compartment inside the case to protect valuables from water and dust.
- **Internal USB Charging Port:** Allows charging of external devices from the speaker's battery.
- **Carry Handle:** Integrated into the top for easy portability.

5. Setup

5.1 Charging the Speaker

Before first use, fully charge your DemerBox DB2. The speaker offers over 40 hours of playtime on a single charge and typically charges in about 4 hours.

1. Open the DemerBox case.
2. Locate the charging port inside the case.
3. Connect the provided charging cable to the speaker and a power source.
4. The battery indicator lights on the control panel will show the charging status.

5.2 Initial Bluetooth Pairing

Connect your DemerBox DB2 to your Bluetooth-enabled device to start playing audio.

1. Press and hold the power button on the control panel to turn on the speaker. The Bluetooth indicator light will begin to flash, indicating pairing mode.
2. On your audio device (smartphone, tablet, etc.), navigate to the Bluetooth settings.
3. Select 'DemerBox DB2' from the list of available devices.
4. Once connected, the Bluetooth indicator light on the speaker will turn solid.

Your browser does not support the video tag.

Video 1: Demonstrates the Bluetooth pairing process and basic operation of the DemerBox DB2.

6. Operating Instructions

6.1 Power On/Off

- To turn on: Press and hold the power button until the indicator lights illuminate.
- To turn off: Press and hold the power button until the indicator lights turn off.

6.2 Volume Control

Use the volume up (+) and volume down (-) buttons on the control panel to adjust the audio output level.

6.3 Multi-Pairing (Party Mode)

The DemerBox DB2 supports multi-pairing, allowing you to connect multiple DemerBox speakers for a synchronized audio experience. Refer to the official DemerBox website or advanced user guide for detailed instructions on setting up Party Mode.

6.4 Waterproof Functionality and Dry Storage

The DemerBox DB2 is built into a genuine Pelican case, providing crush-proof and waterproof protection. For full waterproofing, ensure the bass port is sealed with the included port plug.

1. To waterproof: Locate the port plug stored inside the lid. Insert it firmly into the bass port on the front of the speaker and twist to secure.
2. To access dry storage: Unlatch the case to open the lid. The interior compartment is designed to keep your valuables safe and dry.

Your browser does not support the video tag.

Video 2: Demonstrates how to install the port plug for waterproofing and shows the speaker submerged in water while playing music.

6.5 Internal USB Charging Out

The DemerBox DB2 features an internal USB port to charge your external devices, ensuring your phone or other gadgets stay powered during your adventures.

1. Open the DemerBox case.
2. Locate the USB output port inside the case.
3. Connect your device's charging cable to the USB port.
4. Your device will begin charging. Note that charging external devices will reduce the speaker's playtime.

7. Maintenance

- **Cleaning:** Due to its waterproof design, the DemerBox DB2 can be easily cleaned with water and mild soap. Ensure all ports are sealed before cleaning with water.
- **Storage:** Store the speaker in a cool, dry place when not in use. If storing for extended periods, ensure the battery is partially charged (around 50%) to prolong its lifespan.
- **Serviceability:** The DemerBox is designed to be fully serviceable. In the event of an issue, contact DemerBox customer support for assistance rather than attempting repairs yourself.

8. Troubleshooting

- **No Power:** Ensure the speaker is fully charged. Connect it to a power source and check the battery indicator lights.
- **Cannot Connect via Bluetooth:** Make sure the speaker is in pairing mode (flashing Bluetooth light). Check your device's Bluetooth settings and ensure it's discoverable. Try turning both devices off and on again.
- **Poor Sound Quality:** Ensure the volume is adequately adjusted on both the speaker and your connected device. If in a wet environment, verify the port plug is correctly installed.
- **External Device Not Charging:** Check that your device's charging cable is properly connected to the internal USB port. Ensure the DemerBox has sufficient battery charge.

9. Specifications

Feature	Detail
Model Name	Barrow Black DB2 Speaker
Brand	DemerBox
Speaker Type	Outdoor
Special Feature	Crushproof, Waterproof
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Bluetooth Range	100 Feet
Power Source	Battery Powered
Battery Life	40+ Hours
Charging Time	4 Hours
Speaker Maximum Output Power	20 Watts
Water Resistance Level	Waterproof
Product Dimensions	10"D x 7"W x 10"H
Item Weight	5.4 Pounds

10. Warranty and Support

The DemerBox DB2 comes with a Limited 1 Year Warranty. For warranty claims, technical support, or service inquiries, please contact DemerBox customer support directly. Visit the official DemerBox website for the most up-

to-date contact information and support resources.

Manufacturer: Demerbox