

Manuals.plus /

› Ronson /

› Ronson Banjo Steampunk Oil Lighter: Instruction Manual (Model R01-M006)

Ronson R01-M006

Ronson Banjo Steampunk Oil Lighter Instruction Manual

Model: R01-M006

SAFETY INFORMATION

Please read and understand all safety warnings before using your Ronson Banjo Oil Lighter. Failure to follow these instructions may result in injury or property damage.

- Keep out of reach of children.
- Use only Ronson or high-quality lighter fluid. Do not use gasoline or other flammable liquids.
- Always refuel in a well-ventilated area, away from open flames or ignition sources.
- Do not overfill the lighter. Wipe off any spilled fluid immediately.
- Ensure the lighter is completely extinguished before storing.
- Do not expose the lighter to temperatures above 50°C (122°F) or to prolonged sunlight.
- Never puncture or incinerate the lighter.

PRODUCT OVERVIEW

The Ronson Banjo Steampunk Oil Lighter, Model R01-M006, is a meticulously crafted brass lighter. It features a distinctive steampunk design with small skull motifs on the front and back, complemented by intricate arabesque patterns on the sides and top. The lighter is constructed from durable brass and finished with a unique Ibushi treatment, giving it a substantial feel and a luxurious appearance.

Key Features

- Durable brass construction with Ibushi finish.
- Unique steampunk design with skull and arabesque detailing.
- Satisfying 'click' sound upon opening and closing.
- Compact dimensions: H63.0mm x W42.3mm x D19.8mm.
- Weight: Approximately 130 grams (dry).

Package Contents

- Ronson Banjo Steampunk Oil Lighter (Model R01-M006)
- Special Velour Box

- Warranty Certificate



Figure 1: Front view of the Ronson Banjo Steampunk Design Oil Lighter, showcasing its unique brass finish and design elements.

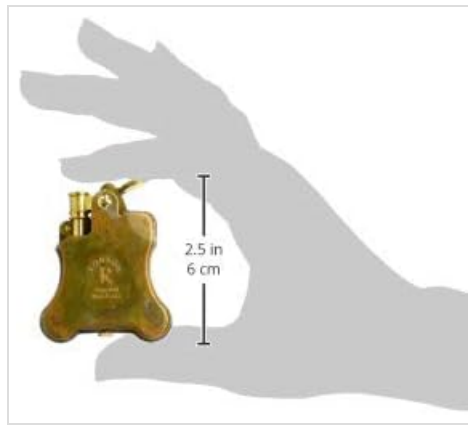


Figure 2: The Ronson Banjo Oil Lighter held in hand, illustrating its compact size and ergonomic form factor.

Your browser does not support the video tag.

Video 1: A brief demonstration of the Ronson Banjo Steampunk Oil Lighter, highlighting its aesthetic and functional aspects.

SETUP

Fueling the Lighter

To ensure proper operation, the lighter must be filled with appropriate lighter fluid.

1. Open the lighter lid.
2. Pull the inner unit (insert) completely out of the outer case.
3. Turn the inner unit upside down and lift the felt pad at the bottom.
4. Slowly saturate the cotton packing with Ronson or high-quality lighter fluid. Stop filling when the fluid reaches the top of the packing or begins to change color.
5. Replace the felt pad and carefully insert the inner unit back into the outer case.
6. Wipe any excess fluid from the lighter and your hands before use.

Important: Use only Ronson or high-quality lighter fluid. Do not overfill. Ensure the lighter is dry before attempting to ignite.

OPERATING THE LIGHTER

Follow these steps to ignite your Ronson Banjo Oil Lighter:

1. Open the lighter lid.
2. Firmly strike the flint wheel downwards with your thumb to create a spark.
3. Once ignited, hold the lighter steady.
4. To extinguish the flame, simply close the lid. This will cut off the oxygen supply and put out the flame.

Caution: Keep fingers clear of the flame. Do not keep the flame lit for extended periods.

MAINTENANCE

Replacing the Flint

When the lighter fails to produce a spark, the flint may need replacement.

1. Open the lighter lid and remove the inner unit.

2. Unscrew the flint spring at the bottom of the inner unit.
3. Remove the old flint and spring.
4. Insert a new Ronson or high-quality flint into the flint tube.
5. Reinsert the flint spring and screw it back in tightly.

Replacing the Wick

If the wick becomes too short or charred, it may need to be replaced or adjusted.

1. Open the lighter lid and remove the inner unit.
2. Using tweezers, gently pull the wick up until a clean section is exposed. Trim the charred portion.
3. If the wick is too short, remove the felt pad and cotton packing. Pull the wick through the chimney from the inside. Replace cotton packing and felt pad.

Cleaning

To maintain the appearance of your brass lighter, wipe it regularly with a soft, dry cloth. For deeper cleaning, use a brass cleaner according to the product's instructions, taking care to avoid contact with the internal components.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Lighter won't light	No fuel	Refill with lighter fluid.
Lighter won't light	Worn flint	Replace the flint.
Lighter won't light	Wick is too short or dirty	Pull up and trim the wick, or replace it.
Weak flame	Low fuel	Refill with lighter fluid.
Weak flame	Wick needs adjustment	Pull up and trim the wick.

SPECIFICATIONS

Feature	Detail
Brand	Ronson
Model Number	R01-M006
Material	Brass
Color	Brass
Style	Steampunk
Item Weight	0.06 Kilograms (approx. 130 grams dry)
Fuel Type	Oil
Product Dimensions (LxWxH)	2.44" x 1.93" x 0.47" (63.0mm x 42.3mm x 19.8mm)

WARRANTY AND SUPPORT

The Ronson Banjo Steampunk Oil Lighter is covered by a lifetime warranty. This warranty covers manufacturing defects and ensures the lighter's mechanical integrity under normal use.

For warranty claims, service, or technical support, please refer to the warranty certificate included in your product packaging or contact the authorized Ronson service center in your region. Keep your proof of purchase for warranty validation.