

[manuals.plus](#) /› [Corbero](#) /› [Corbero CLA2106W Washing Machine User Manual](#)

## Corbero CLA2106W

# Corbero CLA2106W Washing Machine User Manual

Model: CLA2106W | Capacity: 6KG | Spin Speed: 1000 RPM | Energy Class: A+++

## 1. IMPORTANT SAFETY INFORMATION

Read all instructions carefully before using the appliance. Keep this manual for future reference. Failure to follow these safety instructions may result in electric shock, fire, or damage to the appliance.

- This appliance is intended for household use only.
- Do not allow children to play with the appliance. Supervise children when the appliance is in use.
- Ensure the appliance is properly earthed.
- Do not operate the washing machine if the power cord or plug is damaged.
- Never open the door forcefully during operation.
- Disconnect the appliance from the power supply before cleaning or maintenance.
- Do not wash items that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.

## 2. PRODUCT OVERVIEW

### 2.1 Components

The Corbero CLA2106W washing machine consists of the following main components:

- **Detergent Dispenser:** For adding detergent and fabric softener.
- **Control Panel:** Contains program selector, function buttons, and display.
- **Door:** Front-loading door for laundry.
- **Drum:** Inner cylinder where laundry is washed.
- **Drain Filter:** Located at the bottom front, for collecting lint and small objects.
- **Adjustable Feet:** For leveling the machine.

### 2.2 Control Panel

The control panel allows you to select wash programs and customize settings. It typically includes:

- **Program Selector Knob:** To choose desired wash cycle (e.g., Cotton, Synthetics, Delicates).
- **Temperature Button:** To adjust wash temperature.
- **Spin Speed Button:** To modify spin speed.
- **Start/Pause Button:** To begin, pause, or resume a wash cycle.

- **Display Screen:** Shows remaining time, selected options, and error codes.
- **Additional Function Buttons:** (e.g., Pre-wash, Extra Rinse, Delay Start).

## 3. INSTALLATION AND SETUP

---

### 3.1 Unpacking

- Remove all packaging materials, including the polystyrene base and any protective film.
- Locate and remove the transit bolts from the rear of the machine. Keep these bolts for future transport.
- Insert the plastic caps provided into the holes left by the transit bolts.

### 3.2 Positioning

- Place the washing machine on a firm, level floor.
- Adjust the leveling feet by turning them clockwise or counter-clockwise until the machine is stable and level. Use a spirit level to ensure accuracy.
- Ensure there is adequate space around the machine for ventilation and access.

### 3.3 Water Connection

- Connect the inlet hose to a cold water tap with a 3/4" thread. Ensure the connection is tight to prevent leaks.
- Place the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining. The height of the drain hose should be between 60 cm and 100 cm from the floor.

### 3.4 Electrical Connection

- Plug the power cord into a grounded electrical outlet.
- Ensure the voltage and frequency match the specifications on the rating label of the appliance.
- Do not use extension cords or multiple adapters.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Before First Use

Run an empty wash cycle (e.g., a quick wash at 60°C) without laundry but with a small amount of detergent to clean the drum and remove any manufacturing residues.

### 4.2 Loading Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Check garment care labels for washing instructions.
- Empty pockets and close zippers and buttons.
- Load laundry loosely into the drum, ensuring not to overload the machine. The maximum capacity for the CLA2106W is 6KG.

### 4.3 Adding Detergent and Additives

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent to the main wash compartment (usually marked 'W').
- If using fabric softener, add it to the designated compartment (usually marked with a flower symbol). Do not exceed the 'MAX' fill line.
- Close the detergent dispenser drawer gently.

### 4.4 Selecting a Wash Program

- Turn the Program Selector Knob to choose the desired wash program based on your laundry type.
- Adjust the temperature and spin speed using the respective buttons if needed.

- Select any additional functions (e.g., Pre-wash, Extra Rinse) as required.

## 4.5 Starting and Pausing a Program

- Press the Start/Pause button to begin the wash cycle. The door will lock, and the machine will start filling with water.
- To pause a running program, press the Start/Pause button again. The door will remain locked until the water level and temperature are safe.
- To resume, press Start/Pause once more.

## 4.6 Ending a Program

- The machine will signal the end of the program (e.g., with a beep or 'End' on the display).
- Wait for the door to unlock automatically before opening it.
- Remove laundry promptly to prevent creasing and odors.
- Leave the door slightly ajar to allow the drum to dry and prevent mildew.

# 5. MAINTENANCE AND CLEANING

---

## 5.1 Cleaning the Exterior

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 5.2 Cleaning the Detergent Dispenser

- Pull out the dispenser drawer completely.
- Remove any removable parts and rinse them under running water.
- Clean the inside of the dispenser housing with a brush.
- Reassemble and reinsert the drawer.

## 5.3 Cleaning the Drum

Periodically run a maintenance wash (e.g., a hot cycle with a washing machine cleaner or a small amount of vinegar) to prevent odors and limescale buildup.

## 5.4 Cleaning the Drain Filter

- Open the cover at the bottom front of the machine.
- Place a shallow container underneath to catch any residual water.
- Slowly unscrew the filter counter-clockwise and remove it.
- Clean the filter under running water, removing any lint or foreign objects.
- Screw the filter back in tightly and close the cover.

## 5.5 Cleaning the Water Inlet Filter

If water supply is slow, the inlet filter may be clogged. Turn off the water supply, disconnect the inlet hose, and clean the filter mesh with a brush.

# 6. TROUBLESHOOTING

---

Before contacting customer service, refer to the following table for common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed; Program not selected; Start/Pause not pressed.	Check power supply; Close door firmly; Select program; Press Start/Pause.

Problem	Possible Cause	Solution
Water not filling	Water tap closed; Inlet hose kinked; Inlet filter clogged.	Open water tap; Straighten hose; Clean inlet filter.
Water not draining	Drain hose kinked; Drain filter clogged; Drain pump fault.	Straighten hose; Clean drain filter; Contact service if pump fault.
Excessive vibration/noise	Transit bolts not removed; Machine not level; Uneven load.	Remove transit bolts; Level machine; Redistribute laundry.
Detergent residue in dispenser	Insufficient water pressure; Dispenser clogged; Too much detergent.	Check water pressure; Clean dispenser; Use less detergent.

## 7. SPECIFICATIONS

- **Model:** Corbero CLA2106W
- **Capacity:** 6 KG
- **Maximum Spin Speed:** 1000 RPM
- **Energy Efficiency Class:** A+++
- **Voltage:** 220-240V~
- **Frequency:** 50Hz
- **Dimensions (H x W x D):** 850 x 595 x 470 mm (approximate)
- **Water Pressure:** 0.1-1 MPa

## 8. WARRANTY AND SUPPORT

This Corbero CLA2106W washing machine comes with a standard manufacturer's warranty. Please refer to the separate warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or to schedule a service appointment, please contact Corbero customer support.

You can find contact information on the Corbero official website or in your warranty documentation. When contacting support, please have your model number (CLA2106W) and serial number ready.