

## Goplus CM20637

# Goplus 8ft Pre-Lit Artificial Christmas Tree (Model CM20637) Instruction Manual

Your Guide to Assembly, Operation, and Care

## INTRODUCTION

Thank you for choosing the Goplus 8ft Pre-Lit Artificial Christmas Tree. This manual provides important information for the safe assembly, operation, and maintenance of your new Christmas tree. Please read it thoroughly before use and retain it for future reference.

## SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety guidelines:

- This product is intended for indoor use only. Do not use outdoors.
- Ensure the tree is placed on a stable, level surface to prevent tipping.
- Only use the provided UL-certified adapter. Using an unapproved adapter may cause fire or electric shock.
- Do not overload electrical outlets.
- Keep the tree away from heat sources, open flames, and flammable materials.
- Do not allow children or pets to play with the electrical components.
- Unplug the tree from the power outlet when not in use or before performing any maintenance.
- Inspect the power cord and lights for any damage before each use. Do not use if damaged.

## PACKAGE CONTENTS

Please verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact customer support.

- Tree Sections (4 sections: A, B, C, D - from bottom to top)
- Metal Stand

- UL-certified Adapter
- Instruction Manual



Image: Fully assembled Goplus 8ft Pre-Lit Artificial Christmas Tree with warm white LED lights and pine cones.

## ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your Goplus Christmas tree:

1. **Assemble the Metal Stand:** Unfold the metal stand and insert the eye bolt. Tighten the eye bolt to secure the stand.
2. **Insert Bottom Section:** Place the bottom tree section (Section A) into the assembled stand. Ensure it is firmly seated.
3. **Attach Middle Sections:** Insert the next tree section (Section B) into Section A. Then, insert Section C into Section B. The hinged branches will fall into place.
4. **Attach Top Section:** Insert the top tree section (Section D) into Section C.
5. **Fluff the Branches:** Starting from the bottom, gently pull apart and shape each branch tip, working outwards and upwards. This process helps to fill in gaps and create a full, natural appearance. Ensure all pine cones are visible and positioned as desired.
6. **Connect Lights:** Locate the electrical connectors between each tree section and securely connect them. Ensure all connections are tight.



Image: Diagram illustrating the hinged design of the tree sections and the foldable metal stand for easy assembly.

**Before Tidy Up**

**After Tidy Up**



Image: Comparison showing the tree before and after proper branch fluffing to achieve a full appearance.

## OPERATING INSTRUCTIONS

Your Goplus Christmas tree comes pre-lit with 600 warm white LED lights.

- After assembling the tree and connecting all internal light wires, plug the UL-certified adapter into a standard 120V wall outlet.
- The lights should illuminate. If not, check all wire connections between sections and ensure the adapter is securely plugged in.
- To turn off the lights, simply unplug the adapter from the wall outlet.



Image: Close-up of the UL-certified 29V low voltage adapter for the LED lights.

## MAINTENANCE AND STORAGE

---

Proper care will extend the life of your artificial Christmas tree.

- **Cleaning:** Dust the tree periodically with a soft, dry cloth. Do not use liquid cleaners or solvents.
- **Disassembly:** Unplug the adapter. Disconnect the light wires between sections. Carefully remove the tree sections in reverse order of assembly. Gently compress the branches of each section.
- **Storage:** Store the tree sections and stand in their original box or a suitable storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

---

If you encounter issues with your Christmas tree, refer to the following table:

Problem	Possible Cause	Solution
Lights do not turn on.	Power adapter not plugged in. Loose wire connection between sections. Faulty adapter.	Ensure the adapter is securely plugged into a working outlet. Check and secure all light wire connections between tree sections. If lights still do not work, contact customer support for a replacement adapter.
Tree appears sparse or not full.	Branches not properly fluffed.	Spend more time shaping and spreading out individual branch tips, working from the inside out and bottom to top.
Tree is wobbly.	Stand not fully assembled or tightened. Uneven surface.	Ensure the metal stand is fully unfolded and the eye bolt is tightened. Place the tree on a flat, stable surface.

## SPECIFICATIONS

Detailed specifications for your Goplus 8ft Pre-Lit Artificial Christmas Tree:

Feature	Detail
Model Number	CM20637
Height	8 feet (96 inches)
Product Dimensions	61.2"D x 61.2"W x 96"H
Color	Green With Pine Cones
Material	PVC, PE, Iron
Number of Tips	1335
Number of Pine Cones	81
Number of LED Lights	600
Light Color	Warm White
Input Voltage	120V, 60HZ
Output Voltage	30V, 290mA
Power	8.4W
Adapter Certification	UL-certified
Item Weight	30 Pounds



Image: Close-up view of the realistic PE and PVC branch tips with an integrated pine cone and warm white LED light.

## **WARRANTY AND SUPPORT**

For warranty information or technical support, please contact Goplus customer service. Refer to your purchase documentation for specific warranty terms and contact details. Keep your proof of purchase for any warranty claims.