

[manuals.plus](#) /

› [Bodno](#) /

› [Bodno Magicard Pronto ID Card Printer: Instruction Manual](#)

Bodno ProntoSSBB

Bodno Magicard Pronto ID Card Printer: Instruction Manual

Model: ProntoSSBB - Bronze Edition Basic Supplies + Camera Package

Manufacturer: Bodno

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Bodno Magicard Pronto ID Card Printer. Designed for ease of use, this all-inclusive package allows you to create professional-quality ID cards efficiently. Please read these instructions carefully before using the product.



Image 1: The Bodno Magicard Pronto ID Card Printer, a compact and efficient device for creating custom ID cards.

2. PRODUCT OVERVIEW AND FEATURES

The Bodno Magicard Pronto ID Card Printer is a comprehensive solution for your card printing needs. It combines a reliable printer with essential supplies and user-friendly software.

- **All-Inclusive Package:** Includes the Magicard Pronto printer, necessary supplies, and Bodno Bronze Edition software for immediate use.
- **Compact and Portable:** Its lightweight design ensures easy transport and suitability for small office environments or mobile printing tasks.
- **Manual Feed Printer:** Optimized for single-card printing, providing precise control for individual or small batch printing jobs.
- **Bodno Bronze Edition Software:** Features a one-time license and activation code, offering pre-made templates and intuitive drag-and-drop design capabilities.



Create high quality custom designed single-sided ID Card



Company Cards

- ID Cards are same size as a standard credit card



Visitor ID Cards



Membership ID Cards



Health Insurance ID Cards



License Cards



GIFT Cards

Image 2: The Magicard Pronto printer shown alongside examples of various ID cards it can produce, including visitor, membership, health insurance, license, and gift cards.

3. SETUP

3.1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed in your package contents are present and undamaged. This package typically includes the Magicard Pronto printer, Bodno software with activation code, 100 PVC cards, and a Magicard color ribbon.

3.2. Connecting the Printer

1. Place the printer on a stable, flat surface.
2. Connect the power adapter to the printer and then to a power outlet.
3. Connect the printer to your computer using the provided USB cable.

3.3. Software Installation

Insert the Bodno Bronze Edition software CD or download the software from the official Bodno website. Follow the

on-screen instructions to complete the installation. Use the provided one-time license and activation code during the setup process.

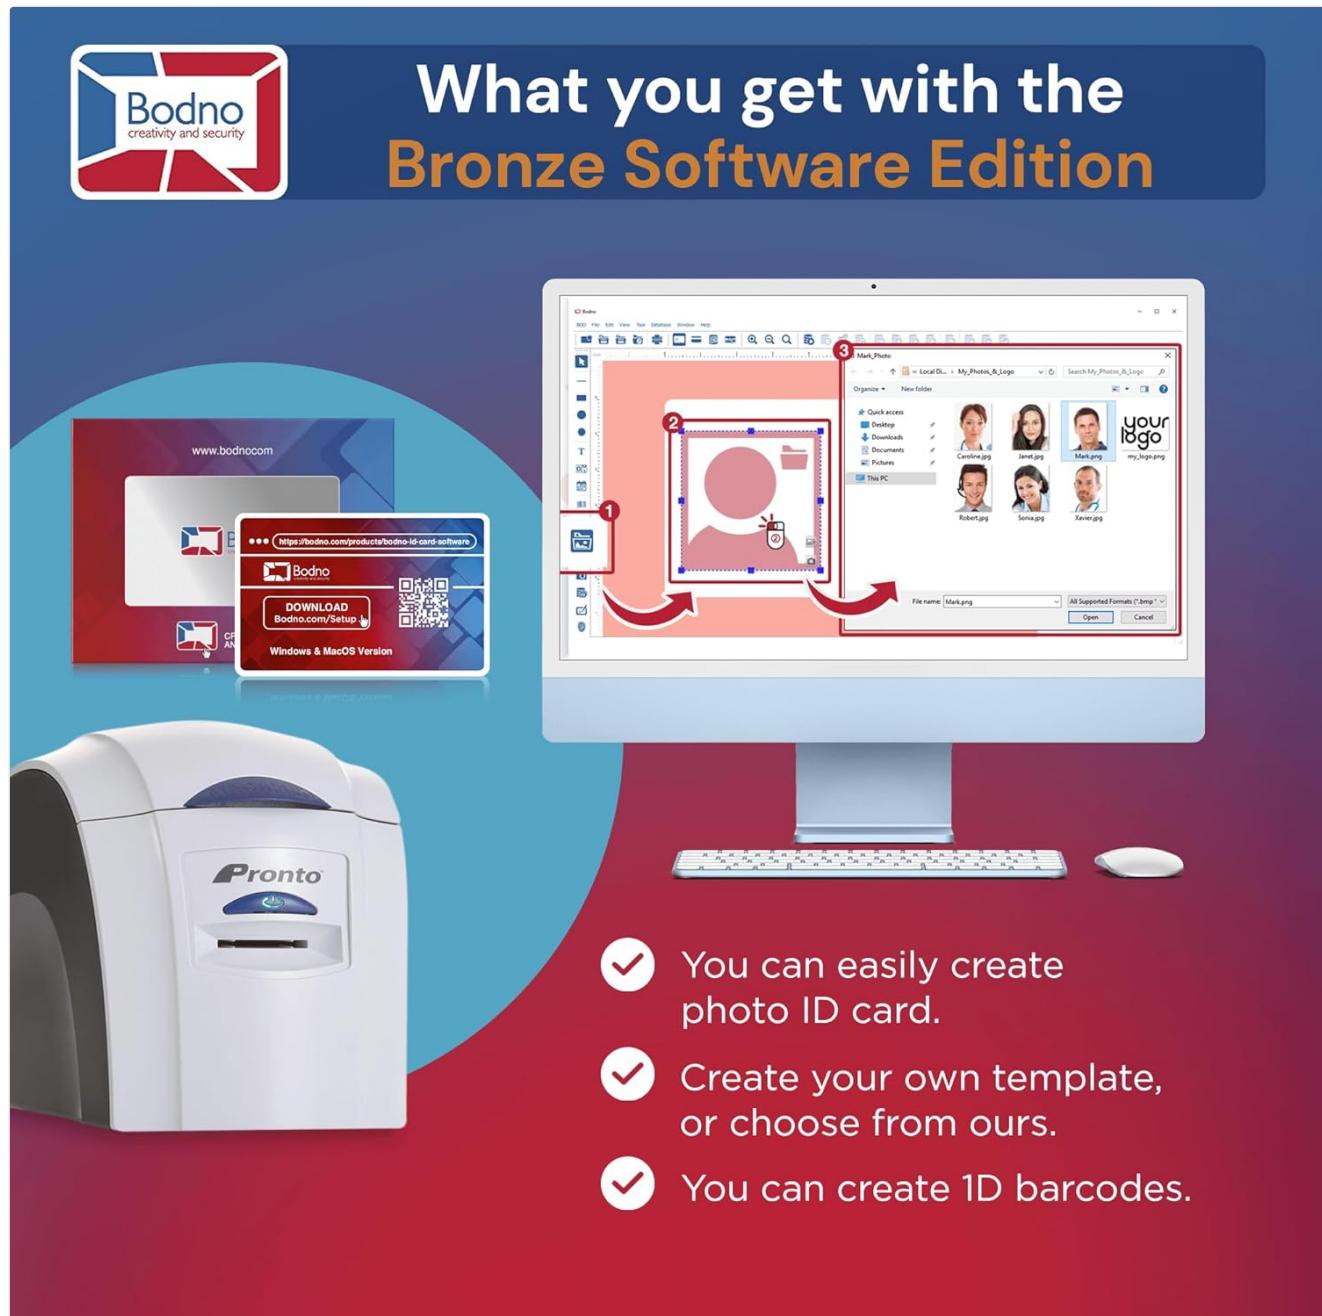


Image 3: The Bodno Magicard Pronto printer connected to a computer displaying the Bodno Bronze Edition software, highlighting its user-friendly interface for creating photo ID cards, templates, and 1D barcodes.

3.4. Loading Cards and Ribbon

1. Open the printer cover to access the ribbon compartment.
2. Carefully insert the Magicard color ribbon into its designated slot, ensuring it is properly seated.
3. Place the PVC cards into the manual feed slot at the front of the printer. Ensure they are aligned correctly.

4. OPERATING INSTRUCTIONS

4.1. Designing Your ID Card

1. Launch the Bodno Bronze Edition software on your computer.
2. Choose from pre-made templates or start a new design using the drag-and-drop interface.
3. Add text, images (including photos from the included camera), and other design elements as needed.

4. Ensure all elements are within the printable area of the card.

4.2. Printing a Card

1. Once your design is complete, select the 'Print' option within the Bodno software.
2. Confirm your printer selection and print settings.
3. The printer will automatically feed the card, print the design, and eject the finished ID card.

5. MAINTENANCE

5.1. Cleaning the Printer

Regular cleaning is crucial for optimal print quality and printer longevity. Use a lint-free cloth or the Magicard 3633-0053 Cleaning Kit (if included or purchased separately) to clean the printer's internal components as per the instructions provided with the cleaning kit.

5.2. Ribbon Replacement

When the print ribbon is depleted, the printer software will typically notify you. Open the printer cover, remove the used ribbon, and install a new Magicard color ribbon following the instructions in Section 3.4.

6. TROUBLESHOOTING

If you encounter any issues, please refer to the following common troubleshooting steps:

- **Printer Not Responding:** Check all cable connections (power, USB) and ensure the printer is powered on. Restart both the printer and your computer.
- **Poor Print Quality:** Ensure the print ribbon is correctly installed and not damaged. Clean the printer using a recommended cleaning kit. Verify that the cards are clean and free of dust.
- **Card Jam:** Power off the printer, carefully open the cover, and gently remove any jammed cards or ribbon fragments. Do not force components.
- **Software Issues:** Ensure your Bodno software is up to date. Reinstall the software if problems persist.

For persistent issues, please contact Bodno customer support.

7. SPECIFICATIONS



Printer Specifications



Cards Capacity

- Single Feed only

Weight

- 9.7 lbs



Dye Sublimation
print technology



Compatible with
Windows & Mac



Connect to
USB



Color Prints 35 sec/card
Monochrome 7sec/card
Print speed per side

Image 4: The Magicard Pronto printer highlighting its compact dimensions (10.6"D x 8.4"W x 9.1"H) and single-feed card capacity.

Feature	Detail
Model Name	Magicard Pronto
Item Model Number	ProntoSSBB
Manufacturer	Bodno
Product Dimensions	10.6"D x 8.4"W x 9.1"H
Item Weight	11 Pounds
Printing Technology	Dye Sublimation
Connectivity Technology	USB
Printer Output	Color

Max Printspeed Monochrome	7.00 cards per minute
Maximum Color Print Resolution	300x300 dpi to 1200x1200 dpi
Maximum Black and White Print Resolution	1200 dots_per_inch
Dual-sided printing	No (Simplex)
Max Input Sheet Capacity	100 cards
Output Sheet Capacity	100 cards
Print Media	Card stock
Supported Media Sizes	10 x 15 centimeters (standard CR80 size)

8. WARRANTY AND SUPPORT

Your Bodno Magicard Pronto ID Card Printer comes with a 2-year limited warranty. Additionally, Bodno provides lifetime support for its software to ensure you have assistance whenever needed.

- **Warranty:** 2-year limited warranty.
- **Software Support:** Lifetime support for Bodno software.

For technical assistance or warranty claims, please refer to the contact information provided with your product or visit the official Bodno website.



Lifetime Customer Support

Call

You can call our hotline
732-987-5300

Support

We'll log into your software
remotely & set it up for you.

Print

Start printing in 15 minutes
or less.



-  Enjoy your bodno software
Free update for life.
-  2 Year after sales
support included.

-  9:00AM - 6:00PM EST
Monday to Friday.
-  Enjoy our lifetime support.

Image 5: Information regarding Bodno's lifetime customer support, including contact details and service hours.