

[Manuals.plus](#) /

› [Magnavox](#) /

› Magnavox MC348 8-in-1 Universal Remote Control Instruction Manual

Magnavox MC348

Magnavox MC348 8-in-1 Universal Remote Control Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for setting up and operating your Magnavox MC348 8-in-1 Universal Remote Control. This remote is designed to simplify your home entertainment experience by controlling up to eight different audio/video devices from various brands. Please read this manual carefully to ensure proper setup and optimal performance.

PRODUCT OVERVIEW

The Magnavox MC348 universal remote allows you to consolidate control of multiple devices such as TVs, Digital TVs (DTV), DVD players, VCR players, Set Top Boxes (STB), Satellite Receivers (SAT), and Auxiliary (AUX) devices. It features a comprehensive code library compatible with most major brands and dedicated menu navigation keys for ease of use.



Image: Front view of the Magnavox MC348 8-in-1 Universal Remote Control. The image highlights its ability to operate 8 types of devices, compatibility with most major brands, simple code search setup, and the requirement for 2 AAA batteries (not included).

BATTERY INSTALLATION

The remote control requires two (2) AAA size batteries (not included). Follow these steps to install them:

1. Remove the battery compartment cover located on the back of the remote control.
2. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
3. Replace the battery compartment cover securely.

The remote is designed to retain programmed codes even when batteries are changed, provided the change is done within a reasonable timeframe.



MODEL NO : MC348

MAGNAVOX

UNIVERSAL REMOTE

Power Source: 2 x "AAA" size batteries

Craig Electronics Inc.

P.O. Box 694650 Miami,

Florida 33269, U.S.A.

MADE IN CHINA

For customerservice e-mail:
magnavox@craigelectronics.com

MANUFACTURED DATE: DEC 2020

M2012011865



Image: Back view of the Magnavox MC348 remote control, displaying the battery compartment cover and product label with model number MC348, power source information, and manufacturer contact email.

SETUP: PROGRAMMING YOUR REMOTE

There are two primary methods to program your Magnavox MC348 universal remote control: Manual Code Entry and Auto Code Search.

Method 1: Manual Code Entry

This method uses a 4-digit code specific to your device's brand. A code library is typically included with your product packaging.

1. Turn on the device you wish to control (e.g., TV, DVD player).
2. Press and hold the **SET** button. While holding **SET**, press the corresponding device button (e.g., **TV**, **DVD**, **VCR**) once. The red indicator light will turn on.
3. Release both buttons. The red indicator light will remain on.
4. Enter the 4-digit code for your device's brand using the number buttons. As you enter each digit, the red indicator light will flash. After entering the fourth digit, the light will turn off.
5. Point the remote at your device and press the **POWER** button. If the device turns off, the code has been successfully programmed.
6. Test other functions (e.g., volume, channel) to ensure full compatibility. If some functions do not work, try the next code listed for your brand, or proceed to the Auto Code Search method.

Method 2: Auto Code Search

If you cannot find a code for your device or if manual entry does not work, use the auto code search function.

1. Turn on the device you wish to control.
2. Press and hold the **SET** button. While holding **SET**, press the corresponding device button (e.g., **TV**, **DVD**, **VCR**) once. The red indicator light will turn on.
3. Release both buttons. The red indicator light will remain on.
4. Press the **SET** button again and release it. The red indicator light will begin to flash, indicating it is searching for a code.
5. Point the remote at your device. When the device turns off, immediately press the **SET** button once to save the code. The red indicator light will turn off.
6. Test other functions (e.g., volume, channel) to ensure full compatibility. If the device does not respond or if some functions do not work, repeat the process. If the remote cycles through all codes without finding a match, the device may not be compatible.

OPERATING YOUR DEVICES

Once your devices are programmed, operating them is straightforward:

1. Press the desired device button (e.g., **TV**, **DVD**, **SAT**) to select the device you wish to control. The red

indicator light will flash once to confirm the selection.

2. Point the remote at your device and use the corresponding buttons for functions such as:
 - **POWER**: Turns the selected device on or off.
 - **VOL+** / **VOL-**: Adjusts the volume.
 - **CH+** / **CH-**: Changes channels.
 - **Number Buttons (0-9)**: Direct channel entry.
 - **MUTE**: Mutes the audio.
 - **MENU / OK / Arrow Buttons** Navigates device menus.
 - **PLAY / PAUSE / STOP / REC / FF / REW** Controls playback functions for DVD/VCR devices.

Ensure there is a clear line of sight between the remote control and the device's infrared sensor for optimal performance.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning**: Wipe the remote with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the remote's surface or internal components.
- **Battery Replacement**: Replace batteries when the remote's performance degrades or the indicator light does not illuminate. Always replace both batteries at the same time with new AAA batteries.
- **Storage**: Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops**: Protect the remote from physical impact, as drops can damage internal circuitry.

TROUBLESHOOTING

If you encounter issues with your Magnavox MC348 remote, try the following solutions:

- **Remote not working at all:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Ensure there is a clear line of sight between the remote and the device. Obstructions can block the infrared signal.
- **Device not responding to commands:**
 - Ensure you have selected the correct device button (e.g., **TV** for your television).
 - Re-program the remote using either the Manual Code Entry or Auto Code Search method. The previously entered code might be incorrect or partially compatible.
 - Verify that the device you are trying to control is powered on.
- **Some functions not working after programming:**
 - Some universal codes may offer partial functionality. Try another code from the code library for your device's brand.
 - Use the Auto Code Search method, as it may find a more comprehensive code.
- **Indicator light does not turn on or flashes incorrectly:**

- This usually indicates low battery power or incorrect battery installation. Replace batteries.

SPECIFICATIONS

- **Model:** MC348
- **Brand:** Magnavox
- **Supported Devices:** Up to 8 (TV, DTV, DVD, VCR, STB, SAT, AUX, etc.)
- **Connectivity Technology:** Infrared (IR)
- **Maximum Operating Range:** Approximately 15 feet (5 meters)
- **Power Source:** 2 x AAA batteries (not included)
- **Manufacturer:** Craig Electronics

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Magnavox MC348 Universal Remote Control, please refer to the documentation included with your purchase or contact the manufacturer directly.

Manufacturer Contact:

Email: magnavox@craigelectronics.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

