

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [AMANA](#) /

> [Amana AMV2307PFW 1.6 cu. ft. Over-the-Range Microwave Oven User Manual](#)

AMANA AMV2307PFW

Amana AMV2307PFW 1.6 cu. ft. Over-the-Range Microwave Oven User Manual

Model: AMV2307PFW | Brand: AMANA

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Amana AMV2307PFW 1.6 cu. ft. Over-the-Range Microwave Oven. Please read all instructions carefully before use and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use this appliance outdoors.
- Do not immerse cord or plug in water.
- Close supervision is necessary when any appliance is used by or near children.
- Only use this appliance for its intended use as described in this manual.
- Always ensure the turntable is properly seated before operating the microwave.
- Do not heat sealed containers or baby bottles with nipples, as pressure can build up and cause them to explode.
- Never operate the microwave when empty.

SETUP AND INSTALLATION

This Amana microwave oven is designed for over-the-range installation. Proper installation is crucial for safe and efficient operation. It is recommended that installation be performed by a qualified installer.

Pre-Installation Checklist:

- Ensure the mounting surface is strong enough to support the weight of the microwave (approximately 63.4 lbs).

- Verify that the electrical outlet meets the appliance's requirements (120 Volts, 1000 Watts).
- Confirm adequate clearance above the cooking surface and surrounding cabinetry.
- Determine the desired ventilation method (recirculating or external venting) and prepare accordingly.

Installation Steps (Summary):

1. Carefully unpack the microwave and all accessories, including the mounting plate and template.
2. Attach the mounting plate to the wall according to the provided template, ensuring it is level and securely fastened to wall studs.
3. Prepare the top cabinet for ventilation and power cord access.
4. Lift the microwave into position, engaging it with the mounting plate and securing it to the upper cabinet with bolts.
5. Connect the power cord to a grounded outlet.
6. Test all functions to ensure proper operation.



Image: Front view of the Amana AMV2307PFW Over-the-Range Microwave Oven, showing its sleek white design.

OPERATING INSTRUCTIONS

Your Amana microwave oven features intuitive controls for various cooking tasks.

Control Panel Overview:



Image: Close-up of the Amana AMV2307PFW microwave control panel, showing the digital display and various function buttons.

- **Digital Display:** Shows time of day, cooking time, and function settings.
- **Number Pad (0-9):** Used to enter cooking times, power levels, and clock settings.
- **Cook Time:** Press to set manual cooking time.
- **Cook Power:** Press after setting cook time to adjust power level.
- **Reheat:** Pre-programmed setting for reheating various foods.
- **Popcorn:** Pre-programmed setting for popping popcorn.
- **Defrost:** Pre-programmed setting for defrosting food by weight.
- **Add 30 Sec:** Quickly adds 30 seconds of cooking time at full power.
- **Start:** Initiates cooking or a selected function.
- **Cancel:** Stops cooking, clears settings, or cancels a program. Hold for 3 seconds to activate child lock (if applicable).

- **Clock:** Sets the time of day.
- **Timer Set+Off:** Sets a kitchen timer.
- **Vent Fan:** Controls the exhaust fan speed (multiple levels).
- **Light:** Controls the cooktop light.

Basic Cooking:

1. Place food in a microwave-safe dish on the glass turntable.
2. Close the microwave door.
3. Press **Cook Time**.
4. Enter the desired cooking time using the number pad.
5. (Optional) To adjust power level, press **Cook Power** and enter a number from 1 (low) to 10 (high).
6. Press **Start**.

Using Auto Defrost:

The Auto Defrost feature allows for convenient thawing of frozen foods.

1. Place frozen food on the glass turntable.
2. Press **Defrost**.
3. Enter the weight of the food in pounds (e.g., 1.0 for 1 pound).
4. Press **Start**. The microwave will automatically calculate the defrosting time and power level.



Image: Interior view of the Amana AMV2307PFW microwave, showing the glass turntable and spacious 1.6 cu. ft. capacity.

Vent Fan Operation:

The built-in 300 CFM exhaust fan helps remove smoke and steam from your cooking area.

- Press the **Vent Fan** button repeatedly to cycle through different fan speeds (e.g., Low, High, Off).

Cooktop Light:

The light illuminates the cooking surface below the microwave.

- Press the **Light** button to turn the light on or off.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

Interior Cleaning:

- Wipe the interior surfaces, including the door seals, with a soft cloth and mild soap or a microwave-safe cleaner.
- The glass turntable can be removed and washed by hand or in a dishwasher.
- For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for a few minutes to create steam, then wipe clean.

Exterior Cleaning:

- Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or scouring pads.
- For stainless steel components (if applicable), use a specialized stainless steel cleaner.

Charcoal Filter Maintenance:

The built-in exhaust fan includes a charcoal filter. Refer to the full user manual for instructions on how to access and replace the charcoal filter, typically every 6-12 months depending on usage.

TROUBLESHOOTING

If you encounter issues with your microwave, consult the following common troubleshooting tips before contacting service.

Problem	Possible Cause	Solution
Microwave does not start.	Door not closed properly; power cord unplugged; household fuse blown or circuit breaker tripped.	Ensure door is securely closed; check power cord connection; reset circuit breaker or replace fuse.
Food not cooking evenly.	Food not stirred or rearranged; turntable not rotating.	Stir or rearrange food during cooking; ensure turntable is correctly placed and rotates freely.
Oven light not working.	Light bulb needs replacement.	Refer to the full manual for instructions on replacing the oven light bulb.
Excessive steam inside oven.	Normal for foods with high moisture content.	This is normal. Ensure proper ventilation is used during cooking.

SPECIFICATIONS

- **Brand:** AMANA
- **Model:** AMV2307PFW

- **Capacity:** 1.6 Cubic Feet
- **Cooking Power:** 1000 Watts
- **Voltage:** 120 Volts
- **Installation Type:** Over-the-Range
- **Product Dimensions:** 32"D x 20"W x 21"H (approximate)
- **Item Weight:** 63.4 Pounds
- **Material:** Stainless Steel (interior), White finish (exterior)
- **Special Features:** Defrost, 300 CFM Exhaust Fan, 10 Cooking Levels

WARRANTY AND SUPPORT

This product comes with a user manual included in the box. For detailed warranty information, service, or technical support, please refer to the complete user manual provided with your appliance or contact Amana customer service. Keep your purchase receipt as proof of purchase for warranty claims.

© 2023 AMANA. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.