

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Britânia](#) /

› Britânia PA5 Prime Electric Rice Cooker 220V User Manual

Britânia 66402060

Britânia PA5 Prime Electric Rice Cooker 220V User Manual

Model: PA5 Prime (66402060)

Voltage: 220 Volts

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- Always verify the voltage before connecting the product to ensure it matches your region's electrical supply.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- This product is certified by INMETRO (BRA19/00092) for safety standards.



Image: INMETRO safety certification logo, indicating compliance with Brazilian safety standards.

2. PRODUCT OVERVIEW

The Britânia PA5 Prime Electric Rice Cooker is designed to simplify rice preparation. It features a non-stick inner pot for easy cleaning and a sealed lid with a locking mechanism for safety. The appliance includes a steam outlet and a water collector to manage condensation.



Image: Front view of the Britânia PA5 Prime Electric Rice Cooker, black color, with control panel visible.



Image: The rice cooker with its lid open, showing the interior and the non-stick pot.



Image: Top-down view of the rice cooker, highlighting the lid design and steam vent.

Components

- Main Rice Cooker Unit
- Non-stick Inner Pot
- Measuring Cup
- Spatula (designed not to scratch the inner pot)
- Steam Basket (may be included depending on model variant)



Image: The removable non-stick inner pot, showing internal measurement markings for rice and water.



Image: A white perforated basket, typically used for steaming vegetables or other foods above the rice.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or transport.
2. **Initial Cleaning:** Before first use, wash the inner pot, measuring cup, and spatula with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the rice cooker with a damp cloth.
3. **Placement:** Place the rice cooker on a stable, level, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.
4. **Voltage Check:** Confirm that the voltage indicated on the appliance's rating label matches your local power supply (220 Volts for this model).

4. OPERATION

This rice cooker is designed for simple operation with automatic cooking and keep-warm functions.



Image: The rice cooker positioned on a kitchen counter, surrounded by fresh vegetables, illustrating its use in a culinary environment.

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. The capacity is up to 5 cups of uncooked rice.
2. **Wash Rice (Optional):** Rinse the rice under cold water until the water runs clear.

3. **Add Rice and Water:** Place the washed rice into the non-stick inner pot. Add the appropriate amount of water. A common ratio is 1 cup of rice to 1.5-2 cups of water, but this can vary based on rice type and preference. The inner pot has markings to guide water levels.
4. **Insert Inner Pot:** Place the inner pot into the main rice cooker unit, ensuring it sits correctly.
5. **Close Lid:** Close the lid securely until it locks. Ensure the steam vent is clear.
6. **Connect Power:** Plug the power cord into a 220V electrical outlet.
7. **Start Cooking:** Press the 'Refogar/Cozinhar' (Cook) button. The indicator light will illuminate, signifying that the cooking cycle has begun.
8. **Automatic Keep Warm:** Once the rice is cooked, the appliance will automatically switch to the 'Aquecer' (Keep Warm) mode. The 'Aquecer' indicator light will illuminate.
9. **Serve:** Allow the rice to rest in 'Keep Warm' mode for 5-10 minutes for optimal texture. Use the provided spatula to fluff and serve the rice.
10. **Disconnect:** After serving, unplug the rice cooker from the power outlet.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your rice cooker.

1. **Unplug Before Cleaning:** Always ensure the rice cooker is unplugged and completely cooled before cleaning.
2. **Inner Pot:** The non-stick inner pot should be hand washed with warm, soapy water. Use a soft sponge or cloth. Do not use abrasive cleaners, metal scouring pads, or sharp utensils, as these can damage the non-stick coating.
3. **Spatula and Measuring Cup:** Wash these accessories with warm, soapy water and rinse thoroughly.
4. **Exterior:** Wipe the exterior of the rice cooker unit with a damp cloth. Do not immerse the main unit in water.
5. **Lid and Steam Vent:** Clean the inside of the lid and the steam vent regularly to prevent food buildup. A damp cloth is usually sufficient.
6. **Water Collector:** Empty and clean the water collector after each use to prevent odors and bacterial growth.
7. **Storage:** Store the rice cooker in a dry place when not in use.

6. TROUBLESHOOTING

If you encounter issues with your rice cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rice cooker does not turn on.	Not plugged in; power outlet malfunction; damaged cord.	Ensure plug is securely in outlet. Test outlet with another appliance. Check cord for damage; if damaged, contact service.
Rice is undercooked or too hard.	Insufficient water; lid not properly closed; power interruption.	Add more water next time. Ensure lid is sealed. Do not open lid during cooking.

Problem	Possible Cause	Solution
Rice is overcooked or mushy.	Too much water; rice soaked too long.	Reduce water amount next time. Do not soak rice for extended periods before cooking.
Rice sticks to the bottom of the pot.	Not enough water; inner pot coating damaged; rice type.	Ensure correct water ratio. Avoid using metal utensils. Some rice types are more prone to sticking.
Steam leaks from the lid.	Lid not properly closed; seal damaged; steam vent blocked.	Ensure lid is securely locked. Check lid seal for damage. Clean steam vent.

If the problem persists after attempting these solutions, please contact Britânia customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Britânia
Model Name	PA5 Prime
Model Number	66402060
Color	Black
Voltage	220 Volts
Power	400 Watts
Capacity	5 Cups (uncooked rice)
Special Features	Non-stick inner pot, Sealed lid, Keep Warm function
Material	Plastic and Metal
Product Dimensions (L x W x H)	25 x 27.5 x 39 cm (approx.)
Product Weight	1.5 kg (approx.)
Energy Efficiency Label (ENCE)	A+
Inmetro Registration	BRA19/00092

8. WARRANTY AND SUPPORT

Britânia products are manufactured to high-quality standards. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Britânia website.

For technical assistance, spare parts, or any other inquiries, please contact Britânia customer support through their official channels. Ensure you have your product model number (PA5 Prime, 66402060) and proof of purchase available when seeking support.

You can find more information and support on the official Britânia website: [Britânia Official Store](#)