

[Manuals.plus](#) /

› [GEFU](#) /

› GEFU Rotare Salad Spinner GF28180 Instruction Manual

GEFU 28180

GEFU Rotare Salad Spinner GF28180 Instruction Manual

Model: GF28180 | Brand: GEFU

INTRODUCTION

Thank you for choosing the GEFU Rotare Salad Spinner GF28180. This stainless steel salad spinner is designed for efficient and gentle drying of your salad greens, ensuring crisp results. Please read this manual carefully before first use to ensure proper operation and maintenance.

IMPORTANT SAFETY INSTRUCTIONS

- Always handle the salad spinner with care.
- Keep out of reach of children.
- Do not use abrasive cleaners or scouring pads, as these can damage the stainless steel surface.
- Ensure the lid is securely placed before operating the spinner.
- This product is intended for household use only.

COMPONENTS

The GEFU Rotare Salad Spinner GF28180 consists of the following main parts:

1. **Stainless Steel Bowl:** The main container for salad and water.
2. **Inner Basket:** A removable basket where salad greens are placed for spinning.
3. **Lid with Crank Mechanism:** Features the spinning mechanism and an integrated pourer.

ROTARE SALATSCHLEUDER

 


Image: Overview of the GEFU Rotare Salad Spinner, showing its main components and approximate dimensions. The stainless steel bowl, inner basket, and lid with crank are visible.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all components from the packaging.
2. **Wash:** Before first use, wash all parts (stainless steel bowl, inner basket, and lid) with warm soapy water. Rinse thoroughly and dry. The product is dishwasher compatible.
3. **Assemble:** Place the inner basket inside the stainless steel bowl.
4. **Lid Placement:** Position the lid securely on top of the bowl, ensuring it is properly aligned.

OPERATING INSTRUCTIONS

Follow these steps to effectively dry your salad greens:

1. **Prepare Salad:** Wash your salad greens thoroughly under running water.
2. **Load Basket:** Place the washed salad greens into the inner basket. Do not overfill the basket; ensure there is enough space for the greens to move freely.
3. **Secure Lid:** Place the lid onto the stainless steel bowl, ensuring it is firmly seated.
4. **Spin:** Turn the crank handle on the lid clockwise. The inner basket will spin rapidly, using centrifugal force to remove excess water from the greens. Continue spinning until the desired dryness is achieved.
5. **Drain Water:** The lid features an integrated pourer. You can drain the accumulated water from the bowl without removing the lid. Simply tilt the spinner over a sink and allow the water to flow out through the pourer.
6. **Remove Salad:** Once spinning is complete, remove the lid and lift out the inner basket with the dried salad greens.



**EINFACHER
UND LEICHTER
KURBELANTRIEB**

Image: The GEFU Rotare Salad Spinner in operation, highlighting the easy-to-use crank mechanism for spinning salad greens.



Image: Demonstrates the integrated pourer on the lid, allowing for convenient draining of water without removing the lid.

Serving Suggestion: The stainless steel bowl can also be used directly for serving your freshly dried salad. For this, simply remove the inner basket and lid.



**STYLISCHE
EDELSTAHLSCHÜSSEL
ZUM ANRICHTEN
UND SERVIEREN**

Image: The stainless steel bowl of the GEFU Rotare Salad Spinner being used as a stylish serving bowl for salad.

MAINTENANCE AND CLEANING

- **After Each Use:** Disassemble the salad spinner (bowl, inner basket, lid). Wash all parts with warm water and mild dish soap.
- **Dishwasher Safe:** All components of the GEFU Rotare Salad Spinner are dishwasher compatible for convenient cleaning.
- **Drying:** Ensure all parts are thoroughly dry before reassembling or storing to prevent water spots or odors.
- **Storage:** Store the salad spinner in a clean, dry place.
- **Avoid Abrasives:** Do not use steel wool, abrasive cleaners, or harsh chemicals, as these can scratch or damage the stainless steel and plastic components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Salad not drying effectively.	Basket is overfilled; insufficient spinning time; lid not properly secured.	Do not overfill the inner basket. Spin for a longer duration. Ensure the lid is firmly in place before spinning.
Crank mechanism feels stiff.	Food debris or residue in the mechanism; lack of lubrication (unlikely for new product).	Thoroughly clean the lid and crank mechanism. Ensure no food particles are obstructing movement.
Water leaks from the lid during spinning.	Lid not properly seated; pourer opening not fully closed (if applicable).	Ensure the lid is correctly aligned and firmly pressed onto the bowl. Check if the pourer opening is clear and sealed during spinning.

SPECIFICATIONS

- **Model:** GF28180
- **Brand:** GEFU
- **Material:** Stainless Steel, Plastic
- **Capacity:** 3 litres
- **Diameter:** Approximately 25 cm (9.84 inches)
- **Height:** Approximately 17 cm (7.05 inches)
- **Item Weight:** Approximately 0.88 kg (1.94 pounds)
- **Dishwasher Compatible:** Yes
- **Assembly Required:** No (comes pre-assembled, only minor setup for first use)

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation provided with your purchase or visit the official GEFU website. Keep your proof of purchase for warranty claims.

GEFU Official Website: www.gefu.com

