

Sunbeam BM7850

Sunbeam Smartbake 1.25Kg Breadmaker User Manual

MODEL: BM7850

Introduction

Welcome to the user manual for your new Sunbeam Smartbake 1.25Kg Breadmaker, Model BM7850. This appliance is designed to simplify the bread-making process, allowing you to enjoy fresh, homemade bread with ease. This manual provides essential information on safety, setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your breadmaker.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the breadmaker.
- Do not touch hot surfaces. Use oven mitts or pot holders when handling hot parts, such as the bread pan or baked bread.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended household use.
- Avoid contact with moving parts.

- Do not place the breadmaker directly against a wall or in a corner during operation. Ensure adequate ventilation.

Product Overview

The Sunbeam Smartbake Breadmaker is designed for convenience and versatility. Familiarize yourself with its main components:



Figure 1: Angled view of the Sunbeam Smartbake Breadmaker, showcasing its stainless steel body and dark grey lid with a viewing window.



Figure 2: Front view of the Sunbeam Smartbake Breadmaker, highlighting the sleek stainless steel finish and the control panel on the right side of the lid.



Figure 3: The Sunbeam Smartbake Breadmaker with its lid open, revealing a freshly baked loaf of bread inside the bread pan. This view demonstrates the internal capacity and the automatic fruit and nut dispenser.



Figure 4: A detailed close-up of the Sunbeam Smartbake control panel, showing the digital display, menu options (Basic, Turbo, Gluten/Yeast Free, Wheat, Sweet, French, Bake, Extra Turbo, Jam, Pasta Dough, Pizza Dough), and control buttons for size, crust, start/pause, delay, custom, and favourite settings.

Key Components:

- **Control Panel:** Features an LCD display and buttons for program selection, crust color, loaf size, delay timer, and custom settings.
- **Viewing Window:** Allows you to monitor the baking process without opening the lid.
- **Bread Pan:** Removable non-stick pan for baking.
- **Kneading Paddle:** Detachable paddle located inside the bread pan for mixing and kneading dough.
- **Automatic Fruit & Nut Dispenser:** Automatically releases ingredients into the dough at the optimal time during the kneading cycle, preventing crushing.

Setup

Unpacking:

1. Carefully remove the breadmaker and all accessories from the packaging.
2. Remove any packing materials, stickers, or labels from the appliance.
3. Retain the packaging for future storage or transport.

Before First Use:

1. Wash the bread pan and kneading paddle with warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the breadmaker with a damp cloth. Do not immerse the main unit in water.
3. Ensure all parts are dry before assembly.

Placement:

- Place the breadmaker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources.
- Ensure there is adequate ventilation around the appliance, especially during operation. Do not place it directly against a wall or in a confined space.
- Plug the power cord into a grounded electrical outlet.

Operating Instructions

Basic Operation:

1. **Insert Kneading Paddle:** Place the kneading paddle onto the shaft inside the bread pan.
2. **Add Ingredients:** Add ingredients to the bread pan in the order specified by your recipe (typically liquids first, then dry ingredients, with yeast last). Ensure the automatic fruit and nut dispenser is filled if your recipe requires it.
3. **Place Bread Pan:** Insert the bread pan into the breadmaker, ensuring it clicks securely into place. Close the lid.
4. **Select Program:** Press the **MENU** button to cycle through the available programs. The SmartBake BM7850 offers a variety of preset menus, including:
 - 01. Basic
 - 02. Turbo
 - 03. Gluten/Yeast Free
 - 04. Wheat
 - 05. Sweet
 - 06. French
 - 07. Bake (for baking pre-made dough)
 - 08. Extra Turbo
 - 09. Jam
 - 10. Bake (another bake option)
 - 11. Pasta Dough
 - 12. Pizza Dough
5. **Select Loaf Size:** Press the **SIZE** button to choose the desired loaf size (e.g., 1.25Kg).
6. **Select Crust Color:** Press the **CRUST** button to select light, medium, or dark crust.
7. **Start Baking:** Press the **START/PAUSE** button to begin the selected program. The display will indicate the current stage (Preheat, Knead, Rise, Bake, Keep Warm).
8. **Automatic Dispenser:** For programs that include it, the automatic fruit and nut dispenser will release

ingredients at the appropriate time.

- 9. **Completion:** Once the program is complete, the breadmaker will beep and may enter a "Keep Warm" cycle. Unplug the appliance and carefully remove the bread pan using oven mitts.
- 10. **Remove Bread:** Invert the bread pan to release the loaf. If the kneading paddle remains in the bread, carefully remove it with a non-metallic utensil.

Custom Programs:

The SmartBake BM7850 allows you to program up to 8 of your own recipes. Use the **CUSTOM** button and arrow keys to set specific times for each stage of the bread-making process (preheat, knead, rise, bake, keep warm). Press **SAVE** to store your custom program.

Delay Timer:

Use the **DELAY** button to set a delayed start time for your bread. This allows you to wake up to freshly baked bread. Set the desired delay time in hours and minutes before pressing **START/PAUSE**.

Maintenance and Cleaning

Regular cleaning and maintenance will extend the life of your Sunbeam Smartbake Breadmaker.

Cleaning:

- 1. **Always unplug the appliance** and allow it to cool completely before cleaning.
- 2. **Bread Pan and Kneading Paddle:** Wash with warm, soapy water. Do not use abrasive cleaners or scouring pads, as this can damage the non-stick coating. Rinse thoroughly and dry completely.
- 3. **Automatic Fruit & Nut Dispenser:** Clean any residue from the dispenser after each use.
- 4. **Exterior:** Wipe the exterior of the breadmaker with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
- 5. **Interior:** Wipe the interior of the baking chamber with a damp cloth. Do not immerse the unit in water.

Storage:

Ensure the breadmaker is clean and dry before storing. Store it in a cool, dry place, away from direct sunlight and out of reach of children.

Troubleshooting

If you encounter issues with your breadmaker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Bread does not rise or rises too much.	Incorrect yeast amount, expired yeast, incorrect water temperature, incorrect ingredient measurements.	Ensure yeast is fresh and active. Use precise measurements for all ingredients. Use water at the recommended temperature (usually lukewarm).
Bread is too dense or heavy.	Too much flour, not enough liquid, insufficient kneading.	Check ingredient ratios. Ensure the dough forms a smooth ball during kneading.
Kneading paddle stuck in bread.	Common occurrence due to the fixed nature of the paddle.	Allow bread to cool slightly. Carefully remove the paddle using a non-metallic utensil.

Problem	Possible Cause	Solution
LCD screen not lighting up or intermittent display.	Electrical issue, internal fault.	Ensure the breadmaker is properly plugged in. Try plugging into a different outlet. If the problem persists, contact customer support.
Error signal/beep malfunction.	Internal sensor issue, overheating, or component failure.	Unplug the unit and let it cool down for at least 30 minutes. Plug it back in and try again. If the error persists, contact customer support.

For issues not listed here, or if solutions do not resolve the problem, please contact Sunbeam customer support.

Specifications



Figure 5: Diagram illustrating the dimensions of the Sunbeam Smartbake Breadmaker: 45.3 cm (width), 29.5 cm (depth), and 37.1 cm (height).

Feature	Detail
Brand	Sunbeam

Feature	Detail
Model Number	BM7850
Colour	Smart Bake (Stainless Steel)
Product Dimensions	45.3 x 29.5 x 37.1 cm (Width x Depth x Height)
Material	Stainless Steel
Item Weight	7.4 kg
Loaf Capacity	Up to 1.25 kg
Programmable Recipes	8 custom programs
Special Features	Automatic Fruit & Nut Dispenser, Delay Timer, Crust Control, Loaf Size Selection

Warranty and Support




Sunbeam products are designed with quality and reliability in mind. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Sunbeam website.




For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Sunbeam Customer Service. Contact details can typically be found on the Sunbeam website or in your product packaging.

Online Resources: You may find additional recipes, tips, and FAQs on the official Sunbeam website:

www.sunbeam.com.au

Related Documents - BM7850

	<p>Sunbeam Quantum SmartBake BM7800: Programmable Breadmaker Instruction Manual</p> <p>Discover how to make fresh bread and dough with the Sunbeam Quantum SmartBake BM7800. This instruction booklet provides detailed guides, recipes, and safety precautions for your programmable breadmaker.</p>
	<p>Sunbeam Breadmaker User Manual with Recipes (Model 5891)</p> <p>Comprehensive user manual and recipe guide for the Sunbeam Breadmaker Model 5891, covering operation, settings, tips, and troubleshooting for delicious homemade bread.</p>
	<p>Sunbeam Breadmaker User Manual with Recipes (Model 5891)</p> <p>Comprehensive user manual for the Sunbeam Breadmaker (Model 5891), featuring detailed instructions, settings, troubleshooting tips, and a variety of bread and recipe guides. Learn to bake delicious homemade bread with this easy-to-follow guide.</p>

	<p>Sunbeam Bakehouse BM3500S: Instruction and Recipe Booklet</p> <p>Comprehensive guide for the Sunbeam Bakehouse BM3500S multifunctional bread maker, including safety precautions, operating instructions, program settings, and recipes. Features include a gluten-free option and a 15-hour delay timer.</p>
	<p>Sunbeam COM3500SS 18L Compact Oven: User Guide and Cooking Instructions</p> <p>Comprehensive user guide for the Sunbeam COM3500SS 18L Compact Oven. Learn about safety precautions, features, operation, cooking guides, roasting tips, cleaning, and recipes for your kitchen appliance.</p>
	<p>Sunbeam BT7100 22L Digital Oven Quick Start User Guide</p> <p>A comprehensive quick start guide for the Sunbeam BT7100 22L Digital Oven. It details safety precautions, product features, step-by-step instructions for various cooking functions like Toast, Bake, Grill, Roast, Warm, Defrost, and Reheat/Preheat, rack positioning, care and cleaning advice, and includes several recipes.</p>