

[Manuals.plus](#) /

> [Ninja](#) /

> Ninja MC760 Plus 4-in-1 Multi-Cooker System User Manual

Ninja MC760

Ninja MC760 Plus 4-in-1 Multi-Cooker System User Manual

Model: MC760

INTRODUCTION

The Ninja MC760 Plus 4-in-1 Multi-Cooker System is designed to provide versatile cooking options in a single appliance. It features four programmable cooking functions: Slow Cook, Stove Top (Sear and Sauté), Steam, and Bake. This system utilizes Triple Fusion Heat technology, combining side, bottom, and steam heat for efficient and even cooking. This manual provides essential information for safe operation, setup, usage, and maintenance of your multi-cooker.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Ninja Customer Service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

COMPONENTS

Familiarize yourself with the parts of your Ninja MC760 Plus Multi-Cooker.



Image: The Ninja MC760 Plus Multi-Cooker, showing the main unit, control panel, and glass lid.

- **Main Unit:** Houses the heating elements and control panel.
- **Removable Cooking Pot:** 6-quart capacity, non-stick.
- **Glass Lid:** With handle, allows monitoring of cooking process.
- **Control Panel:** Digital display and function buttons.
- **Power Cord:** Detachable for storage.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the removable cooking pot and glass lid with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the multi-cooker on a dry, level, heat-resistant surface, away from walls and other appliances to ensure proper ventilation.
4. **Insert Pot:** Place the clean, dry cooking pot securely into the main unit.
5. **Power:** Plug the power cord into a 220V electrical outlet. The display will illuminate.

OPERATING INSTRUCTIONS

The Ninja MC760 Plus offers four primary cooking functions. Refer to the control panel image below for button identification.



Image: Detailed view of the Ninja MC760 Plus control panel, showing buttons for Slow Cook, Bake, Stove Top, Steam, and temperature/time adjustments.

1. Slow Cook Function

Ideal for tenderizing meats and simmering dishes over extended periods.

1. Add ingredients to the cooking pot and place the lid on top.
2. Press the **SLOW COOK** button.
3. Use the **UP/DOWN arrows** to select the desired temperature setting: **LOW** or **HIGH**.
4. Press the **TIME** button, then use the **UP/DOWN arrows** to set the cooking duration.
5. Press the **START/STOP** button to begin cooking.
6. The unit will automatically switch to **KEEP WARM** mode once cooking is complete.

2. Stove Top Function (Sear & Sauté)

Use this function for searing meats, sautéing vegetables, or browning ingredients before slow cooking.

1. Ensure the cooking pot is in the main unit.
2. Press the **STOVE TOP** button.
3. Use the **UP/DOWN arrows** to select the desired heat setting: **LOW** or **HIGH**.
4. Allow the unit to preheat for a few minutes. Add a small amount of oil if needed, then add ingredients.
5. Stir as necessary. When finished, press the **START/STOP** button to turn off.

3. Steam Function

Perfect for steaming vegetables, fish, or dumplings.

1. Add the appropriate amount of liquid (e.g., water or broth) to the bottom of the cooking pot. Ensure the liquid level is below any steaming rack if used (steaming rack not included).
2. Place ingredients on a steaming rack or directly into the liquid if suitable. Place the lid on top.
3. Press the **STEAM** button.
4. Press the **TIME** button, then use the **UP/DOWN arrows** to set the steaming duration.
5. Press the **START/STOP** button to begin steaming.

4. Bake Function

Use for baking casseroles, roasts, or other oven-style dishes.

1. Add ingredients to the cooking pot. Place the lid on top.
2. Press the **BAKE** button.
3. Use the **UP/DOWN arrows** to select the desired temperature.
4. Press the **TIME** button, then use the **UP/DOWN arrows** to set the baking duration.
5. Press the **START/STOP** button to begin baking.



Image: A user interacting with the control panel of the Ninja MC760 Plus Multi-Cooker in a kitchen setting.

CARE AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your multi-cooker.

- **Always unplug** the unit from the power outlet and allow it to cool completely before cleaning.
- **Cooking Pot and Lid:** The removable cooking pot and glass lid are dishwasher safe. However, for best results and to preserve the non-stick coating, hand washing with warm, soapy water and a non-abrasive sponge is recommended. Rinse thoroughly and dry completely.
- **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
- **Storage:** Store the multi-cooker in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working 220V outlet.
"POT" error message displayed.	Cooking pot not properly seated or foreign object beneath it.	Remove the cooking pot, check for any debris or food particles in the main unit's base, and re-seat the pot firmly. Ensure the pot is dry on the outside.
Food not cooking evenly.	Incorrect temperature/time setting; lid not sealed properly.	Verify settings. Ensure the lid is properly placed and sealed. Avoid frequently lifting the lid during slow cooking.
Unit emits smoke or unusual odor.	Food residue on heating element; new appliance odor.	Unplug immediately. Allow to cool. Clean any visible food residue. A slight odor on first use is normal. If smoke persists, discontinue use and contact customer support.

SPECIFICATIONS

- Model:** MC760
- Brand:** Ninja
- Capacity:** 6 Quarts
- Wattage:** 1460 watts
- Voltage:** 220 Volts
- Material:** Stoneware (pot lining)
- Dimensions:** 19.7 x 14.6 x 10.2 inches
- Item Weight:** 13 Pounds
- Control Method:** Touch, Programmable
- Dishwasher Safe:** Yes (removable pot and lid)

WARRANTY AND SUPPORT

Your Ninja MC760 Plus Multi-Cooker is covered by a limited warranty. For specific warranty details, please refer to the warranty card included with your product or visit the official Ninja website.

For technical support, troubleshooting assistance, or to order replacement parts, please contact Ninja Customer Service. Contact information can typically be found on the manufacturer's website or in the product packaging.

Online Resources: For additional recipes, tips, and product information, visit the official [Ninja Kitchen website](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B076JH6PCH>

More documents and user manuals: **<https://manuals.plus/>**