

Redi-Remote RTDV3000C

Replacement Remote for GPX DV3000C User Manual

Model: RTDV3000C | Brand: Redi-Remote

INTRODUCTION

This manual provides detailed instructions for the Redi-Remote replacement remote control, specifically designed for compatibility with the GPX DV3000C DVD player. This remote is a custom-built replacement and is not an original GPX product. It offers full functionality for your GPX DV3000C unit.

PRODUCT OVERVIEW





Figure 1: Front view of the Redi-Remote replacement remote for GPX DV3000C. The remote features a standard button layout for DVD player control, with a sliding cover revealing additional functions on the lower half.

The remote measures approximately 7.5 inches in length, 2.25 inches in width, and 0.75 inches in thickness. It is designed for ergonomic handling and features a two-part button layout: a primary section with essential controls and a lower section accessible by sliding down a cover, revealing advanced functions.

SETUP

Battery Installation

The remote requires 4 AAA batteries (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings

inside the compartment.

- Slide the battery compartment cover back into place until it clicks securely.

Note: Remove batteries if the remote will not be used for an extended period to prevent leakage and damage.

OPERATING INSTRUCTIONS

This section details the functions of the various buttons on your replacement remote control.

Upper Section Controls

Button	Function
PWR	Turns the GPX DV3000C DVD player on or off.
SLEEP	Activates or deactivates the sleep timer function (if supported by the DVD player).
TV/VIDEO	Switches the input source on a connected TV (if the remote is programmed for TV control, which this model is not designed for). Primarily for DVD player functions.
DISP	Displays on-screen information about the current playback status or settings.
CH+ / CH-	Navigates through chapters or tracks forward (+) or backward (-).
VOL+ / VOL-	Increases (+) or decreases (-) the volume level.
MUTE	Mutes or unmutes the audio output.
MENU	Accesses the main menu or disc menu.
RECALL	Recalls the previous channel or function.
0-9, 100	Numeric keypad for direct input of track numbers, chapter numbers, or other numerical selections. The "100" button may be used for direct access to track 100 or for specific menu navigation.
ENT	Confirms a selection or enters a value.

Lower Section Controls (Slide Down)

To access these controls, slide down the cover located on the lower half of the remote.

Button	Function
OPEN/CL	Opens or closes the disc tray.
STOP	Stops playback.
PLAY	Starts or resumes playback.
KARAOKE	Activates or deactivates karaoke mode (if supported by the DVD player).
SETUP	Accesses the system setup menu.
SKIP (<< / >>)	Skips to the previous (<<) or next (>>) chapter/track.
SEARCH (<< / >>)	Fast reverse (<<) or fast forward (>>) during playback.

Button	Function
MODE	Cycles through different playback modes or settings.
SEARCH	Initiates a search function within the disc.
MARK	Sets a bookmark or mark a specific point during playback.
TITLE	Accesses the disc's title menu.
ANGLE	Changes the viewing angle (if supported by the disc).
SUB-TITLE	Toggles subtitles on or off, or cycles through available subtitle languages.
ENTER	Confirms a selection or enters a value (duplicate of upper section for convenience).
AUDIO	Cycles through available audio tracks or languages.
CLR	Clears an entry or cancels a function.
A-B	Repeats a specific section between point A and point B.
PAUSE	Pauses playback. Press again to resume.
ZOOM	Zooms in or out on the video image.
SLOW (<< / >>)	Initiates slow motion playback (reverse << or forward >>).
3D	Activates or deactivates 3D mode (if supported by the DVD player and content).

Navigation Buttons: The directional arrow buttons (up, down, left, right) around the ENTER button are used for navigating menus and making selections.

MAINTENANCE

Cleaning the Remote

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials, as they may damage the remote's surface or buttons.

Battery Replacement

Replace batteries when the remote's range decreases or if it becomes unresponsive. Always replace all four AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Remote is not working.	• Batteries: Check if batteries are installed correctly (polarity) and if they are fresh. Replace if necessary. • Line of Sight: Ensure there are no obstructions between the remote and the DVD player's infrared sensor. • Distance: You might be too far from the DVD player. Move closer. • DVD Player Power: Ensure the DVD player is powered on.
Buttons are unresponsive or sticky.	• Dirt/Debris: Clean the remote, especially around the buttons, to remove any dirt or residue. • Battery Issues: Low batteries can sometimes cause intermittent unresponsiveness. Replace them.
Remote only controls some functions.	• This remote is specifically designed for the GPX DV3000C DVD player. It is not programmable for other devices (e.g., TV, VCR). Ensure you are attempting to control the correct device.

SPECIFICATIONS

- **Product Dimensions:** 7 x 3 x 1 inches
- **Item Weight:** 5 ounces
- **Model Number:** RTDV3000C
- **Batteries Required:** 4 AAA batteries (not included)
- **Connectivity Technology:** Infrared
- **Compatible Devices:** GPX DV3000C DVD/Blu-ray Player
- **Max Number of Supported Devices:** 1
- **Special Feature:** Ergonomic design, sliding cover for additional buttons.

WARRANTY AND SUPPORT

This product is a custom-built replacement remote by Redi-Remote. For any concerns or issues with the remote after purchase, please contact the seller directly for support. Redi-Remotes are designed to function out-of-the-box with the specified model and do not require programming for the intended device.

For further assistance, please refer to the original GPX DV3000C DVD player's manual for specific functions of the player itself, or contact the Redi-Remote seller through your purchase platform.

© 2023 Redi-Remote. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B076JLQFML>

More documents and user manuals: <https://manuals.plus/>