Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Nerf /
- Nerf Rival Hera MXVII-1200 Blaster User Manual

Nerf MXVII-1200

Nerf Rival Hera MXVII-1200 Blaster User Manual

Model: C1698

1. Introduction

This manual provides essential instructions for the safe and effective use of your Nerf Rival Hera MXVII-1200 blaster. Please read all instructions carefully before assembly and operation. Retain this manual for future reference. The Nerf Rival Hera MXVII-1200 is a motorized, semi-automatic blaster designed for high-impact foam dart battles, featuring a 12-round capacity magazine and high-velocity performance.

2. SAFETY INFORMATION

WARNING: To avoid injury, use only official Nerf Rival rounds. Do not modify rounds or blaster. Always wear eye protection when using this product. Do not aim at eyes or face. Adult supervision recommended.

- Always wear eye protection (not included) when operating the blaster.
- Do not aim or fire at people or animals at close range.
- Use only official Nerf Rival rounds. Other rounds may not function correctly or could cause damage.
- · Keep fingers and other objects away from the firing mechanism and round exit port.
- Do not modify the blaster or its rounds.
- Not suitable for children under 14 years.

3. WHAT'S IN THE BOX

Verify that all components are present before proceeding with setup.

- Nerf Rival Hera MXVII-1200 Blaster
- 12 High-Impact Rounds
- 12-Round Magazine
- Instruction Manual (this document)



Image 1: Packaging of the Nerf Rival Hera MXVII-1200 Blaster, showing the blaster and its features.

4. SETUP

4.1 Battery Installation

The Nerf Rival Hera MXVII-1200 requires 4 C batteries (not included) or a Nerf Rival Rechargeable Battery Pack (sold separately).

- 1. Locate the battery compartment on the blaster, typically on the handle or stock.
- 2. Using a Phillips head screwdriver, unscrew the battery compartment cover.
- 3. Insert 4 new C batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
- 4. Replace the battery compartment cover and secure it with the screw.
- 5. Alternatively, if using the Nerf Rival Rechargeable Battery Pack, follow its specific installation instructions.

Note: For optimal performance and reduced weight, consider purchasing the Nerf Rival Rechargeable Battery Pack.

4.2 Loading the Magazine

- 1. Ensure the blaster is unloaded and the safety switch is engaged (if applicable).
- 2. Take the 12-round magazine.
- 3. Insert the Nerf Rival High-Impact Rounds into the magazine one by one, pushing them down until they click into place. Do not overfill.
- 4. Once loaded, insert the magazine into the blaster's magazine well until it locks securely.



Image 2: The Nerf Rival Hera MXVII-1200 Blaster shown with its loaded magazine and two team identification flags (red and blue).

5. OPERATING THE BLASTER

5.1 Powering On and Firing

- 1. Ensure eye protection is worn.
- 2. With the loaded magazine inserted, locate the acceleration trigger (usually a small button or lever near the main trigger).
- 3. Press and hold the acceleration trigger to power on the motor. You will hear the motor rev up.
- 4. While holding the acceleration trigger, pull the main trigger to fire a round. The Hera MXVII-1200 is semi-automatic, meaning one round is fired per pull of the main trigger.
- 5. Release the acceleration trigger when not actively firing to conserve battery life.



Image 3: A user demonstrating the proper grip and aiming technique for the Nerf Rival Hera MXVII-1200 Blaster, wearing protective gear.

5.2 Magazine Release

To remove the magazine for reloading or storage:

- 1. Locate the magazine release button, typically near the base of the magazine well.
- 2. Press the magazine release button and pull the magazine downwards to remove it.

6. MAINTENANCE

6.1 Cleaning

- Wipe the blaster exterior with a clean, damp cloth. Do not submerge the blaster in water.
- Ensure no dirt or debris enters the firing mechanism or magazine well.

6.2 Storage

- Remove batteries from the blaster if it will not be used for an extended period to prevent leakage.
- Store the blaster and rounds in a cool, dry place away from direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Blaster does not fire or motor does not rev.	Batteries are dead or incorrectly installed. Magazine not fully inserted. Acceleration trigger not held down.	Replace batteries or check polarity. Push magazine firmly until it clicks. Ensure acceleration trigger is fully depressed before pulling main trigger.

Problem	Possible Cause	Solution
Rounds are jamming.	Non-official Nerf Rival rounds used. Damaged rounds. Magazine improperly loaded.	Use only official Nerf Rival rounds. Discard damaged rounds. Ensure rounds are loaded correctly and not forced.
Reduced firing range or velocity.	Low batteries. Worn or damaged rounds.	Replace batteries. Use new, undamaged official Nerf Rival rounds.

8. SPECIFICATIONS

• Model: Nerf Rival Hera MXVII-1200 (C1698)

• Power Source: 4 x C Batteries (not included) or Nerf Rival Rechargeable Battery Pack (sold separately)

• Ammunition: Nerf Rival High-Impact Rounds

• Magazine Capacity: 12 Rounds

• Dimensions: Approximately 4.75 x 19.5 x 11.5 inches

Weight (empty): Approximately 2 pounds
Recommended Age: 14 years and up

• Manufacturer: Hasbro

9. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts and accessories, please visit the official Nerf website or contact Hasbro customer service.

Official Nerf Website: www.hasbro.com/nerf

Please have your product model number (C1698) and purchase date available when contacting support.

© 2023 Hasbro. All Rights Reserved. Nerf and all related properties are trademarks of Hasbro.

Related Documents - MXVII-1200



Nerf Hyper MACH-100 Blaster: Operating and Safety Instructions

Comprehensive guide for the Nerf Hyper MACH-100 blaster, detailing how to load, fire, clear jams, store the blaster, and important safety precautions. Includes battery information and product compatibility.



Nerf Roblox Arsenal Pulse Laser Blaster Instructions

Comprehensive guide on how to operate, load, fire, and clear jams for the Nerf Roblox Arsenal Pulse Laser motorized dart blaster. Includes safety warnings and battery information.



NERF Modulus ECS-10 Blaster: Instructions and Safety Guide

Official instructions and safety information for the NERF Modulus ECS-10 blaster by Hasbro. Learn how to load, fire, maintain, and safely use your NERF blaster.



Nerf N-Strike Elite Strongarm Blaster: User Guide

Official instructions for the Nerf N-Strike Elite Strongarm toy blaster. Learn how to load darts, fire single shots, and use the slam-fire feature for rapid firing. Includes safety warnings and product details.



Nerf Ultra One Blaster: Assembly, Loading, and Firing Instructions

A comprehensive guide to assembling, loading, and operating the Nerf Ultra One Motorized Blaster, including important safety information and troubleshooting tips.



Nerf Fortnite AR-L Blaster: Instructions and Features

This document provides instructions and details for the Nerf Fortnite AR-L Blaster, including how to clear jams, insert batteries, load and fire darts, and store the blaster. It features multilingual support and highlights key components like the trigger, flip-up sight, tactical rail, and acceleration button.