



[Manuals.plus](#) /

› [Magnavox](#) /

› Magnavox MC345 4-in-1 Universal Remote Control User Manual

Magnavox MC345

Magnavox MC345 4-in-1 Universal Remote Control User Manual

Model: MC345 (813258)

Control up to 4 devices with one remote.

INTRODUCTION

This manual provides detailed instructions for setting up and operating your Magnavox MC345 4-in-1 Universal Remote Control. This remote is designed to simplify your home entertainment experience by controlling up to four different devices, including televisions, DVD players, VCRs, and satellite receivers, from a single unit. Please read this manual thoroughly before use to ensure proper setup and functionality.



Image: Front, side, and back views of the Magnavox MC345 Universal Remote Control, highlighting its sleek black design and button layout.

SETUP

1. Battery Installation

The Magnavox MC345 Universal Remote Control requires two (2) AAA size batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and lift it off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) ends align with the polarity markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote is designed to retain codes when changing batteries, minimizing the need for reprogramming after battery replacement.

4 in 1 universal remote control

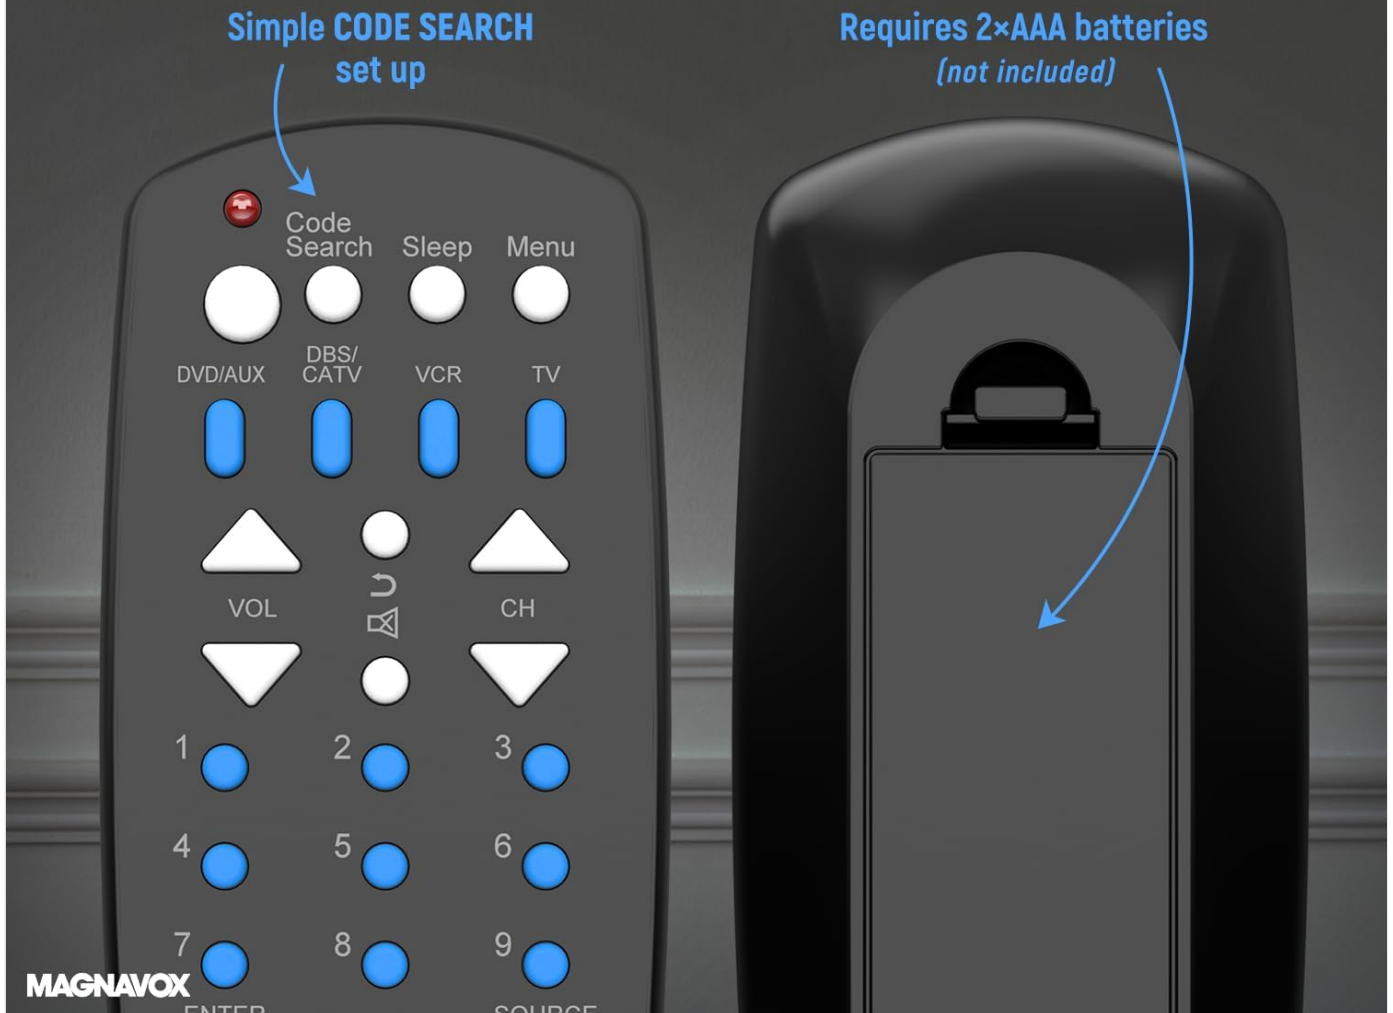


Image: A visual guide demonstrating how to open the battery compartment and insert two AAA batteries into the Magnavox MC345 remote control.

2. Programming Your Remote (Code Search Method)

To program your Magnavox MC345 Universal Remote Control to operate your devices, use the following steps with the provided code list (usually included with the product or available online):

1. Turn on the device you wish to control (e.g., TV, DVD player).
2. Press and hold the **CODE SEARCH** button on the remote for approximately two seconds until the LED indicator light illuminates.
3. While the LED is illuminated, press the blue device selection button at the top of the remote that corresponds to your desired device (e.g., **TV**, **DVD/AUX**, **DBS/CATV**, **VCR**). The LED will blink once.
4. Using the number pad, enter the 4-digit code for your device from the code list. The LED indicator will turn off if the code is accepted.
5. Test the remote's functionality with your device. Try pressing the **POWER** button or **CHANNEL UP/DOWN** buttons.

If your device does not respond, repeat the programming steps using the next code listed for your brand, or try the automatic code search method if available in the full manual.

WORKS

with most
major brands



MAGNAVOX

Image: The Magnavox MC345 remote control, emphasizing its compatibility with most major brands of electronic devices.

OPERATING INSTRUCTIONS

Once programmed, your Magnavox MC345 Universal Remote Control can operate your selected devices. Here are general operating guidelines:

- **Device Selection:** Before operating a specific device, press the corresponding blue device selection button (**TV**, **DVD/AUX**, **DBS/CATV**, **VCR**) at the top of the remote. The LED indicator will briefly flash to confirm your selection.
- **Power:** Use the **POWER** button to turn your selected device on or off.
- **Volume Control:** Use the **VOL +** and **VOL -** buttons to adjust the volume.
- **Channel Control:** Use the **CH +** and **CH -** buttons to change channels.
- **Number Pad:** Use the number buttons (0-9) to directly input channel numbers or menu selections.
- **Menu Navigation:** The remote features dedicated menu navigation keys, including **MENU**, **ENTER**, and directional arrows (if applicable to the programmed device's code).
- **Playback Controls:** For DVD/VCR devices, use the **PLAY**, **PAUSE**, **STOP**, **REW**, and **FF** buttons.

OPERATES ON



Television



DVD player



VCR player



Any auxiliary
device



Image: The Magnavox MC345 remote control shown in a home environment, illustrating its capability to operate various devices such as TVs, DVD players, VCRs, and auxiliary devices.

Official Product Video: Setup Guide

Your browser does not support the video tag.

Video: A short instructional video demonstrating the setup process for the Magnavox MC345 4-in-1 Universal Remote Control, including battery installation and device programming using the code search method. (Duration: 0:57)

TROUBLESHOOTING

If your Magnavox MC345 Universal Remote Control is not functioning as expected, please refer to the following common issues and solutions:

- **Remote not responding:**
 - Ensure batteries are inserted correctly with proper polarity.

- Replace old batteries with new AAA batteries.
 - Make sure there are no obstructions between the remote and the device's infrared sensor.
 - Confirm you have selected the correct device button (TV, DVD/AUX, etc.) before pressing other function buttons.
- **Device not responding after programming:**
 - The entered 4-digit code may be incorrect. Repeat the programming steps using the next code listed for your device's brand in the code list.
 - Ensure the device is turned on before attempting to program the remote.
 - **Some functions not working:**
 - Not all functions of your original remote may be supported by the universal remote, especially for advanced features.
 - Try a different code for your device, as some codes may offer better compatibility with specific functions.

For a comprehensive list of codes and advanced troubleshooting, please refer to the full owner's manual provided with your product or available on the Magnavox support website.

SPECIFICATIONS

| | |
|--|---|
| Model Number | MC345 (813258) |
| Brand | Magnavox |
| Max Number of Supported Devices | 4 |
| Compatible Devices | Television, DVD Player, VCR Player, Satellite Receiver, Auxiliary Devices |
| Connectivity Technology | Infrared (IR) |
| Power Source | 2 x AAA Batteries (not included) |
| Product Dimensions (L x W x H) | 9.65 x 1.57 x 4.53 inches |
| Item Weight | 2.89 ounces |
| Manufacturer | MAGNAVOX |

DIMENSIONS

4.53 × 1.57 × 9.65"



Image: A visual representation of the Magnavox MC345 remote control's dimensions, indicating its length, width, and height.

MAINTENANCE

To ensure the longevity and optimal performance of your Magnavox MC345 Universal Remote Control, follow these simple maintenance tips:

- **Cleaning:** Wipe the remote regularly with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as they may damage the surface or internal components.
- **Battery Care:** If the remote will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage to the remote.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the remote or subjecting it to strong impacts, as this can damage internal circuitry.

WARRANTY AND SUPPORT

For warranty information, technical support, or to access the complete code library, please refer to the official Magnavox website or the contact information provided in the original product packaging. You may also find additional resources and FAQs on the Magnavox support page.

A PDF version of the user guide is available for download: [Magnavox MC345 User Guide \(PDF\)](#)

