

[Manuals.plus](#) /

› [Briloner](#) /

› BRILONER 3-Spot LED Ceiling Light Instruction Manual, Model 3313-033R

Briloner 3313-033R

BRILONER 3-Spot LED Ceiling Light Instruction Manual

Model: 3313-033R

1. INTRODUCTION

Thank you for choosing the BRILONER 3-Spot LED Ceiling Light, Model 3313-033R. This modern and energy-efficient ceiling light features three rotatable and pivotable LED spots, allowing for flexible illumination. Designed with a retro-elegant copper finish, it is suitable for various indoor spaces such as living rooms, bedrooms, hallways, and stairwells. This manual provides essential information for safe installation, operation, and maintenance of your new lighting fixture.

Important Safety Information

- Always disconnect the power supply before installation, maintenance, or bulb replacement.
- Installation should be performed by a qualified electrician if you are unsure.
- This product is designed for indoor use only (IP20 rating).
- Do not exceed the specified wattage for replacement bulbs.
- Keep packaging materials away from children.

2. PACKAGE CONTENTS

Please check that all components are present and undamaged. If any parts are missing or damaged, contact your retailer.

- 1 x BRILONER 3-Spot LED Ceiling Light fixture
- 3 x GU10 LED Bulbs (3W each)
- Mounting hardware (screws, wall plugs)
- Instruction Manual



Image: The BRILONER 3-Spot LED Ceiling Light, showcasing its three adjustable copper-colored spotlights and curved design.

3. SETUP AND INSTALLATION

Follow these steps carefully to install your ceiling light. If you are not confident with electrical installations, consult a qualified electrician.

1. Prepare for Installation:

- Turn off the main power supply at the circuit breaker before starting any electrical work.
- Ensure the mounting surface is clean, dry, and capable of supporting the fixture's weight (approx. 780g).

2. Mark Drilling Points:

- Hold the mounting bracket (usually attached to the fixture's base) against the ceiling at the desired installation point.
- Mark the positions for drilling holes using a pencil.

3. Drill Holes and Insert Wall Plugs:

- Drill holes at the marked positions. Use an appropriate drill bit size for the provided wall plugs.
- Insert the wall plugs flush with the ceiling surface.

4. Connect Wiring:

- Carefully connect the household electrical wires to the terminal block on the light fixture. Ensure correct polarity (Live, Neutral, Earth).
- Secure all connections tightly.

5. Mount the Fixture:

- Attach the light fixture to the ceiling using the screws provided, securing it firmly to the wall plugs.

6. Insert Bulbs:

- Gently insert the GU10 LED bulbs into each of the three spotlights. Twist to secure.

7. Restore Power:

- Once installation is complete and all connections are secure, restore power at the circuit breaker.
- Test the light fixture.



Image: The BRILONER 3-Spot LED Ceiling Light installed on a ceiling, demonstrating its aesthetic and functional placement in a room.

4. OPERATING INSTRUCTIONS

The BRILONER 3-Spot LED Ceiling Light is designed for simple operation.

- **Turning On/Off:** Operate the light using your standard wall switch connected to the fixture.

- **Adjusting Spotlights:** Each of the three spotlights can be individually rotated and pivoted to direct light precisely where needed. Gently adjust the spot heads to your desired angle.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your light fixture.

- **Cleaning:**
 - Ensure the power is off before cleaning.
 - Wipe the fixture with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish.
- **Bulb Replacement:**
 - Always turn off the power supply before replacing bulbs.
 - Allow bulbs to cool completely before handling.
 - To remove a GU10 bulb, gently push it in and twist counter-clockwise.
 - Insert a new GU10 LED bulb (max 3W) by pushing it in and twisting clockwise until secure.

6. TROUBLESHOOTING

If you encounter issues with your light fixture, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Loose wiring connection. Faulty bulb.	Check circuit breaker and wall switch. Verify wiring connections (ensure power is off). Replace bulb with a known working one.
Light flickers.	Loose bulb. Incompatible dimmer switch (this fixture is not dimmable). Faulty bulb.	Ensure bulb is securely inserted. Remove any dimmer switches; use a standard on/off switch. Replace bulb.
Light is too dim/bright.	Incorrect bulb wattage. Fixture is not dimmable.	Ensure 3W GU10 LED bulbs are used. This fixture is not dimmable; light output is fixed.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Brand	Briloner
Model Number	3313-033R
Dimensions (L x W x H)	28 x 28 x 17 cm
Weight	780 g
Material	Metal (Copper finish)

Number of Bulbs	3
Bulb Type	LED
Socket Type	GU10
Power per Bulb	3 Watts
Luminous Flux	250 lm (per bulb)
Color Temperature	3000 Kelvin (Warm White)
Color Rendering Index (CRI)	80
Average Lifespan	20,000 - 25,000 Hours
Voltage	230 Volts
IP Rating	IP20 (Indoor use only)
Dimmable	No
Energy Efficiency Class	G (for included light source)



Image: Energy efficiency label indicating class G for the included light source.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Briloner customer service or visit their official website. Keep your proof of purchase for any warranty claims.
You can find more information about Briloner products on their Amazon store:[Briloner Amazon Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B076KQ3RWN>

More documents and user manuals: <https://manuals.plus/>