

[Manuals.plus](#) /

› [Pekatherm](#) /

› Pekatherm F55 Foot Warmer Boot with Removable Sock | 100W, 3 Temperature Levels

Pekatherm F55

Pekatherm F55 Foot Warmer Boot Instruction Manual

Model: F55 | Brand: Pekatherm

INTRODUCTION

Thank you for choosing the Pekatherm F55 Foot Warmer Boot. This electric foot warmer is designed to provide soothing warmth and comfort for your feet. Featuring 3 temperature levels, a removable and washable inner sock, and an automatic shut-off function, it offers a safe and relaxing experience. Please read this manual carefully before use to ensure proper operation and maintenance.



Image: The Pekatherm F55 Foot Warmer Boot, showing its soft, beige exterior and integrated controller.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of burns, electric shock, fire, and injury to persons, this product must be used in accordance with the following instructions:

- Always unplug the foot warmer from the electrical outlet immediately after using and before cleaning.
- Do not use while sleeping.
- Do not use on an infant, invalid, or a sleeping or unconscious person.
- Do not use on sensitive skin areas or on a person with poor blood circulation.
- Never operate if the cord or plug is damaged, if it is not working properly, if it has been dropped or damaged, or dropped into water.
- Keep the cord away from heated surfaces.
- Do not use pins or other metallic fasteners with this appliance.
- Do not use in an oxygen-enriched environment.
- Do not sit on or crush the foot warmer.

- This product complies with European safety standards and is designed to prevent overheating.

PRODUCT FEATURES

- **Keeps Feet Warm:** Heat application promotes blood circulation and relaxation. The insulation prevents temperature loss, allowing you to warm up after a cold day.
- **Controlled Heat:** Ideal for keeping your feet warm while relaxing at home, providing thermotherapy benefits. Your feet will be warm in seconds.
- **3 Temperature Levels:** Adjustable heat settings to suit your comfort needs.
- **Automatic Shut-off:** The device automatically turns off after 2 hours of continuous operation for safety.
- **Removable and Washable Sock:** The inner sock is easily removable for convenient hand or machine washing.
- **Material:** Made of soft polyester for maximum comfort.



Image: A person's feet comfortably placed inside the Pekatherm F55 Foot Warmer Boot, illustrating its use.

SETUP

1. **Unpack the Device:** Carefully remove the foot warmer and its components from the packaging. Ensure all parts, including the foot warmer boot and the controller, are present and undamaged.
2. **Position the Foot Warmer:** Place the foot warmer on a flat, stable surface where you intend to use it, such as near a sofa or chair.
3. **Connect the Controller:** Ensure the controller cable is securely plugged into the foot warmer unit.
4. **Plug into Power:** Insert the power plug into a standard electrical outlet.
5. **Prepare for Use:** The inner sock is already installed. If you wish to wash it before first use, refer to the 'Maintenance' section.



Image: The Pekatherm F55 Foot Warmer Boot with its attached controller, ready for connection.

OPERATING INSTRUCTIONS

The Pekatherm F55 Foot Warmer is easy to operate using its integrated controller.

1. **Power On:** Press the power button on the controller to turn on the foot warmer. The indicator light will illuminate.
2. **Select Temperature Level:** Use the temperature selection button to cycle through the 3 available heat levels. Each press will change the level, indicated by the corresponding light on the controller.
3. **Enjoy the Warmth:** Place your feet inside the boot and relax. The foot warmer will quickly reach the selected temperature.
4. **Automatic Shut-off:** For your safety, the device will automatically turn off after approximately 2 hours of continuous operation. If you wish to continue using it, simply turn it back on.
5. **Power Off:** When you are finished, press the power button again to turn off the foot warmer. Unplug the device from the electrical outlet when not in use.



Image: Close-up view of the Pekatherm F55 controller, showing the power button and temperature level indicators.

MAINTENANCE

Proper care ensures the longevity and hygiene of your Pekatherm F55 Foot Warmer.

Cleaning the Removable Sock

1. **Unplug the Device:** Always ensure the foot warmer is unplugged from the power outlet before cleaning.
2. **Remove the Inner Sock:** Gently pull out the inner sock from the main foot warmer unit.
3. **Washing:** The inner sock can be washed by hand or machine. Follow the care label instructions for specific temperature and detergent recommendations. Typically, a gentle cycle with mild detergent is suitable.
4. **Drying:** Allow the sock to air dry completely before reinserting it into the foot warmer. Do not tumble dry or iron.
5. **Reassembly:** Once dry, carefully place the clean inner sock back into the foot warmer unit, ensuring it is properly aligned.



3 NIVELES DE TEMPERATURA
PARA CADA UNA DE TUS NECESIDADES



POTENCIA
100 W



FUNCIONAMIENTO A BAJA TENSIÓN
MÁXIMA SEGURIDAD DURANTE SU USO

Image: The removable inner sock of the Pekatherm F55 Foot Warmer, detached from the main unit.



Image: A person placing the removable sock into a washing machine, demonstrating its washability.

Storage

To keep your heated boot in good condition, ensure it is clean and dry before storing. Store it in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

TROUBLESHOOTING

If you encounter any issues with your Pekatherm F55 Foot Warmer, please refer to the following common problems and solutions:

- **Device does not turn on:**

- Ensure the power plug is securely inserted into a working electrical outlet.
- Check if the controller cable is firmly connected to the foot warmer unit.
- Verify that the power button on the controller has been pressed.

- **Foot warmer is not heating:**

- Confirm that a temperature level has been selected on the controller.
 - Allow a few minutes for the device to heat up.
 - If the device has been on for over 2 hours, it may have activated the automatic shut-off. Turn it off and then back on.
- **Unusual smell or sound:**
 - Immediately unplug the device.
 - Do not use the product and contact customer support.

If the problem persists after trying these steps, please contact Pekatherm customer support for assistance.

SPECIFICATIONS

Feature	Detail
Product Name	Heated Boots
Brand	Pekatherm
Model Number	F55
Power	100 W
Temperature Levels	3
Automatic Shut-off	After 2 hours
Composition	100% Polyester
Dimensions (approx.)	27 x 30 x 23 cm (Product), 32 x 23.7 x 10.1 cm (Package)
Weight (approx.)	710 grams
Country of Origin	China

WARRANTY AND SUPPORT

Pekatherm products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Pekatherm website. If you require technical support, have questions about your product, or need to report an issue, please contact Pekatherm customer service through their official channels. Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question