

JOLY JOY JH-FL0001

JOLY JOY LED Modern Floor Lamp

Model: JH-FL0001

User Instruction Manual

1. INTRODUCTION

Thank you for choosing the JOLY JOY LED Modern Floor Lamp. This versatile and stylish lamp is designed to brighten your living spaces with adjustable illumination, offering both touch and remote control options. Its flexible gooseneck and slim profile make it a perfect addition to any room, from living rooms and bedrooms to offices.

This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure you get the most out of your new floor lamp.

2. PACKAGE CONTENTS

Please verify that all items are present in the package:

- 1 x Joly Joy LED Floor Lamp
- 1 x Power Adapter
- 1 x Wireless Remote Control (Batteries are not included)
- 1 x User Manual (This document)

3. ASSEMBLY INSTRUCTIONS

The JOLY JOY LED Floor Lamp is designed for quick and easy assembly. No special tools are required.

1. Carefully unpack all components from the box.
2. Connect the lamp sections by twisting them clockwise until secure. Ensure the power cable is not pinched during assembly.
3. Attach the lamp head to the main pole, ensuring it is firmly connected.
4. Place the heavy base on a flat, stable surface.
5. Connect the power adapter to the lamp's power input located near the base.
6. Plug the power adapter into a standard electrical outlet.



Figure 1: A detailed diagram illustrating the lamp's compact dimensions, including its base diameter and overall height, emphasizing its space-saving design.

4. OPERATING INSTRUCTIONS

4.1. Touch Control

The touch button is conveniently located at the top of the lamp head.

- **Turn On/Off:** Short press once to turn on the light. Short press again to turn off the light.
- **Adjust Color Temperature:** Touch once at a time to cycle through 4 color temperature options: 3000K (Warm White), 4000K (Natural White), 4800K (Cool White), and 5500K (Daylight White).
- **Adjust Brightness:** Long press to gradually increase brightness. Release and long press again to gradually decrease brightness. The lamp offers 5 brightness options: 20%, 40%, 60%, 80%, and 100%.



Figure 2: Illustration detailing the lamp's dual operation modes: a touch-sensitive button on the lamp head and a comprehensive remote control.

4.2. Remote Control

The wireless remote control provides convenient operation from up to 33 feet (10 meters) away.

- **Power Button:** Turns the lamp on or off.
- **Brightness Adjustment:** Use the '+' and '-' buttons to infinitely adjust brightness levels.
- **Color Temperature Adjustment:** Use the sun icon buttons to infinitely adjust color temperature from warm to cool.
- **Pre-set Lighting Modes:** The remote includes buttons for typical lighting modes (e.g., reading, relaxation, night light) for quick selection.
- **Memory Function:** The lamp remembers the last brightness and color temperature settings used.



Figure 3: The JOLY JOY LED Floor Lamp, showcasing its sleek black design and the included remote control for convenient operation.

4.3. Flexible Gooseneck

The lamp features a durable aluminum gooseneck that allows for 360-degree rotation and multi-angle adjustment. This enables you to direct light precisely where it's needed, making it ideal for reading, task lighting, or creating ambient illumination.

360° Rotation & Multi-Angle Adjustable

Durable gooseneck design and free to bend, irradiated widely and highly brightness to meet your nighttime lighting needs.

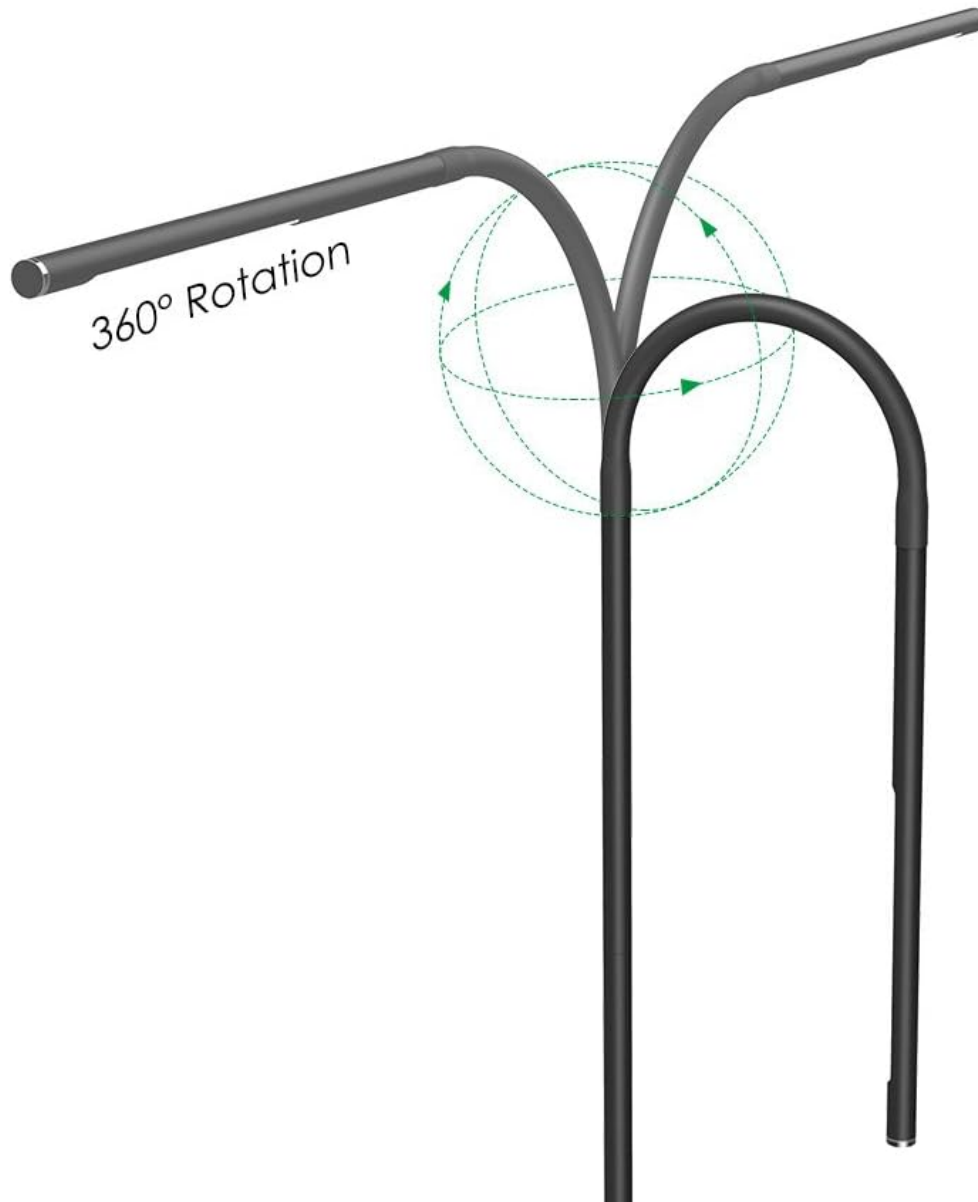


Figure 4: A diagram highlighting the flexible aluminum gooseneck, allowing for 360-degree rotation and precise light direction.

5. KEY FEATURES

- **Stylish & Modern Design:** Slim and lightweight metal stand with a full black finish, adding a contemporary touch to any decor.
- **Dual Operation Modes:** Conveniently control the lamp via touch-sensitive button on the lamp head or with the included wireless remote control.
- **Adjustable Brightness & Color Temperature:** Offers 5 brightness settings and 4 color temperatures (3000K-5500K) up to 800 lumens for customized lighting.
- **360-Degree Adjustable Gooseneck:** Flexible aluminum gooseneck allows for precise light positioning, ideal for various activities.

- **Stable Base:** Heavy, weighted base ensures stability and prevents tipping, while its small profile saves space.
- **Memory Function:** Remembers your last used brightness and color temperature settings.



Figure 5: Visual representation of the lamp's 5 brightness settings (20% to 100%) and 4 color temperature options (3000K to 5500K).

6. SPECIFICATIONS

Feature	Detail
Power Consumption	7W
Output	DC 24V/0.3A
Input AC/Voltage	100V-240V 50/60 Hz
Color Temperature Range	3000K $\pm 10\%$ ~ 5500K $\pm 10\%$

Feature	Detail
Maximum Luminance	800 lumens ±5%
Material	Aluminum + Silicone + PC
CRI	≥85Ra
Weight	2.21 Kilograms (4.86 pounds)
Cord Length	216 cm
Product Dimensions	13.22"D x 12.08"W x 44.6"H
Finish Type	Black Finish
Light Source Type	LED
Control Method	Remote, Touch

7. CARE AND MAINTENANCE

- **Cleaning:** Disconnect the lamp from the power source before cleaning. Use a soft, dry cloth to wipe the lamp. Do not use abrasive cleaners or solvents.
- **Storage:** If storing the lamp for an extended period, unplug it and store it in a cool, dry place.
- **Handling:** While the gooseneck is flexible, avoid excessive force or sharp bends to prevent damage.

8. TROUBLESHOOTING

Problem	Possible Cause / Solution
Lamp does not turn on.	◦ Ensure the power adapter is securely plugged into both the lamp and the wall outlet. ◦ Check if the wall outlet is functioning by plugging in another device. ◦ Verify that the power adapter is not damaged.
Remote control is not working.	◦ Ensure batteries are correctly installed in the remote control and are not depleted. ◦ Point the remote directly at the lamp's sensor. ◦ If the remote is new or has lost pairing, re-pair it by unplugging the lamp, holding the power button on the remote for 5 seconds, and then plugging the lamp back in while still holding the remote power button for another 5 seconds.
Brightness or color temperature cannot be adjusted.	◦ Ensure you are using the correct buttons on the remote or the touch control. ◦ If using the remote, check battery levels.

9. WARRANTY AND SUPPORT

The JOLY JOY LED Modern Floor Lamp comes with a **12-month service warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.

For any questions, concerns, or warranty claims, please contact our customer service team. We are committed to assisting you until your 100% satisfaction.

Please retain your proof of purchase for warranty validation.

© 2024 JOLY JOY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question