

IPEGA PG-9076

IPEGA PG-9076 Bluetooth & 2.4G Wireless Game Controller User Manual

Model: PG-9076

INTRODUCTION

Thank you for choosing the IPEGA PG-9076 Wireless Game Controller. This manual provides detailed instructions on how to set up, operate, and maintain your device. Please read this manual carefully before use to ensure optimal performance and longevity of your controller.

The IPEGA PG-9076 is a versatile game controller supporting both Bluetooth and 2.4G wireless connections, compatible with a wide range of devices including smartphones, tablets, PCs, and PS3 consoles. Its ergonomic design ensures comfortable gaming sessions.

PACKAGE CONTENTS

- 1 x IPEGA PG-9076 Game Controller
- 1 x USB Charging Cable
- 1 x User Manual (this document)

PRODUCT OVERVIEW



Figure 1: Front view of the IPEGA PG-9076 Game Controller, showcasing its ergonomic design and button layout.

360° Clickable Analog Stick

Support mouse touch, Android or PC platform to operate more convenient! Support mouse touch, Android or PC platform to operate more convenient!



Figure 2: Close-up view of the 360° clickable analog stick, indicating precise control for gaming.



Figure 3: The controller with a smartphone securely mounted in the integrated holder, ready for mobile gaming.



Figure 4: Side view demonstrating the extendable phone holder mechanism, allowing for various smartphone sizes.

SETUP AND CONNECTION

Charging the Controller

Before first use, fully charge the controller. Connect the supplied USB cable to the controller's charging port and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The charging indicator light will show the charging status and turn off when fully charged.

Connecting via Bluetooth (Smartphones, Tablets, PCs)

1. Ensure the controller is powered off.
2. Press and hold the **HOME** button along with the corresponding mode button for your device (e.g. **X + HOME** for Android, **Y + HOME** for iOS, **A + HOME** for PC X-Input mode). Refer to the controller's button labels for specific modes.
3. The indicator light will flash rapidly, indicating it's in pairing mode.
4. On your device, enable Bluetooth and search for available devices.

5. Select "PG-9076" from the list of found devices to pair.
6. Once paired, the indicator light on the controller will become solid.

Connecting via 2.4G Wireless (PCs, Smart TVs, PS3)

For devices that support 2.4G wireless connection, use the included 2.4G USB dongle (if applicable, not explicitly mentioned in product description but implied by "2.4G Version").

1. Plug the 2.4G USB dongle into an available USB port on your PC, Smart TV, or PS3.
2. Ensure the controller is powered off.
3. Press and hold the **HOME** button along with the 2.4G mode button (usually indicated by a specific icon or button combination).
4. The controller will automatically connect to the dongle. The indicator light will become solid once connected.

Note: Not all games or platforms may fully support all controller functions. Some games may require specific controller modes or mapping adjustments.

OPERATING INSTRUCTIONS

Basic Controls

- **Analog Sticks:** For precise 360-degree movement and camera control.
- **D-Pad:** For directional input, typically used in menu navigation or classic games.
- **Action Buttons (A, B, X, Y):** For in-game actions such as jumping, attacking, interacting.
- **Shoulder Buttons (L1, R1) & Triggers (L2, R2):** For various in-game functions like shooting, aiming, or special abilities.
- **START/SELECT:** For pausing games, accessing menus, or specific in-game commands.
- **TURBO Button:** Activates continuous rapid firing for selected action buttons. To set, press the desired action button (e.g., A) and then the TURBO button. To cancel, repeat the process.

Smartphone Holder Usage

The integrated smartphone holder can be extended to securely hold your mobile device. Gently pull the top part of the holder upwards and place your smartphone within the clamps. Ensure the phone is centered and stable before gaming.

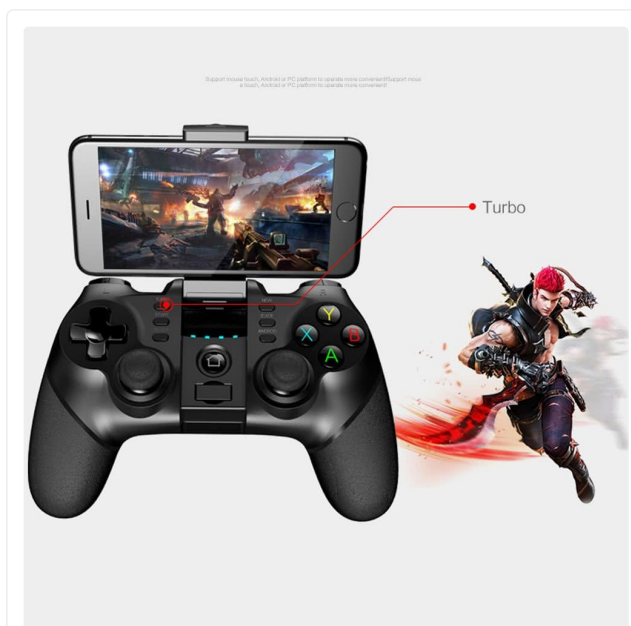


Figure 5: The controller in use with a smartphone, highlighting the "Turbo" function for enhanced gameplay.

MAINTENANCE

- Keep the controller clean by wiping it with a soft, dry cloth.
- Avoid exposing the controller to extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble the controller, as this will void the warranty and may cause damage.
- Store the controller in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Controller does not turn on.	Battery may be depleted. Connect the controller to a power source using the USB cable and charge it fully.
Controller does not connect via Bluetooth.	<ul style="list-style-type: none">◦ Ensure the controller is in the correct pairing mode for your device (e.g., Android, iOS, PC).◦ Make sure Bluetooth is enabled on your device.◦ Delete previous pairings on your device and try pairing again.◦ Ensure the controller is within the 8m transmission distance.
Buttons or analog sticks are unresponsive.	<ul style="list-style-type: none">◦ Re-pair the controller with your device.◦ Check if the game supports external controllers or requires specific mapping.◦ Ensure the controller's battery is not low.
Controller disconnects frequently.	<ul style="list-style-type: none">◦ Ensure there are no strong wireless interferences nearby.◦ Keep the controller within the optimal transmission distance.◦ Charge the controller fully.

SPECIFICATIONS

Feature	Detail
Brand	IPEGA
Model	PG-9076
Connectivity	Bluetooth, 2.4G Wireless
Compatible Systems	Android, iOS, Win XP/7/8/10
Compatible Devices	Smartphones, Tablets, PCs, Smart TVs, Set-top Boxes, PS3
Battery Capacity	350 mAh
Wireless Transmission Distance	Up to 8 meters

Feature	Detail
Working Voltage	DC3.7V
Working Current	30 mA
Standby Current	10uA (as per product description, though value seems low for current)
Standby Time	Up to 30 days
Product Dimensions	Approx. 16 x 12 x 6 cm
Product Weight	Approx. 284g / 10oz
UPC	760970458491

IMPORTANT NOTES

- Please read these instructions carefully before using the controller.
- Not all games may be fully compatible or playable with this controller. Game compatibility may vary depending on the platform and game design.
- For optimal performance, ensure your device's operating system is up to date.

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For warranty claims or technical support, please refer to the contact information provided by your retailer or the manufacturer's official website. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the IPEGA official website or contact their customer service. Specific contact details are typically found on the product packaging or the manufacturer's website.

