

Hoover REACTIV RC60

Hoover REACTIV RC60 Bagless Cylinder Vacuum Cleaner User Manual

Model: REACTIV RC60

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the Hoover REACTIV RC60 Bagless Cylinder Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

Important Safety Instructions:

- Always ensure the vacuum cleaner is unplugged from the power supply before cleaning or performing any maintenance.
- Do not use the appliance to pick up water or wet materials, hot ashes, or large, sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the vacuum cleaner with a damaged cord or plug.
- This appliance is for domestic use only.

2. PACKAGE CONTENTS

Carefully unpack your Hoover REACTIV RC60 and ensure all components are present. The package should include:

- Hoover REACTIV RC60 Main Unit
- Flexible Hose
- Telescopic Tube
- Combined Brush for Hard Floors and Carpets
- Parquet Brush (with soft natural bristles)

- Crevice Tool
- Dusting Brush
- Upholstery Nozzle
- Washable EPA Filter (pre-installed)
- User Manual



Image 2.1: Overview of the Hoover REACTIV RC60 vacuum cleaner and its accessories, including the main unit, hose, telescopic tube, and various cleaning tools.

3. SETUP AND ASSEMBLY

Follow these steps to assemble your Hoover REACTIV RC60 vacuum cleaner:

1. **Attach the Flexible Hose:** Insert the flexible hose into the suction inlet on the main unit until it clicks securely into place.
2. **Connect the Telescopic Tube:** Attach the telescopic tube to the handle end of the flexible hose. Adjust the length of the telescopic tube by pressing the release button and sliding it to your desired height.
3. **Attach the Cleaning Tool:** Select the appropriate cleaning tool (e.g., combined brush, parquet brush) and attach it to the end of the telescopic tube. Ensure it is firmly connected.
4. **Power Connection:** Extend the power cord and plug it into a suitable electrical outlet.

CALCUL DE L'INDICE DE RÉPARABILITÉ ET PRÉSENTATION DES PARAMÈTRES AYANT PERMIS DE L'ÉTABLIR		aspirateur filaire			
FICHE D'INFORMATION À TRANSMETTRE AUX DEMANDEURS (cf. Article L. 541-9-2 du Code de l'environnement)					
Date du calcul		07/10/2022			
Nom ou marque commerciale du producteur ou de l'importateur		GROUPE CANDY HOOVER			
Adresse du producteur ou de l'importateur		53, Bld Ornano - 93200 SAINT-DENIS			
Référence du modèle donnée par le producteur ou l'importateur		RC60PET/39001550			
Critère	Sous-critère	Note du sous-critère sur 10	Coefficient du sous-critère	Note du critère sur 20	Total des notes des critères sur 100
CRITÈRE 1 : DOCUMENTATION	1.1 Durée de disponibilité de la documentation technique et relative aux conseils d'utilisation et d'entretien	4,6	2	9,2	55,1
CRITÈRE 2 : DÉMONTABILITÉ, ACCÈS, OUTILS, FIXATIONS	2.1 Facilité de démontage des pièces de la liste 2*	5,6	1	15,6	
	2.2 Outils nécessaires (liste 2)	10,0	0,5		
	2.3 Caractéristiques des fixations entre les pièces de la liste 1** et de la liste 2	10,0	0,5		
CRITÈRE 3 : DISPONIBILITÉ DES PIÈCES DÉTACHÉES	3.1 Durée de disponibilité des pièces de la liste 2	5,2	1	10,3	
	3.2 Durée de disponibilité des pièces de la liste 1	5,2	0,5		
	3.3 Délais de livraison des pièces de la liste 2	5,0	0,3		
	3.4 Délais de livraison des pièces de la liste 1	5,0	0,2		
CRITÈRE 4 : PRIX DES PIÈCES DÉTACHÉES	4. Rapport prix des pièces de la liste 2 sur prix de l'équipement neuf	4,0	2	8,0	
CRITÈRE 5 : CRITÈRE SPÉCIFIQUE	5.1 Assistance à distance sans frais	6,0	2	12,0	
Note de l'indice sur 10					5,5
*liste 2 : liste des 3 à 5 pièces détachées au maximum (selon la catégorie d'équipements concernée) dont la casse ou les pannes sont les plus fréquentes ; **liste 1 : liste de 10 autres pièces détachées au maximum (selon la catégorie d'équipements concernée) dont le bon état est nécessaire au fonctionnement de l'équipement.					

Image 3.1: The Hoover REACTIV RC60 vacuum cleaner fully assembled, ready for use, showcasing the main unit, hose, telescopic tube, and floor brush.

4. OPERATING INSTRUCTIONS

Powering On/Off:

Press the ON/OFF button located on the main unit to start or stop the vacuum cleaner.

Using Different Attachments:

- **Combined Brush:** Use this versatile brush for general cleaning on both hard floors and carpets. Adjust the brush setting if available for optimal performance on different surfaces.
- **Parquet Brush:** The soft natural bristles of the parquet brush are ideal for delicate surfaces like wood and laminate floors, preventing scratches.

- **Crevice Tool:** Perfect for reaching narrow spaces, corners, and edges.
- **Dusting Brush:** Use for cleaning delicate surfaces, curtains, and upholstery.
- **Upholstery Nozzle:** Designed for effective cleaning of sofas, chairs, and other fabric surfaces, including pet hair removal.

The Hoover REACTIV RC60 utilizes cyclonic technology, ensuring consistent suction power and efficient dust separation for thorough cleaning across all surfaces, including carpets.



Image 4.1: The Hoover REACTIV RC60 vacuum cleaner positioned in a modern living room, demonstrating its use in a typical home environment.



Image 4.2: A close-up of the vacuum cleaner's head near a sleeping cat on a sofa, illustrating its suitability for pet hair removal from upholstery.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your Hoover REACTIV RC60.

Emptying the Dust Container:

The 2-liter dust container is designed to collect significant amounts of dust, reducing the frequency of emptying. When the 'MAX' indicator is reached or suction power decreases, it's time to empty the container.

1. Ensure the vacuum cleaner is unplugged.
2. Press the release button to detach the dust container from the main unit.
3. Position the container over a waste bin.
4. Open the bottom flap of the dust container to release the collected dust.
5. Close the flap securely and reattach the dust container to the main unit until it clicks.



Image 5.1: A detailed view of the Hoover REACTIV RC60's dust container, highlighting the 'Easy Empty' feature for convenient disposal of collected debris.



Image 5.2: The dust container of the Hoover REACTIV RC60 shown detached from the main vacuum body, illustrating the ease of removal for emptying.

Cleaning the EPA Filter:

The Hoover REACTIV RC60 is equipped with a washable EPA filter, designed to trap even the finest dust particles. Regular cleaning is crucial for maintaining suction power.

1. Unplug the vacuum cleaner.
2. Remove the dust container as described above.
3. Locate and remove the EPA filter from the dust container assembly.
4. Rinse the filter under lukewarm running water until the water runs clear. Do not use detergents or hot water.
5. Allow the filter to air dry completely for at least 24 hours before reinserting it. Do not use heat to dry the filter.
6. Once dry, reinsert the filter and reattach the dust container.

It is recommended to clean the filter periodically, depending on usage. Replace the filter if it remains discolored or damaged after cleaning.

6. TROUBLESHOOTING

If you encounter issues with your Hoover REACTIV RC60, consult the following table for common problems and solutions:

Problem	Possible Cause	Solution
No power	Not plugged in; power outlet fault; fuse blown	Check power cord connection; test outlet with another appliance; check household fuse/circuit breaker.
Reduced suction power	Dust container full; filter clogged; blockage in hose/tube/brush	Empty dust container; clean EPA filter; check hose, telescopic tube, and brush for obstructions.
Unusual noise	Blockage; foreign object in brush; motor issue	Check for and remove any blockages; inspect brush for foreign objects. If noise persists, contact support.
Dust escaping	Dust container not properly sealed; filter not correctly installed or damaged	Ensure dust container is securely attached; check filter for correct installation and damage.

If the problem persists after attempting these solutions, please contact Hoover customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Hoover
Model Number	REACTIV RC60
Power	450 Watts
Dust Container Capacity	2 Liters
Noise Level	75 Decibels
Filter Type	Washable EPA Filter
Material	Plastic
Dimensions (L x W x H)	45 x 30.7 x 34.7 cm
Item Weight	4.95 Kilograms

Feature	Specification
Power Source	Corded Electric
Special Feature	Bagless
Recommended Surface	Carpet, Hard Floor

8. WARRANTY AND SUPPORT

Spare Parts Availability:




Spare parts for the Hoover REACTIV RC60 are available for a period of 2 years from the date of purchase.

Customer Support:

For any questions, technical assistance, or warranty claims, please contact Hoover customer support. Refer to your purchase documentation or the Hoover official website for specific contact details in your region.

© 2023 Hoover. All rights reserved.

Related Documents - REACTIV RC60

	<p>Hoover MAX Extract Dual V@ All Terrain Carpet and Hard Floor Cleaner Owner's Manual</p> <p>This owner's manual provides operating, servicing, and safety instructions for the Hoover MAX Extract Dual V@ All Terrain Carpet and Hard Floor Cleaner. Learn how to assemble, use, clean, and maintain your Hoover carpet cleaner.</p>
	<p>Hoover 7010PH Prestige Cyclonic Bagless Vacuum Cleaner - User Manual</p> <p>Comprehensive user manual for the Hoover 7010PH Prestige cyclonic bagless vacuum cleaner, covering features, specifications, operation, maintenance, troubleshooting, and warranty information.</p>
	<p>Hoover DUAL POWER MAX PET Carpet Cleaner User Manual</p> <p>Comprehensive user manual for the Hoover DUAL POWER MAX PET Carpet Cleaner, detailing assembly, operation, cleaning, maintenance, troubleshooting, safety instructions, and warranty information. Includes instructions for optimal use and care of the appliance.</p>

