

BOSE AWRCCC

BOSE AWRCCC Wave Music System User Manual

Model: AWRCCC

1. INTRODUCTION

The BOSE AWRCCC Wave Music System is a compact audio system designed to deliver high-quality sound. It integrates a CD player, AM/FM radio tuner, and supports MP3 playback from CD-R/RW discs. This system features advanced Dual Waveguide technology, an evolution of Bose's Acoustic Waveguide, enabling rich, deep bass from a compact unit. All primary functions are controlled via the included remote control, emphasizing a clean, button-free design on the main unit.

2. SETUP

2.1 Unpacking

Carefully remove all components from the packaging. Ensure all items are present: the Wave Music System unit, remote control, and power cord.

2.2 Placement

Place the system on a stable, flat surface. Ensure adequate ventilation around the unit. Avoid placing it near heat sources or in direct sunlight.

2.3 Power Connection

Connect the power cord to the AC POWER input on the rear of the unit, then plug it into a wall outlet. The system is designed with a battery-less 48-hour system backup for settings.



Image: Rear panel of the BOSE AWRCCC Wave Music System, illustrating the AC power input, FM antenna connection, BoseLink port, AUX IN, and Headphone jack.

2.4 Antenna Connection

For optimal FM radio reception, connect the supplied FM antenna to the FM 25Ω ANTENNA port on the rear of the unit.

2.5 Connecting External Devices

- **AUX IN:** Use the AUX IN port (mini plug) on the rear panel to connect external audio sources such as MP3 players or other devices.
- **BoseLink:** The BoseLink terminal is provided for future function expansion and integration with other Bose systems.
- **Headphones:** Connect headphones to the HEADPHONES jack on the rear panel for private listening.

3. OPERATING INSTRUCTIONS

The BOSE AWRCCC Wave Music System is operated exclusively using the included remote control.



Image: Front angled view of the BOSE AWRCCC Wave Music System, showcasing the display and CD slot.

3.1 Power On/Off

Press the **POWER** button on the remote control to turn the system on or off.

3.2 CD Playback

1. Insert a CD (standard audio CD or MP3 CD-R/RW) into the slot-in CD drive. The disc will be automatically loaded.
2. The system will automatically begin playback.
3. Use the **PLAY/PAUSE**, **STOP**, **SKIP**, and **SEARCH** buttons on the remote for control.
4. For MP3 CDs, ID tag information (title, artist, genre) will be displayed on the unit's screen (English alphanumeric characters only).

3.3 AM/FM Radio

1. Press the **RADIO** button on the remote control to switch to radio mode.
2. Use the **TUNE/PRESET** buttons to scan for stations or select saved presets.
3. To save a station as a preset, tune to the desired station, then press and hold a **PRESET NUMBER** button until the display confirms it is saved.

3.4 Volume Control

Adjust the volume using the **VOLUME UP** and **VOLUME DOWN** buttons on the remote control.

3.5 Speech EQ (Talk Mode)

This feature corrects excessive bass in radio sound, optimizing it for speech. Activate or deactivate Speech EQ via the remote control settings.

3.6 Soft Start Alarm Function

When using the timer function for automatic playback (e.g., as an alarm), the Soft Start feature gradually increases the volume to a comfortable level.

4. MAINTENANCE

4.1 Cleaning the Unit

Wipe the exterior of the system with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the finish.

4.2 CD Care

Handle CDs by their edges. Keep discs clean and free of scratches. Store them in their cases when not in use.

4.3 Remote Control Battery

If the remote control's range decreases or it stops responding, replace its batteries. Refer to the remote control's specific instructions for battery type and replacement procedure.

5. TROUBLESHOOTING

If you encounter issues with your Wave Music System, refer to the following common problems and solutions.

Problem	Possible Cause / Solution
No power / System unresponsive	Ensure the power cord is securely connected to both the unit and a working wall outlet. Try a different outlet.
No sound	Check the volume level. Ensure the correct source (CD, Radio, AUX) is selected. If using AUX, check the connection to the external device.
CD not playing / "PLEASE WAIT" displayed	Ensure the CD is inserted correctly and is clean and free of scratches. Try a different CD. The system may take a moment to read the disc.
Poor radio reception	Adjust the position of the FM antenna. Ensure the antenna is fully extended. Move the system away from other electronic devices that may cause interference.
Remote control not working	Check and replace the batteries in the remote control. Ensure there are no obstructions between the remote and the system's sensor.

6. SPECIFICATIONS

- **Model:** BOSE AWRCCC Wave Music System
- **Compatible Devices:** MP3 Player, Speaker, Musical Instrument
- **Connector Type:** AUX (mini plug), RCA (via adapter, if needed), Headphone (mini plug), BoseLink
- **CD Drive:** Slot-in type, supports standard audio CDs and MP3 CD-R/RW
- **Tuner:** AM/FM
- **Audio Technology:** Dual Waveguide
- **Control:** Full-function remote control

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official BOSE website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question